DVD AUDIO/VIDEO SA-CD PLAYER

DVD-S2700

SERVICE MANUAL

IMPORTANT NOTICE

This manual has been provided for the use of authorized YAMAHA Retailers and their service personnel.
It has been assumed that basic service procedures inherent to the industry, and more specifically YAMAHA Products, are already known and understood by the users, and have therefore not been restated.

WARNING: Failure to follow appropriate service and safety procedures when servicing this product may result in personal injury, destruction of expensive components, and failure of the product to perform as specified. For these reasons, we advise all YAMAHA product owners that any service required should be performed by an authorized YAMAHA Retailer or the appointed service representative.

IMPORTANT: The presentation or sale of this manual to any individual or firm does not constitute authorization, certification or recognition of any applicable technical capabilities, or establish a principle-agent relationship of any form.

The data provided is believed to be accurate and applicable to the unit(s) indicated on the cover. The research, engineering, and service departments of YAMAHA are continually striving to improve YAMAHA products. Modifications are, therefore, inevitable and specifications are subject to change without notice or obligation to retrofit. Should any discrepancy appear to exist, please contact the distributor's Service Division.

WARNING: Static discharges can destroy expensive components. Discharge any static electricity your body may have accumulated by grounding yourself to the ground buss in the unit (heavy gauge black wires connect to this buss).

IMPORTANT: Turn the unit OFF during disassembly and part replacement. Recheck all work before you apply power to the unit.

■ CONTENTS

TO SERVICE PERSONNEL 2–4
PREVENTION OF ELECTROSTATIC DISCHARGE 4
LOCALE MANAGEMENT INFORMATION 4
FRONT PANEL 5
REAR PANELS 5–6
REMOTE CONTROL PANEL 7
SPECIFICATIONS / 参考仕様 7
INTERNAL VIEW 8
TRADE MODE / トレードモード 8
ERROR MESSAGE / エラーメッセージ 8
TROUBLESHOOTING / トラブルシュート 8
DISASSEMBLY PROCEDURES / 分解手順..... 9–11
DISPLAY DATA 12
IC DATA 13–31
BLOCK DIAGRAM 32
WIRING DIAGRAM 33
PRINTED CIRCUIT BOARDS..... 34–42
SCHEMATIC DIAGRAMS..... 43–56
REPLACEMENT PARTS LIST 57–59
REMOTE CONTROL..... 60

このサービスマニュアルは、エコマーク認定の再生紙を使用しています。
This Service Manual uses recycled paper.

101038

© 2006 YAMAHA CORPORATION All rights reserved.
This manual is copyrighted by YAMAHA and may not be copied or redistributed either in print or electronically without permission.

YAMAHA CORPORATION
P.O.Box 1, Hamamatsu, Japan
'06.12

■ TO SERVICE PERSONNEL

1. Critical Components Information
   Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
2. Leakage Current Measurement (For 120V Models Only)
   When service has been completed, it is imperative to verify that all exposed conductive surfaces are properly insulated from supply circuits.

- Meter impedance should be equivalent to 1500 ohms shunted by 0.15μF.

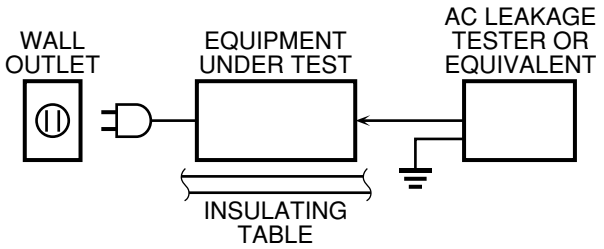

- Leakage current must not exceed 0.5mA.
- Be sure to test for leakage with the AC plug in both polarities.

WARNING: CHEMICAL CONTENT NOTICE!

The solder used in the production of this product contains LEAD. In addition, other electrical/electronic and/or plastic (where applicable) components may also contain traces of chemicals found by the California Health and Welfare Agency (and possibly other entities) to cause cancer and/or birth defects or other reproductive harm.

DO NOT PLACE SOLDER, ELECTRICAL/ELECTRONIC OR PLASTIC COMPONENTS IN YOUR MOUTH FOR ANY REASON WHATSOEVER!

Avoid prolonged, unprotected contact between solder and your skin! When soldering, do not inhale solder fumes or expose eyes to solder/flux vapor!

If you come in contact with solder or components located inside the enclosure of this product, wash your hands before handling food.

About lead free solder / 無鉛ハンダについて

All of the P.C.B.s installed in this unit and solder joints are soldered using the lead free solder.

Among some types of lead free solder currently available, it is recommended to use one of the following types for the repair work.

- Sn + Ag + Cu (tin + silver + copper)
- Sn + Cu (tin + copper)
- Sn + Zn + Bi (tin + zinc + bismuth)

Caution:

As the melting point temperature of the lead free solder is about 30°C to 40°C (50°F to 70°F) higher than that of the lead solder, be sure to use a soldering iron suitable to each solder.

本機に搭載されているすべての基板およびハンダ付けによる接合部は無鉛ハンダでハンダ付けされています。

無鉛ハンダにはいくつかの種類がありますが、修理時には下記のような無鉛ハンダの使用を推奨します。

・Sn+Ag+Cu(錫+銀+銅)
・Sn+Cu(錫+銅)
・Sn+Zn+Bi(錫+亜鉛+ビスマス)

注意：

無鉛ハンダの融点温度は通常の鉛入りハンダに比べ30～40℃程度高くなっていますので、それぞれのハンダに合ったハンダごてをご使用ください。

WARNING: Laser Safety

This product contains a laser beam component. This component may emit invisible, as well as visible radiation, which may cause eye damage. To protect your eyes and skin from laser radiation, the following precautions must be used during servicing of the unit.

1) When testing and/or repairing any component within the product, keep your eyes and skin more than 30 cm away from the laser pick-up unit at all times. Do not stare at the laser beam at any time.

2) Do not attempt to readjust, disassemble or repair the laser pick-up, unless noted elsewhere in this manual.

3) CAUTION : Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Laser Emitting conditions:

1) When the Top Cover is removed, and the STANDBY/ON SW is turned to the "ON" position, the laser component will emit a beam for several seconds to detect if a disc is present. During this time (5-10 sec.) the laser may radiate through the lens of the laser pick-up unit. Do not attempt any servicing during this period!
   If no disc is detected, the laser will stop emitting the beam. When a disc is loaded, you will not be exposed to any laser emissions.
2) The laser power level can be adjusted with the VR on the pick-up PWB, however, this level has been set by the factory prior to shipping from the factory. Do not adjust this laser level control unless instruction is provided elsewhere in this manual. Adjustment of this control can increase the laser emission level from the device.

Laser Diode Properties

Type:	Semiconductor laser GaAlAs
Wave length:	650 nm (DVD)
	790 nm (VCD/CD)
Output Power:	1.45 mW (DVD)
	1.13 mW (VCD/CD)
Beam divergence:	60 degrees

VARO! : AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASER-SÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.

VARNING! : OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.

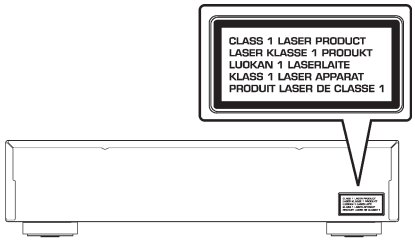

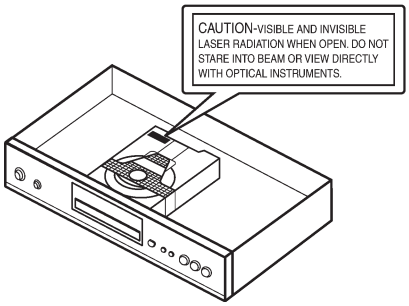
CAUTION-VISIBLE AND INVISIBLE
LASER RADIATION WHEN OPEN. DO NOT
STARE INTO BEAM OR VIEW DIRECTLY
WITH OPTICAL INSTRUMENTS.

CAUTION
VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.

ADVARSEL
SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.

ADVARSEL
SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.

VARNING
SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.

VARO!
AVATTAESSA OLET ALTTIINA NÄKYVÄLLE JA NÄKYMÄTTÖMÄLLE LASER SÄ TEILYLLE. ÄLÄ KATSO SÄTEESEEN.

VORSICHT
SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETSEN.

DANGER
VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.

ATTENTION
RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.

ПРЕДУПРЕЖДЕНИЕ
ПРИ ОТКРЫТИИ УСТРОЙСТВА ВЫ МОЖЕТЕ ПОДВЕРГНУТЬСЯ ВОЗДЕЙСТВИЮ ВИДИМОГО И НЕВИДИМОГО ЛАЗЕРНОГО ИЗЛУЧЕНИЯ. ИЗБЕГАЙТЕ ВОЗДЕЙСТВИЯ ЛУЧА.

Warning for power supply

The primary side of the power supply carries live mains voltage when the player is connected to the mains even when the player is switched off !
This primary area is not shielded so it is possible to touch copper tracks and/or components when servicing the player. Service personnel have to take precautions to prevent touching this area or components in this area.

Note:
The screws on the DVD mechanism may never be touched, removed or re-adjusted.
Handle the DVD mechanism with care when the unit has to be exchanged!
The DVD mechanism is very sensitive for dropping or giving shocks.

■ PREVENTION OF ELECTROSTATIC DISCHARGE

The laser diode in the DVD mechanism may be damaged due to static electricity from clothes or the human body. Use caution to prevent electrostatic damage when servicing or handling the DVD-mechanism.

1. Grounding for electrostatic damage prevention

Some devices, such as the DVD player, use an optical pickup (laser diode) that will be damaged by static electricity in the working environment. Only attempt service after ensuring that all grounding procedures have been completed.

1. Worktable grounding
   Put a grounded conductive material (sheet) or iron sheet on the area where the optical pickup is placed.
2. Human body grounding
   Use an anti-static wrist strap to discharge the static electricity from your body.

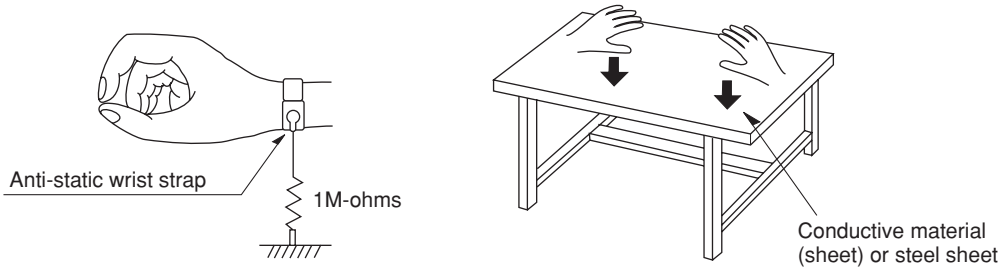

2. Handling Precautions for DVD mechanism

1. Handle the DVD mechanism gently, as it is an extremely high-precision assembly.
2. The flexible cable lines may break if an excessive force is applied to it. Use caution when handling the cable.
3. The semi-fixed resistor for laser power adjustment should not be adjusted. Do not turn the resistor.

■ LOCALE MANAGEMENT INFORMATION

Locale Management Information : This DVD player is designed and manufactured to respond to the Locale Management Information that is recorded on a DVD disc. If the Locale number described on the DVD disc does not correspond to the Locale number of this DVD player, this DVD player cannot play this disc.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

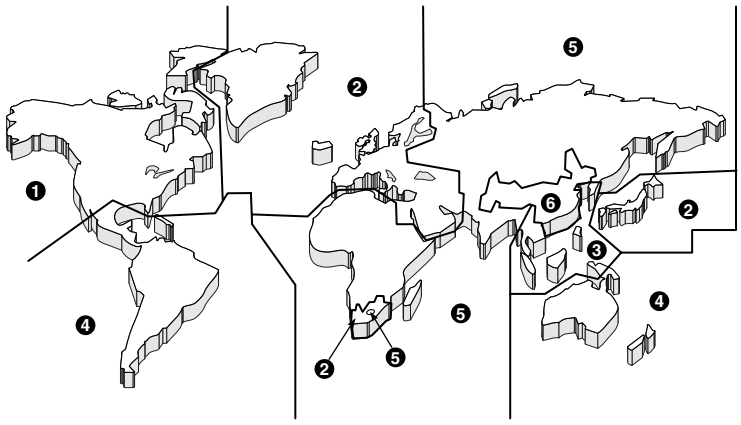

■ FRONT PANEL

U, T, A, G, J models

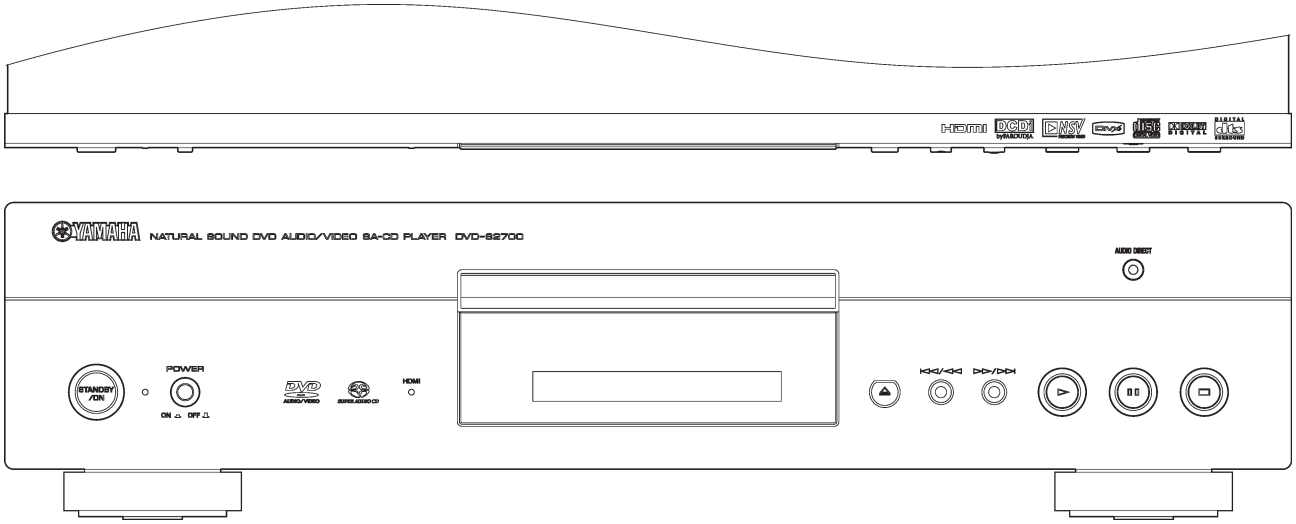

■ REAR PANELS

U model

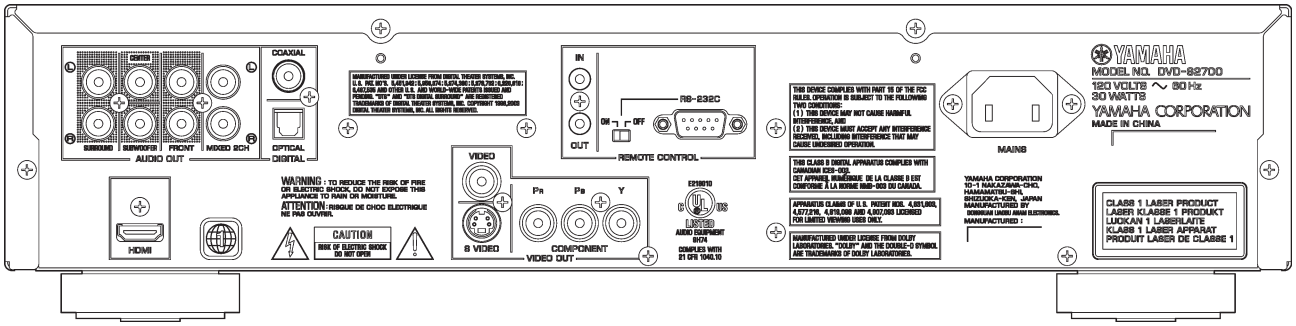

T model

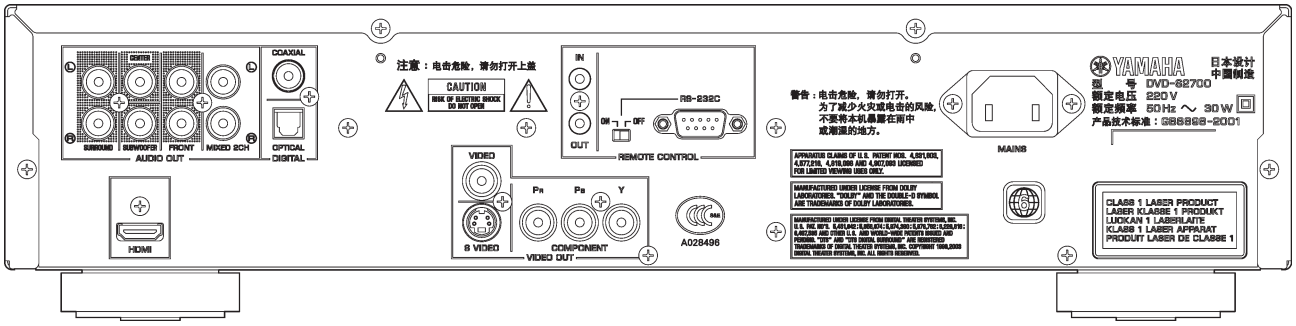

A model

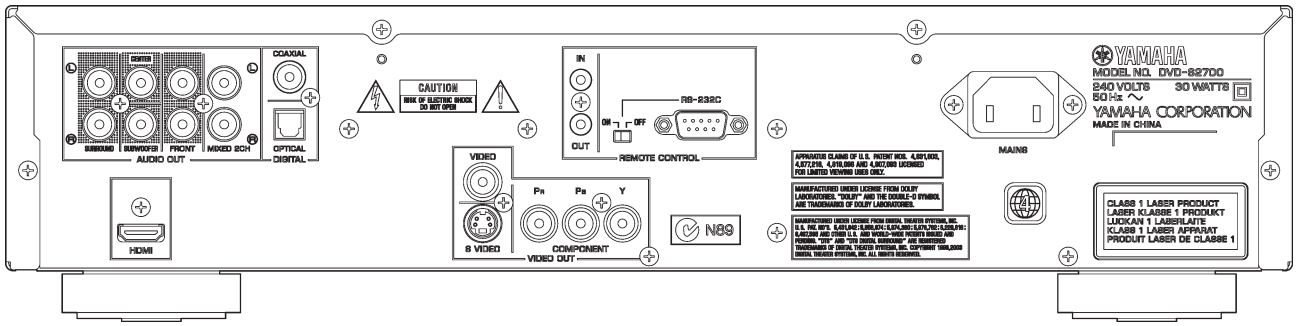

G model

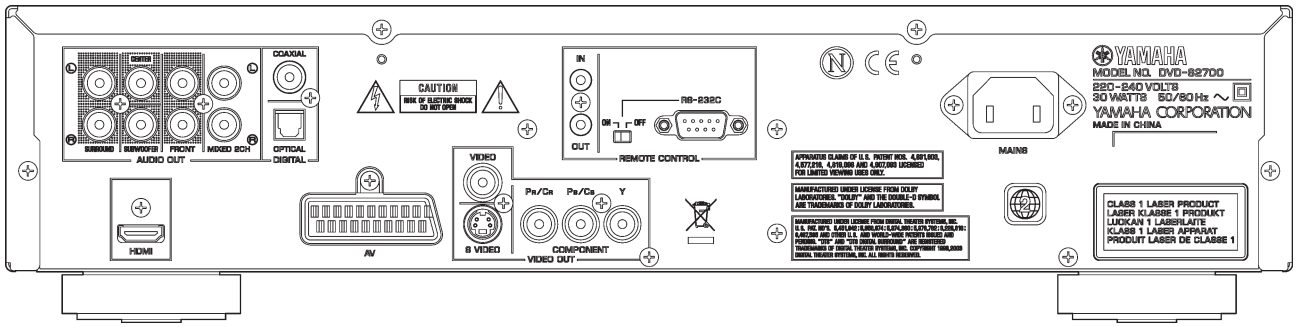

J model

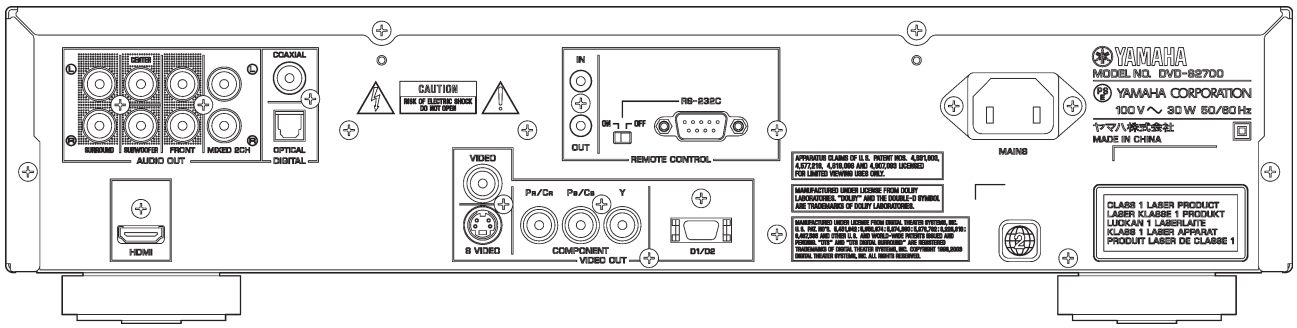

■ REMOTE CONTROL PANEL

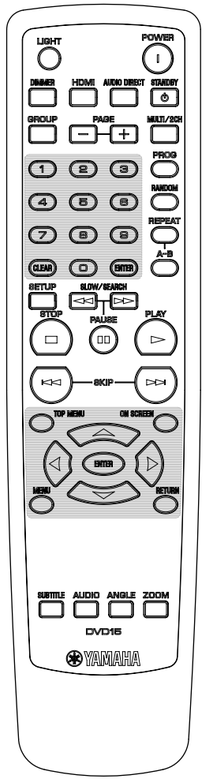

■ SPECIFICATIONS / 参考仕様

PLAYBACK SYSTEM / 対応ディスク

DVD-video
DVD-audio
DVD-R, DVD-RW
DVD+R, DVD+RW, DVD+R DL
Video CD, SVCD
SA-CD multi-channel and SA-CD stereo
CD
Picture CD
CD-R, CD-RW

VIDEO PERFORMANCE / ビデオ部

Video (CVBS) output	1 Vpp into 75 ohms
S-video output	Y: 1 Vpp into 75 ohms
	C: 0.3 Vpp into 75 ohms
D1/D2 output (J model)	Y: 1 Vpp into 75 ohms
	P_B/C_B, P_R/C_R: 0.7 Vpp into 75 ohms
Component video output	Y: 1 Vpp into 75 ohms
	P_B/C_B, P_R/C_R: 0.7 Vpp into 75 ohms
RGB (SCART) output (G model)	
	0.7 Vpp into 75 ohms
Black level shift (U model)	
	On/Off

AUDIO FORMAT / オーディオフォーマット

Digital	Dolby Digital/DTS/MPEG	
		Compressed Digital
	PCM	16, 20, 24 bits
		fs 44.1, 48, 88.2, 96 kHz
	MP3 (ISO 9660)	32 kbps to 320 kbps
		fs 16, 22.05, 24, 32, 44.1, 48 kHz
	WMA	64 kbps to 320 kbps
		mono, stereo

Full decoding of Dolby Digital and DTS multi-channel sound

Analog stereo sound

Dolby surround compatible downmix from Dolby Digital multi-channel sound

AUDIO PERFORMANCE / オーディオ特性

DA converter	24 bits, 192 kHz	
Signal to noise (1 kHz)	120 dB	
Dynamic range (1 kHz)	106 dB	
DVD	fs 96 kHz	2 Hz to 44 kHz
	fs 48 kHz	2 Hz to 22 kHz
SVCD	fs 48 kHz	2 Hz to 22 kHz
	fs 44.1 kHz	2 Hz to 20 kHz
CD/VCD	fs 44.1 kHz	2 Hz to 20 kHz
Distortion and noise (1kHz)		
	0.001 %	

TV STANDARD	(PAL: 50 Hz)	(NTSC: 60 Hz)
Number of lines	625	525
Playback	Multistandard	(PAL/NTSC)

CONNECTIONS / 接続端子

Video output	Cinch (yellow) x 1
S-video output	Mini DIN, 4 pins x 1
D1/D2 output (J model)	1
Component video output	
Y output	Cinch (green) x 1
P_B/C_B output	Cinch (blue) x 1
P_R/C_R output	Cinch (red) x 1
SCART (G model)	Euroconnector x 1
Digital output	Coaxial x 1
	Optical x 1
	IEC60958 for CDDA/LPCM,
	IEC61937 for MPEG 1/2,
	Dolby Digital and DTS
HDMI	Type A x 1
Audio output	
2 channel analog output	
MIXED 2CH L/R	Cinch (white/red) x 1 pair
Multi channel analog output	
FRONT L/R	Cinch (white/red) x 1 pair
SURROUND L/R	Cinch (white/red) x 1 pair
CENTER	Cinch (black) x 1
SUBWOOFER	Cinch (black) x 1

GENERAL / 一般

Dimensions (W x H x D) /	435 x 107 x 308.5 mm
寸法(幅 x 高さ x 奥行き)	(17-1/8" x 4-3/16" x 12-1/8")
Weight / 質量	6.3 Kg (13 lbs. 14 oz)
Finish / 仕上げ	Gold color (J model)
	Black color (U, A, G models)
	Titanium color (T, G models)
Power supply / 電源電圧	AC 120 V, 60 Hz (U model)
	AC 220 V, 50 Hz (T model)
	AC 240 V, 50 Hz (A model)
	AC 220-240 V, 50/60 Hz
	(G model)
	AC 100 V, 50/60 Hz (J model)
Power consumption / 消費電力	Approx. 30 W
Standby power consumption /	< 0.5 W
待機時消費電力	

ACCESSORIES / 付属品

Remote control x 1
Battery (R03) x 2
Power cable (2 m) x 1

**** Specifications are subject to change without prior notice.***
※ 参考仕様および外観は予告なく変更されることがあります。

U ..... USA model
A ..... Australian model
J ..... Japanese model
T ..... Chinese model
G ..... European model

Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.
ドルビーラボラトリーズからの実施権により製造されています。「ドルビー」およびダブルD記号は、ドルビーラボラトリーズの商標です。

“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.
DTSおよびDTS Digital Surroundはデジタルシアターシステムズの登録商標です。

DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.
DivX、DivX Certified、および関連するロゴは、DivX, Inc.の商標です。これらの商標は、DivX, Inc.の使用許諾を得て使用しています。

“DCDi” is a trademark of Faroudja, a division of Genesis Microchip, Inc.
DCDiは、Genesis Microchip Inc.の事業部門であるFaroudjaの商標です。

“HDMI”, the “HDMI” logo and “High Definition Multimedia Interface” are trademarks or registered trademark of HDMI Licensing LLC.
HDMI、HDMIロゴおよびHigh-Definition Multimedia Interfaceは、HDMI Licensing LLCの商標または、登録商標です。

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.
本製品は、著作権保護技術を採用しており、マクロビジョン社及びその他の著作権利者が保有する米国特許及びその他の知的財産権によって保護されています。この著作権保護技術の使用は、マクロビジョン社の許可が必要で、またマクロビジョン社の特別な許可がない限り家庭用及びその他の一部の視聴用の使用に制限されています。分解したり、改造することも禁じられています。

- **DIMENSIONS**

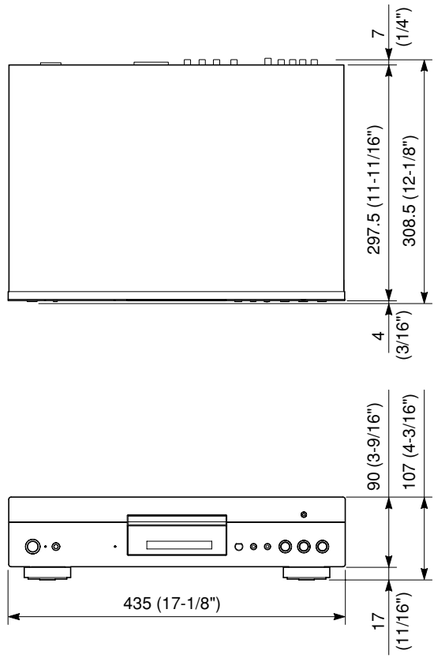

Unit: mm (inch)
単位：mm(インチ)

■ INTERNAL VIEW

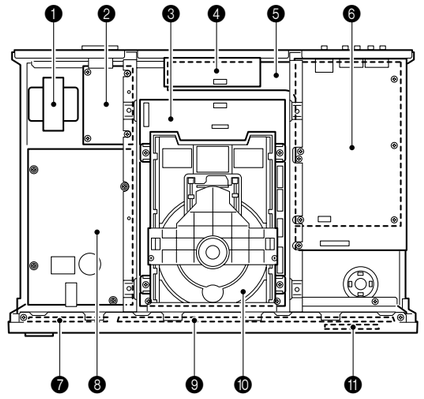

❶ POWER TRANSFORMER
❷ VIDEO (6) P.C.B.
❸ MAIN P.C.B.
❹ VIDEO (5) P.C.B.
❺ VIDEO (1) P.C.B.
❻ AUDIO P.C.B.
❼ VIDEO (4) P.C.B.
❽ POWER SUPPLY UNIT
❾ VIDEO (2) P.C.B.
❿ DVD MECHANISM UNIT
⓫ VIDEO (3) P.C.B.

■ TRADE MODE / トレードモード

In the TRADE mode, the tray open/close function is stopped temporarily.

- **Setting TRADE mode**
  1. Connect the power cable of the main unit to the AC outlet.
  2. Press the “POWER ON/OFF” key of the main unit and press the “STANDBY/ON” key of the main unit or remote controller to turn on the power.
  3. Press the “OPEN/CLOSE” key of the main unit to open the tray.
  4. Place a disc in the tray and open the “OPEN/CLOSE” key of the main unit to close the tray.
  5. While pressing the “SKIP+/SEARCH+” key of the main unit and press the “STOP” key for 3 seconds or longer.
  6. When the TRADE mode is set, [TRADE ON] is displayed which then returns to the normal display.

  Note: Even after the TRADE mode is set, all functions remain the same as normal except the “OPEN/ CLOSE” key.
  Press the “OPEN/CLOSE” key, and [TRAY LOCKED] is displayed.

- **Canceling TRADE mode**
  1. With a disc set in the tray, while pressing the “SKIP+/SEARCH+” key of the main unit and press the “STOP” key for 3 seconds or longer.
  2. When the TRADE mode is cancelled, [TRADE OFF] is displayed which then returns to the normal display.

トレードモードは、トレイのOPEN/CLOSE機能を一時的に停止する機能です。

・トレードモードの起動
1. 本機の電源コードをACコンセントに接続します。
2. 本機の“POWER ON/OFF”キーを押します。次に本機またはリモコンの“STANDBY/ON”キーを押し、電源を入れます。
3. 本機の“OPEN/CLOSE”キーを押し、トレイを開きます。
4. トレイにディスクをセットし、本機の“OPEN/CLOSE”キーを押しトレイを閉じます。
5. 本機の“SKIP+/SEARCH+”キーを押しながら次に“STOP”キーを3秒間以上押し続けます。
6. トレードモードが起動し「TRADE ON」と表示した後、通常の表示に戻ります。

注： トレードモード起動後、“OPEN/CLOSE”キー以外の操作は通常通り行うことができます。
“OPEN/CLOSE”キーを押すと「TRAY LOCKED」と表示されます。

・トレードモードの解除
1. トレイにディスクがセットされている状態で、本機の“SKIP+/SEARCH+”キーを押しながら“STOP”キーを3秒間以上押し続けます。
2. トレードモードが解除され「TRADE OFF」と表示した後、通常の表示に戻ります。

■ ERROR MESSAGE / エラーメッセージ

Display / 表示	Cause / 原因
NO DISC	When no disc is loaded in the tray. / ディスクがトレイにセットされていない場合。
UNKNOWN DISC	When a disc which cannot be played or recognized is loaded in the tray. / 再生できない、または認識できないディスクがトレイにセットされている場合。

■ TROUBLESHOOTING / トラブルシュート

- **HDMI Reset**
  When no picture is displayed even though the main unit and TV monitor are connected with the HDMI cable
  1. Press the “STOP” key of the main unit or on the remote control twice.
  2. While pressing the “STOP” key of the main unit, press the “PLAY” key for 3 seconds or longer.
  3. [HDMI RESE] is displayed of the main unit which then returns to the normal display.

- **VIDEO Reset**
  When no picture is displayed or picture is displayed but not properly even though the main unit and TV monitor are connected with the video pin cable or the like
  1. Press the “EJECT” key to open the tray.
  2. Press the “CLEAR” key on the remote control.
  3. Press the “2”, “5”, “8” and “0” keys on the remote control.
  4. Press the “AUDIO” key on the remote control.

・HDMIリセット
本機とTVモニターをHDMIケーブルで接続しても映像が表示されない場合
1. 本機の“STOP”キーまたは、リモコンの“STOP”キーを2回押します。
2. 本機の“STOP”キーを押しながら“PLAY”キーを3秒間以上押し続けます。
3. 本機のディスプレイに「HDMI RESET」と表示した後、通常の表示に戻ります。

・ビデオリセット
本機とTVモニターを映像ピンケーブルなどで接続しても映像が表示されない、または映像が正しく表示されない場合
1. 本機の“EJECT”キーを押してトレイを開きます。
2. リモコンの“CLEAR”キーを押します。
3. リモコンの“2”、“5”、“8”、“0”キーを押します。
4. リモコンの“AUDIO”キーを押します。

Main unit / 本機

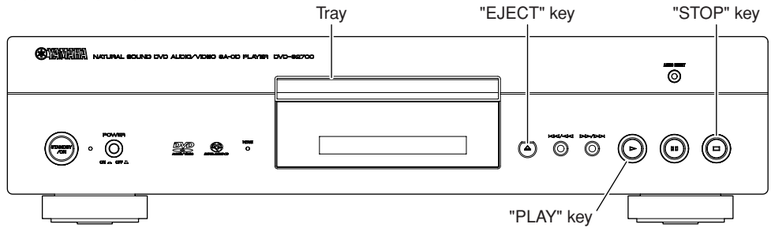

Remote control / リモコン

■ DISASSEMBLY PROCEDURES / 分解手順

(Remove parts in disassembly order as numbered.)
Disconnect the power cable from the AC outlet.

（番号順に部品を取り外してください）
AC電源コンセントから、電源コードを抜いてください。

1. Removal of Top Cover

a. Remove 4 screws (①), 4 screws (②) and 4 screws (③). (Fig. 1)
b. Lift up the rear side of the top cover, then remove rearward. (Fig. 1)

1.トップカバーの外し方

a. ①のネジ4本、②のネジ4本、③のネジ4本を外します。(Fig. 1)
b. トップカバーの後側を持ち上げ後方へ取り外します。(Fig. 1)

2. Removal of Front Panel Ass'y

a. Eject the tray. (See "How to manually eject the tray")
b. Remove the tray cover ass'y and close the tray. (Fig. 1)
c. Remove 5 screws (④), 2 screws (⑤) and 2 screws (⑥). (Fig. 1)
d. Remove 4 screws (⑦). (Fig. 2)
e. Remove the front panel ass'y forward. (Fig. 1)
f. Remove CX11. (Fig. 1)

2. フロントパネルASS'Yの外し方

a. トレイを開きます。("手動でトレイを開く方法"を参照)
b. トレイカバーASS'Yを外し、トレイを閉じます。(Fig. 1)
c. ④のネジ5本、⑤のネジ2本、⑥のネジ2本を外します。(Fig. 1)
d. ⑦のネジ4本を外します。 (Fig. 2)
e. フロントパネルASS'Yを前方へ取り外します。(Fig. 1)
f. CX11を外します。(Fig. 1)

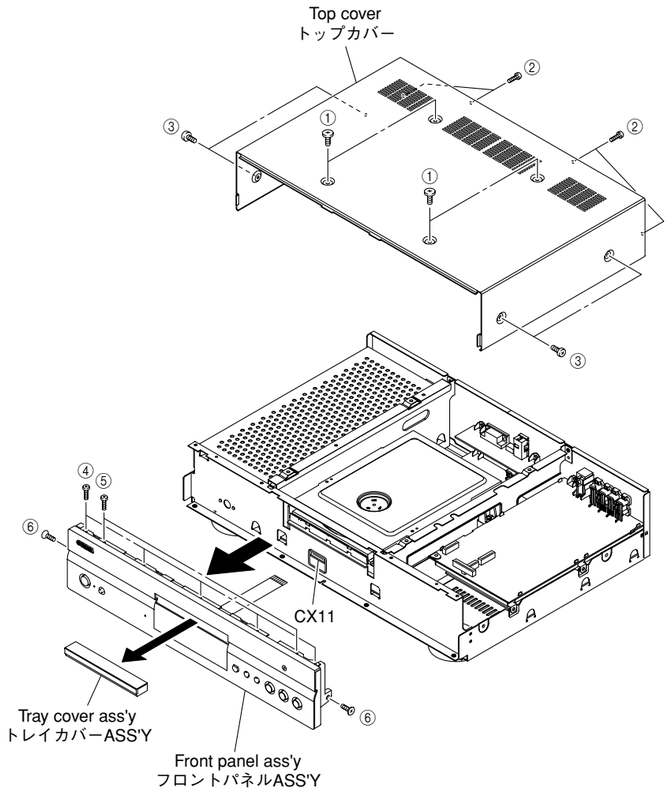

Fig. 1

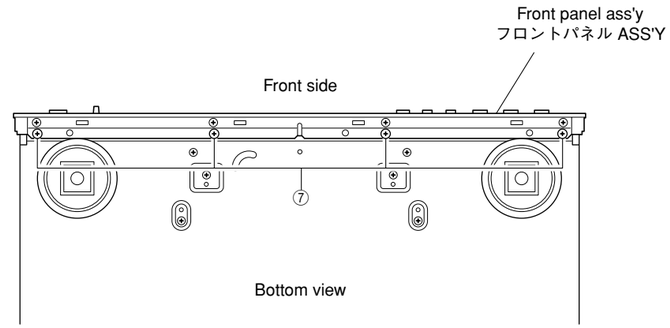

Fig. 2

- **How to manually eject the tray / 手動でトレイを開く方法**

a. Turn the loading gear in the direction indicated with a flatblade screwdriver until the tray is ejected.
b. Gently pull the tray out.

a. トレイが出てくるまで、マイナスドライバーでローディングギアを図に示す矢印の方向に回転します。
b. トレイをそっと引き出します。

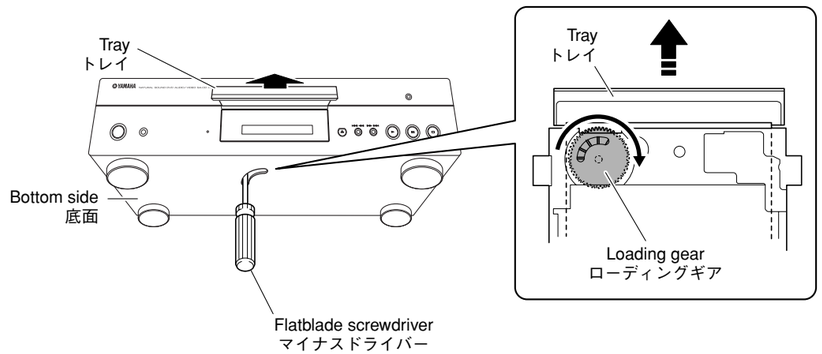

3. Removal of DVD Mechanism Unit

a. Remove 4 screws (⑧). (Fig. 3)
b. Unlock CX16 and then disconnect the flexible flat cable, and ground the terminal face of the flexible flat cable with a clip or the like. (Fig. 3)
c. Remove CN13 and CN14. (Fig. 6)
d. Lift DVD mechanism unit up slightly and move it backward to remove. (Fig. 3)

3. DVDメカユニットの外し方

a. ⑧のネジ4本を外します。(Fig. 3)
b. CX16のロックを解除してカード電線を外します。次に外したカード電線の端子面をクリップ等でアースします。(Fig. 3)
c. CN13、CN14を外します。(Fig. 6)
d. DVDメカユニットを少し持ち上げて、後方へ取り外します。(Fig. 3)

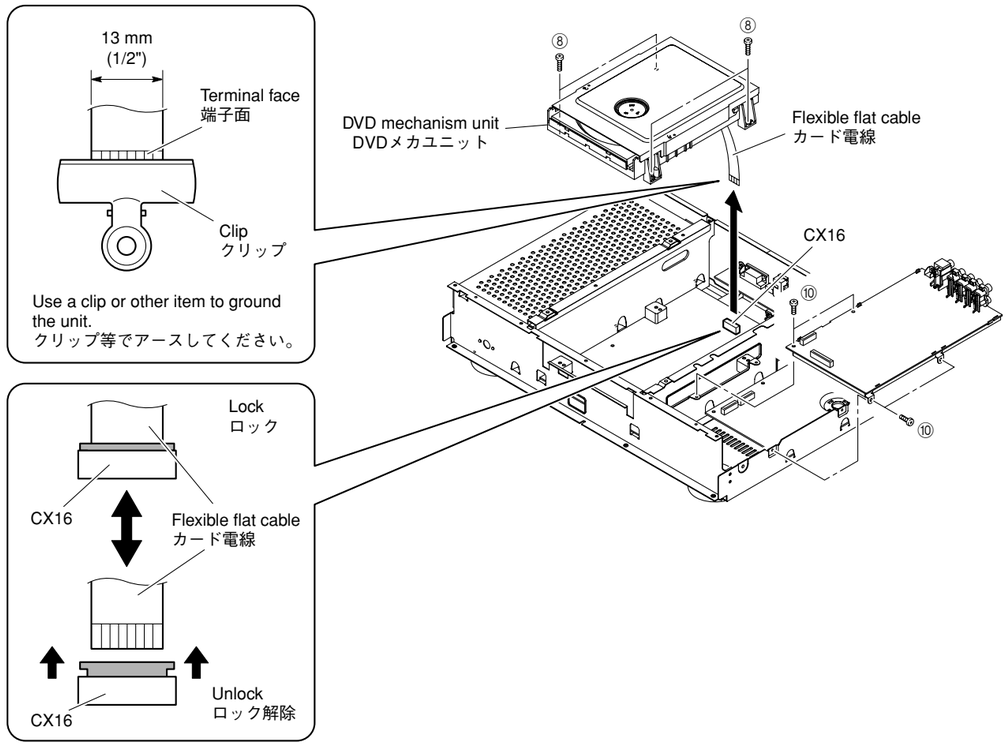

Fig. 3

4. Electrostatic Protection of DVD Mechanism Unit

a. Remove 2 screws (⑨). (Fig. 4)
b. Lift the front of the cover DVD mechanism unit a little and slide it to release the hook. Then lift the rear of the cover DVD mechanism unit and remove it rearward. (Fig. 4)
c. Turn the traverse gear in the arrow direction until the P.C.B. of the DVD mechanism unit is seen. (Fig. 5)
d. Solder the lands in the P.C.B. of the DVD mechanism unit with the anti-static soldering iron. (Fig. 5)

Note

- **After you have finished repairing, remove the solder from the short-circuit location with the anti-static soldering iron.**

4. DVDメカユニットの静電気対策

a. ⑨のネジ2本を外します。(Fig. 4)
b. DVDメカユニットカバーの前側を少し持ち上げ、スライドさせてフックを外します。次に、DVDメカユニットカバーの後側を持ち上げ後方へ取り外します。(Fig. 4)
c. DVDメカユニットのP.C.B.が見えるまでトラバースギアを矢印の方向に回転します。(Fig. 5)
d. DVDメカユニットのP.C.B.上の端子間を静電気対策はんだこてを使用してショートします。(Fig. 5)

注意

- **修理終了時は、静電気対策はんだこてを使用してショート箇所からはんだを除去します。**

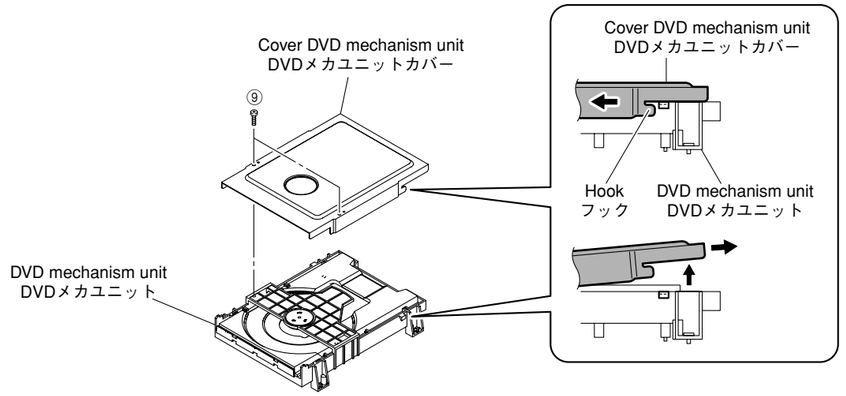

Fig. 4

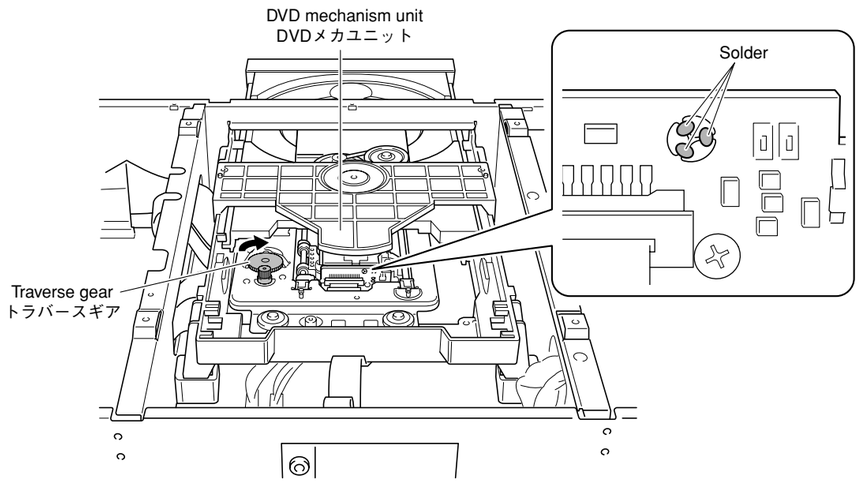

Fig. 5

5. Removal of AUDIO P.C.B.

a. Remove 4 screws (⑩). (Fig. 3)
b. Remove 3 screws (⑪) and 1 screw (⑫). (Fig. 7)
c. Remove CY11, CY12 and CN12. (Fig. 6)
d. Lift the front of the AUDIO P.C.B. and slide to remove it. (Fig. 6)

5. AUDIO P.C.B.の外し方

a. ⑩ネジ4本を外します。(Fig. 3)
b. ⑪のネジ3本、⑫のネジ1本を外します。(Fig. 7)
c. CY11、CY12、CN12を外します。(Fig. 6)
d. AUDIO P.C.B.の前側を持ち上げスライドさせ取り外します。(Fig. 6)

6. Removal of VIDEO (5) P.C.B.

a. Remove 1 scerw (⑬), 2 screws (⑭) and 2 jack screws (⑮). (Fig. 7)
b. Remove CY16. (Fig. 8)
c. Remove VIDEO (5) P.C.B.. (Fig. 8)

6. VIDEO(5)P.C.B.の外し方

a. ⑬のネジ1本、⑭のネジ2本、⑮のジャックスクリュー2本を外します。(Fig. 7)
b. CY16を外します。(Fig. 8)
c. VIDEO(5)P.C.B.を取り外します。(Fig. 8)

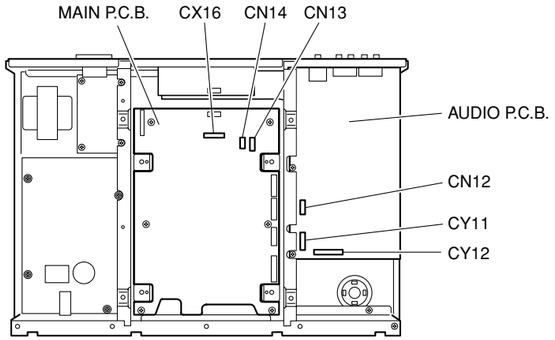

Fig. 6

7. Removal of MAIN P.C.B.

a. Remove 6 screws (⑯). (Fig. 8)
b. Remove CN11, CX12 and CX13. (Fig. 8)
c. Remove MAIN P.C.B.. (Fig. 8)

7. MAIN P.C.B.の外し方

a. ⑯のネジ6本を外します。(Fig. 8)
b. CN11、CX12、CX13を外します。(Fig. 8)
c. MAIN P.C.B.を取り外します。(Fig. 8)

8. Removal of VIDEO (1) P.C.B.

a. Remove 5 screws (⑰). (Fig. 8)
b. Remove 1 screw (⑱) and 2 (U, T, A models)/3 (G model) screws (⑲). (Fig. 7)
c. Remove CN15. (Fig. 8)
d. Remove VIDEO (1) P.C.B.. (Fig. 8)

8. VIDEO(1)P.C.B.の外し方

a. ⑰のネジ5本を外します。(Fig. 8)
b. ⑱のネジ1本、⑲のネジ3本を外します。(Fig. 7)
c. CN15を外します。(Fig. 8)
d. VIDEO(1) P.C.B.を取り外します。(Fig. 8)

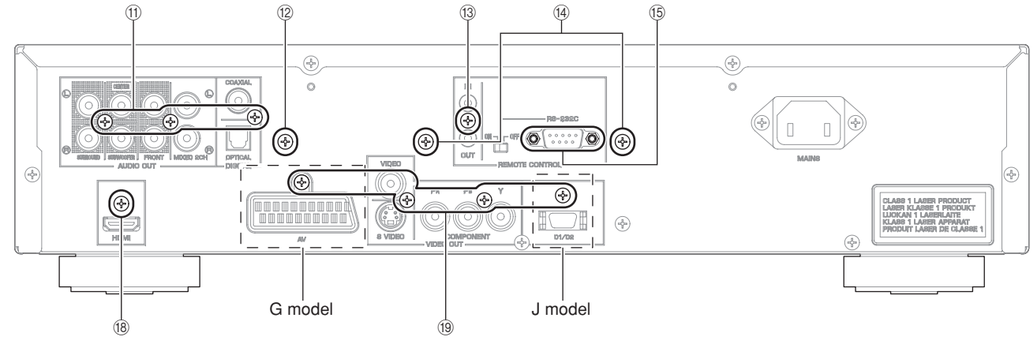

Fig. 7

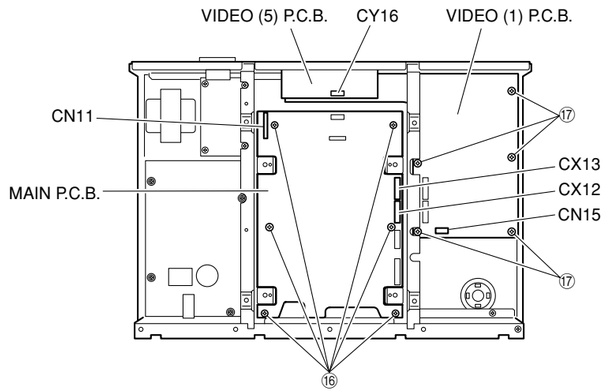

Fig. 8

■ DISPLAY DATA

● F401 : HCA14SM16 (AAX80850)

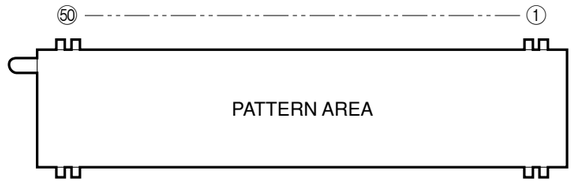

● PIN CONNECTION

Pin No.	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26
Connection	F2	F2	NP	NP	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX	NX

Pin No.	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Connection	NX	NX	NX	NX	NX	NX	NX	NX	NX	1G	NC	GR1	V_{DD}	DIN	CLKB	CSB	RSTB	OSCO	OSCI	V_{EE}	GND	NP	NP	F1	F1

Note : 1) F1, F2 ..... Filament pin 2) NP ..... No pin 3) NC ..... No connection 4) NX ..... No extended pin

● GRID ASSIGNMENT

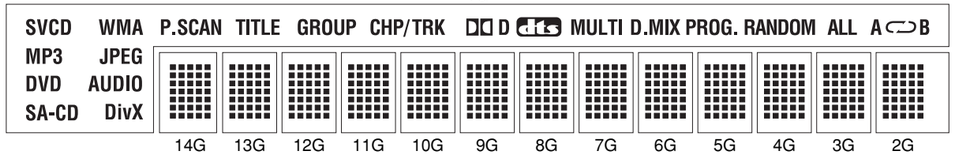
1G
SVCD WMA P.SCAN TITLE GROUP CHP/TRK D D MULTI D.MIX PROG. RANDOM ALL A B
MP3 JPEG
DVD AUDIO
SA-CD DivX
14G 13G 12G 11G 10G 9G 8G 7G 6G 5G 4G 3G 2G

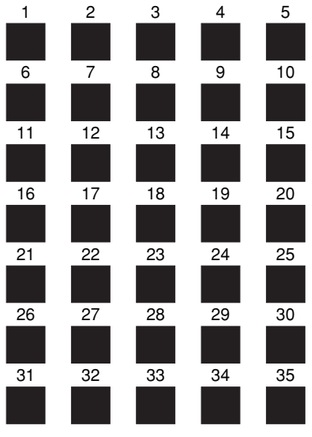

(2G-14G)

● ANODE CONNECTION

	GR14	GR13	GR12	GR11	GR10	GR9	GR8	GR7	GR6	GR5	GR4	GR3	GR2	GR1
	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
SG1	1	1	1	1	1	1	1	1	1	1	1	1	1	B
SG2	2	2	2	2	2	2	2	2	2	2	2	2	2	↻
SG3	3	3	3	3	3	3	3	3	3	3	3	3	3	A
SG4	4	4	4	4	4	4	4	4	4	4	4	4	4	ALL
SG5	5	5	5	5	5	5	5	5	5	5	5	5	5	RANDOM
SG6	6	6	6	6	6	6	6	6	6	6	6	6	6	PROG.
SG7	7	7	7	7	7	7	7	7	7	7	7	7	7	D.MIX
SG8	8	8	8	8	8	8	8	8	8	8	8	8	8	MULTI
SG9	9	9	9	9	9	9	9	9	9	9	9	9	9	
SG10	10	10	10	10	10	10	10	10	10	10	10	10	10	dts
SG11	11	11	11	11	11	11	11	11	11	11	11	11	11	D D
SG12	12	12	12	12	12	12	12	12	12	12	12	12	12	CHP/TRK
SG13	13	13	13	13	13	13	13	13	13	13	13	13	13	GROUP
SG14	14	14	14	14	14	14	14	14	14	14	14	14	14	TITLE
SG15	15	15	15	15	15	15	15	15	15	15	15	15	15	P.SCAN
SG16	16	16	16	16	16	16	16	16	16	16	16	16	16	WMA
SG17	17	17	17	17	17	17	17	17	17	17	17	17	17	JPEG
SG18	18	18	18	18	18	18	18	18	18	18	18	18	18	AUDIO
SG19	19	19	19	19	19	19	19	19	19	19	19	19	19	CD
SG20	20	20	20	20	20	20	20	20	20	20	20	20	20	V
SG21	21	21	21	21	21	21	21	21	21	21	21	21	21	S
SG22	22	22	22	22	22	22	22	22	22	22	22	22	22	MP3
SG23	23	23	23	23	23	23	23	23	23	23	23	23	23	DVD
SG24	24	24	24	24	24	24	24	24	24	24	24	24	24	DivX
SG25	25	25	25	25	25	25	25	25	25	25	25	25	25	SA-CD
SG26	26	26	26	26	26	26	26	26	26	26	26	26	26	
SG27	27	27	27	27	27	27	27	27	27	27	27	27	27	
SG28	28	28	28	28	28	28	28	28	28	28	28	28	28	
SG29	29	29	29	29	29	29	29	29	29	29	29	29	29	
SG30	30	30	30	30	30	30	30	30	30	30	30	30	30	
SG31	31	31	31	31	31	31	31	31	31	31	31	31	31	
SG32	32	32	32	32	32	32	32	32	32	32	32	32	32	
SG33	33	33	33	33	33	33	33	33	33	33	33	33	33	
SG34	34	34	34	34	34	34	34	34	34	34	34	34	34	
SG35	35	35	35	35	35	35	35	35	35	35	35	35	35	

■ IC DATA

IC11: FLI2310LFCF (VIDEO P.C.B.)
Digital video converter

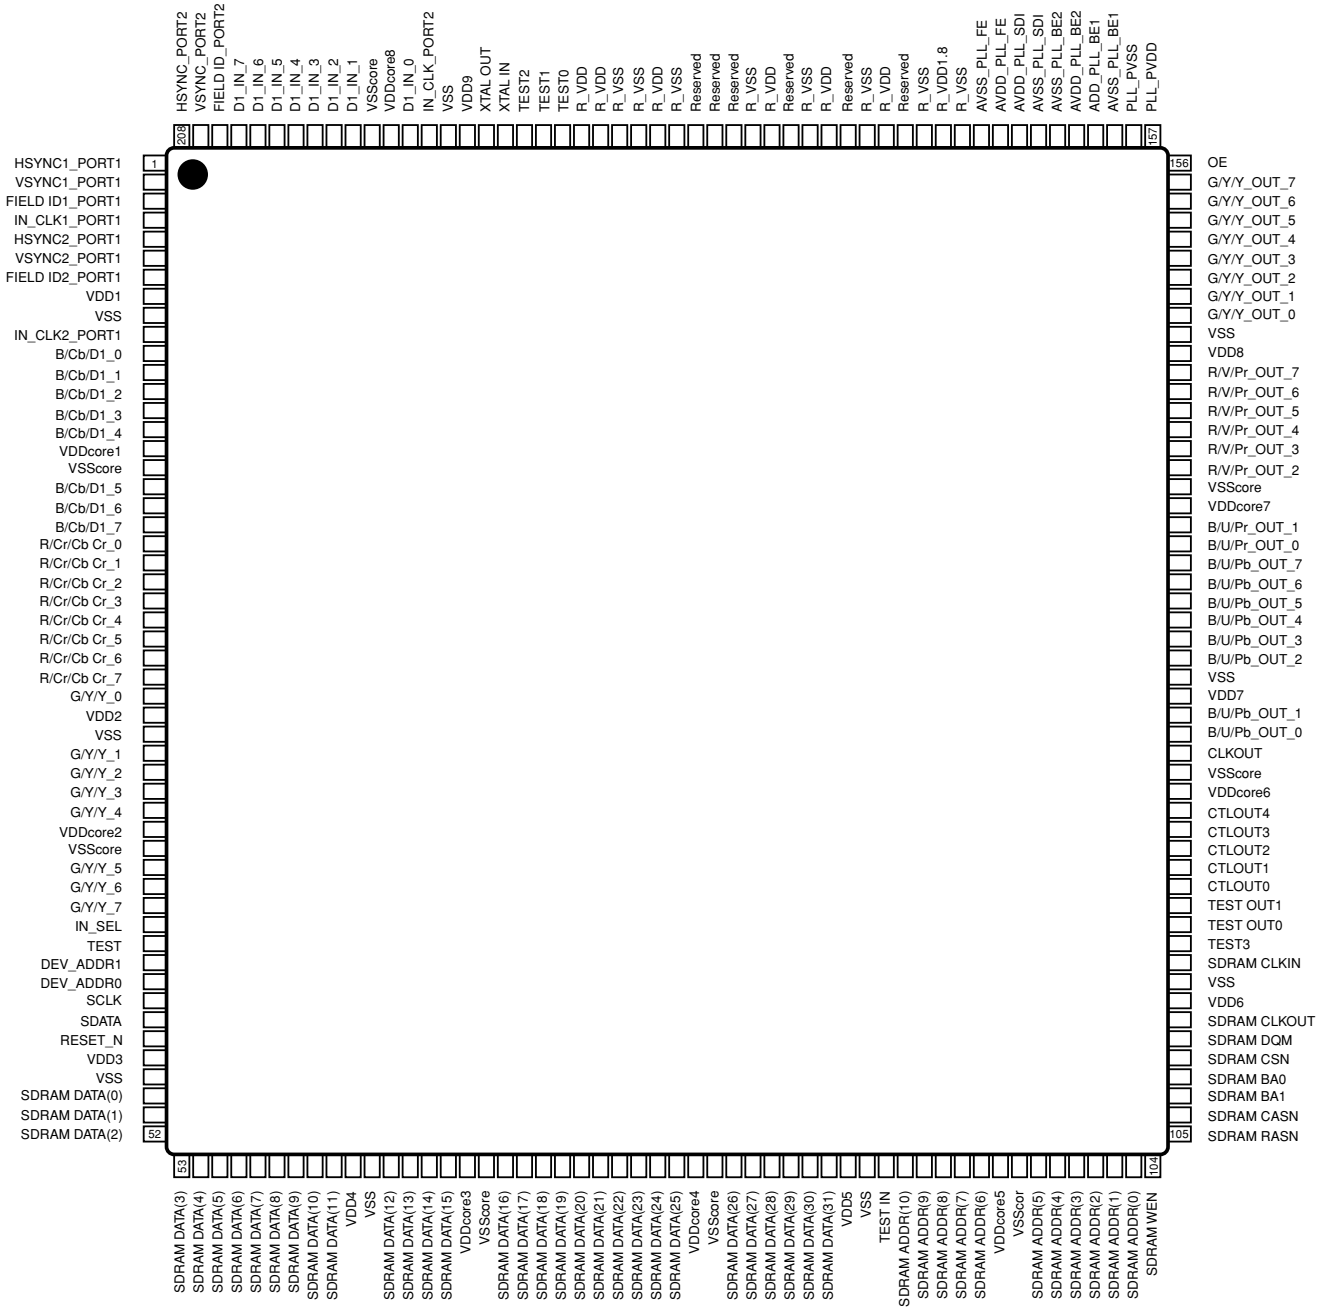

NOTES:

1) *-The connection of these pins depends on the type of external SDRAM used. See Appendix 3
2) For 16/20 bit Y and muxed C output modes see Appendix 2 for pin configuration

No.	Pin Name	I/O Type	Voltage Tolerance	Drive	Internal Pull-up/ Pull-down	Description
1	HSYNC1_PORT1	Input	5v			Horizontal sync or reference - CTI1 of Port 1
2	VSYNC1_PORT1	Input	5v			Vertical sync or reference - CTL1 of Port 1
3	FIELD ID1_PORT1	Input	5v			Odd/Even field identification - CTL1 of Port 1
4	IN_CLK1_PORT1	Input	5v			Data clock input - CTL1 of Port 1
5	HSYNC2_PORT1	Input	5v			Horizontal sync or reference - CTI2 of Port 1
6	VSYNC2_PORT1	Input	5v			Vertical sync or reference - CTL2 of Port 1
7	FIELD ID2_PORT1	Input	5v			Odd/Even field identification - CTL2 of Port 1
8	VDD1	Power				3.3 V - Power pin for IO
9	VSS	Ground				Ground
10	IN_CLK2_PORT1	Input	5v			Data clock input - CTL2 of Port 1
11	B/Cb/D1_0	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
12	B/Cb/D1_1	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
13	B/Cb/D1_2	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
14	B/Cb/D1_3	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
15	B/Cb/D1_4	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
16	VDDcore1	Power				1.8 V - Power pin for core
17	VSScore	Ground				Ground
18	B/Cb/D1_5	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
19	B/Cb/D1_6	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
20	B/Cb/D1_7	Input	5v			Port 1 - Digital video input (Blue/Cb/D1)
21	R/Cr/Cb Cr_0	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
22	R/Cr/Cb Cr_1	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
23	R/Cr/Cb Cr_2	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
24	R/Cr/Cb Cr_3	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
25	R/Cr/Cb Cr_4	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
26	R/Cr/Cb Cr_5	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
27	R/Cr/Cb Cr_6	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
28	R/Cr/Cb Cr_7	Input	5v			Port 1 - Digital video input (Red/Cr/CrCb)
29	G/Y/Y_0	Input	5v			Port 1 - Digital video input (Green/Y)
30	VDD2	Power				3.3 V - Power pin for IO
31	VSS	Ground				Ground
32	G/Y/Y_1	Input	5v			Port 1 - Digital video input (Green/Y)
33	G/Y/Y_2	Input	5v			Port 1 - Digital video input (Green/Y)
34	G/Y/Y_3	Input	5v			Port 1 - Digital video input (Green/Y)
35	G/Y/Y_4	Input	5v			Port 1 - Digital video input (Green/Y)
36	VDDcore2	Power				1.8 V - Power pin for core
37	VSScore	Ground				Ground
38	G/Y/Y_5	Input	5v			Port 1 - Digital video input (Green/Y)
39	G/Y/Y_6	Input	5v			Port 1 - Digital video input (Green/Y)
40	G/Y/Y_7	Input	5v			Port 1 - Digital video input (Green/Y)
41	IN_SEL	Output	5v	8mA		Output to select external video mux
42	TEST	Input	5v			Connect to ground
43	DEV_ADDR1	Input	5v			Device address setting 1
44	DEV_ADDR0	Input	5v			Device address setting 0
45	SCLK	I/O	5v	8mA		2-wire serial control bus clock
46	SDATA	I/O	5v	8mA		2-wire serial control bus data
47	RESET_N	Input	5v		PU	Reset
48	VDD3	Power				3.3 V - Power pin for IO
49	VSS	Ground				Ground
50	SDRAM DATA(0)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
51	SDRAM DATA(1)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
52	SDRAM DATA(2)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
53	SDRAM DATA(3)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
54	SDRAM DATA(4)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
55	SDRAM DATA(5)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
56	SDRAM DATA(6)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
57	SDRAM DATA(7)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
58	SDRAM DATA(8)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
59	SDRAM DATA(9)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
60	SDRAM DATA(10)	Tristate I/O	5v	4mA	PD	SDRAM data bus *

No.	Pin Name	I/O Type	Voltage Tolerance	Drive	Internal Pull-up/ Pull-down	Description
61	SDRAM DATA(11)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
62	VDD4	Power				3.3 V - Power pin for IO
63	VSS	Ground				Ground
64	SDRAM DATA(12)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
65	SDRAM DATA(13)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
66	SDRAM DATA(14)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
67	SDRAM DATA(15)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
68	VDDcore3	Power				1.8 V - Power pin for core
69	VSScore	Ground				Ground
70	SDRAM DATA(16)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
71	SDRAM DATA(17)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
72	SDRAM DATA(18)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
73	SDRAM DATA(19)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
74	SDRAM DATA(20)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
75	SDRAM DATA(21)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
76	SDRAM DATA(22)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
77	SDRAM DATA(23)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
78	SDRAM DATA(24)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
79	SDRAM DATA(25)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
80	VDDcore4	Power				1.8 V - Power pin for core
81	VSScore	Ground				Ground
82	SDRAM DATA(26)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
83	SDRAM DATA(27)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
84	SDRAM DATA(28)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
85	SDRAM DATA(29)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
86	SDRAM DATA(30)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
87	SDRAM DATA(31)	Tristate I/O	5v	4mA	PD	SDRAM data bus *
88	VDD5	Power				3.3 V - Power pin for IO
89	VSS	Ground				Ground
90	TEST IN	Input	5v			Test input - Connect to ground
91	SDRAM ADDR(10)	Tristate O/P	5v	8mA		SDRAM address bus *
92	SDRAM ADDR(9)	Tristate O/P	5v	8mA		SDRAM address bus *
93	SDRAM ADDR(8)	Tristate O/P	5v	8mA		SDRAM address bus *
94	SDRAM ADDR(7)	Tristate O/P	5v	8mA		SDRAM address bus *
95	SDRAM ADDR(6)	Tristate O/P	5v	8mA		SDRAM address bus *
96	VDDcore5	Power				1.8 V - Power pin for core
97	VSScor	Ground				Ground
98	SDRAM ADDR(5)	Tristate O/P	5v	8mA		SDRAM address bus *
99	SDRAM ADDR(4)	Tristate O/P	5v	8mA		SDRAM address bus *
100	SDRAM ADDR(3)	Tristate O/P	5v	8mA		SDRAM address bus *
101	SDRAM ADDR(2)	Tristate O/P	5v	8mA		SDRAM address bus *
102	SDRAM ADDR(1)	Tristate O/P	5v	8mA		SDRAM address bus *
103	SDRAM ADDR(0)	Tristate O/P	5v	8mA		SDRAM address bus *
104	SDRAM WEN	Tristate O/P	5v	8mA		SDRAM write enable *
105	SDRAM RASN	Tristate O/P	5v	8mA		SDRAM row address select *
106	SDRAM CASN	Tristate O/P	5v	8mA		SDRAM column address select *
107	SDRAM BA1	Tristate O/P	5v	8mA		SDRAM bank select 1 *
108	SDRAM BA0	Tristate O/P	5v	8mA		SDRAM bank select 0 *
109	SDRAM CSN	Tristate O/P	5v	4mA		SDRAM CS *
110	SDRAM DQM	Tristate O/P	5v	8mA		SDRAM DQM *
111	SDRAM CLKOUT	Output	5v	12mA		Clock out to SDRAM *
112	VDD6	Power				3.3 V - Power pin for IO
113	VSS	Ground				Ground
114	SDRAM CLKIN	Input	5v			Trace delayed SDRAM clock in
115	TEST3	Input				Test input -Connect to ground
116	TEST OUT0	Output		12mA		Test output - Leave open
117	TEST OUT1	Output		8mA		Test output - Leave open
118	CTLOUT0	Tristate O/P	5v	8mA		Control signal output selectable as HSync1/ CSync/HRef/Monitor coast
119	CTLOUT1	Tristate O/P	5v	8mA		Control signal output selectable as

No.	Pin Name	I/O Type	Voltage Tolerance	Drive	Internal Pull-up/ Pull-down	Description
						VSync1/CRef/VRef/Film indicator
120	CTLOUT2	Tristate O/P	5v	8mA		Control signal output selectable as monitor Coast/HRef/VDD_en/HSync2
121	CTLOUT3	Tristate O/P	5v	8mA		Control signal output selectable as film Indicator/VRef/Backlight_en/VSync2
122	CTLOUT4	Tristate O/P	5v	8mA		Control signal output selectable as CRef/Field ID/CSync/Monitor coast
123	VDDcore6	Power				1.8 V - Power pin for core
124	VSScore	Ground				Ground
125	CLKOUT	Tristate O/P	5v	12mA		Output data rate clock
126	B/U/Pb_OUT_0	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
127	B/U/Pb_OUT_1	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
128	VDD7	Power				3.3 V - Power pin for IO
129	VSS	Ground				Ground
130	B/U/Pb_OUT_2	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
131	B/U/Pb_OUT_3	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
132	B/U/Pb_OUT_4	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
133	B/U/Pb_OUT_5	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
134	B/U/Pb_OUT_6	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
135	B/U/Pb_OUT_7	Tristate O/P	5v	8mA		Digital video output - Blue/U/Pb
136	B/U/Pr_OUT_0	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
137	B/U/Pr_OUT_1	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
138	VDDcore7	Power				1.8 V - Power pin for core
139	VSScore	Ground				Ground
140	R/V/Pr_OUT_2	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
141	R/V/Pr_OUT_3	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
142	R/V/Pr_OUT_4	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
143	R/V/Pr_OUT_5	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
144	R/V/Pr_OUT_6	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
145	R/V/Pr_OUT_7	Tristate O/P	5v	8mA		Digital video output - Red/V/Pr
146	VDD8	Power				3.3 V - Power pin for IO
147	VSS	Ground				Ground
148	G/Y/Y_OUT_0	Tristate O/P	5v	8mA		Digital video output - Green/Y
149	G/Y/Y_OUT_1	Tristate O/P	5v	8mA		Digital video output - Green/Y
150	G/Y/Y_OUT_2	Tristate O/P	5v	8mA		Digital video output - Green/Y
151	G/Y/Y_OUT_3	Tristate O/P	5v	8mA		Digital video output - Green/Y
152	G/Y/Y_OUT_4	Tristate O/P	5v	8mA		Digital video output - Green/Y
153	G/Y/Y_OUT_5	Tristate O/P	5v	8mA		Digital video output - Green/Y
154	G/Y/Y_OUT_6	Tristate O/P	5v	8mA		Digital video output - Green/Y
155	G/Y/Y_OUT_7	Tristate O/P	5v	8mA		Digital video output - Green/Y
156	OE	Input	5v			Output data enable for digital video output
157	PLL_PVDD	Power				1.8 V - Power pin for PLL pads
158	PLL_PVSS	Ground				Ground for PLL pads
159	AVSS_PLL_BE1	Ground				PLL ground
160	AVDD_PLL_BE1	Power				1.8 V - Power pin for PLL
161	AVDD_PLL_BE2	Power				1.9 V - Power pin for PLL
162	AVSS_PLL_BE2	Ground				PLL ground
163	AVSS_PLL_SDI	Ground				PLL ground
164	AVDD_PLL_SDI	Power				1.8 V - Power pin for PLL
165	AVDD_PLL_FE	Power				1.9 V - Power pin for PLL
166	AVSS_PLL_FE	Ground				PLL ground
167	R_VSS	Ground				Ground
168	R_VDD1.8	Power				1.8 V
169	R_VSS	Ground				Ground
170	Reserved	-				Leave open
171	R_VDD	Power				3.3 V
172	R_VSS	Ground				Ground
173	Reserved	-				Leave open
174	R_VDD	Power				3.3 V
175	R_VSS	Ground				Ground

No.	Pin Name	I/O Type	Voltage Tolerance	Drive	Internal Pull-up/ Pull-down	Description
176	Reserved	-				Leave open
177	R_VDD	Power				3.3 V
178	R_VSS	Ground				Ground
179	Reserved	-				Leave open
180	Reserved	-				Leave open
181	Reserved	-				Leave open
182	R_VSS	Ground				Ground
183	R_VDD	Power				3.3 V
184	R_VSS	Ground				Ground
185	R_VSS	Ground				Ground
186	R_VDD	Power				3.3 V
187	R_VDD	Power				3.3 V
188	TEST0	Input	5v			Test pin - Connect to ground
189	TEST1	Input	5v			Test pin - Connect to ground
190	TEST2	Input	5v			Test pin - Connect to ground
191	XTAL IN	Input				External parallel crystal oscillator
192	XTAL OUT	Output				External parallel crystal oscillator
193	VDD9	Power				3.3 V - Power pin for IO
194	VSS	Ground				Ground
195	IN_CLK_PORT2	Input	5v	4mA		Port2 - Data clock input
196	D1_IN_0	Input	5v	4mA		Port2 - ITU-R BT656 digital data input
197	VDDcore8	Power				1.8 V - Power pin for core
198	VSScore	Ground				Ground
199	D1_IN_1	Input	5v	4mA		Port2 - ITU-R BT656 digital data input
200	D1_IN_2	Input	5v	4mA		Port2 - ITU-R BT657 digital data input
201	D1_IN_3	Input	5v	4mA		Port2 - ITU-R BT658 digital data input
202	D1_IN_4	Input	5v	4mA		Port2 - ITU-R BT659 digital data input
203	D1_IN_5	Input	5v	4mA		Port2 - ITU-R BT660 digital data input
204	D1_IN_6	Input	5v	4mA		Port2 - ITU-R BT661 digital data input
205	D1_IN_7	Input	5v	4mA		Port2 - ITU-R BT662 digital data input
206	FIELD ID_PORT2	Input	5v	4mA		Port2 - Odd/Even field identification
207	VSYNC_PORT2	Input	5v	4mA		Port2 - Vertical sync or reference
208	HSYNC_PORT2	Input	5v	4mA		Port2 - Horizontal sync or reference

IC13: ST72F321R (MAIN P.C.B.)
Microprocessor
* No replacement part available.
サービス部品供給なし

Device Block Diagram

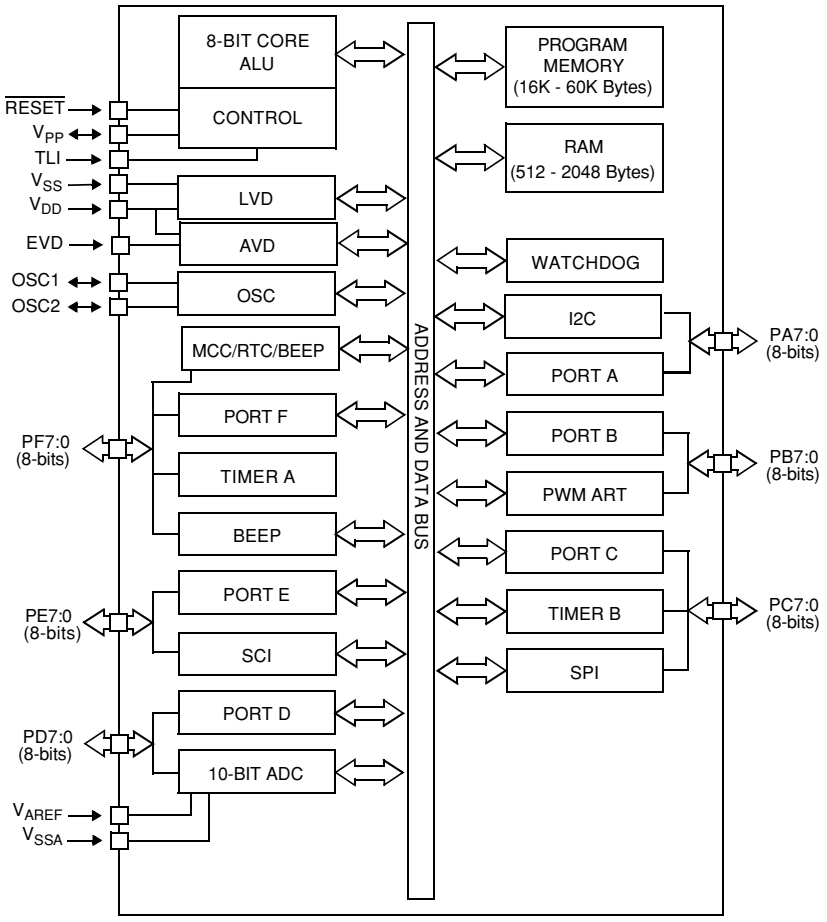

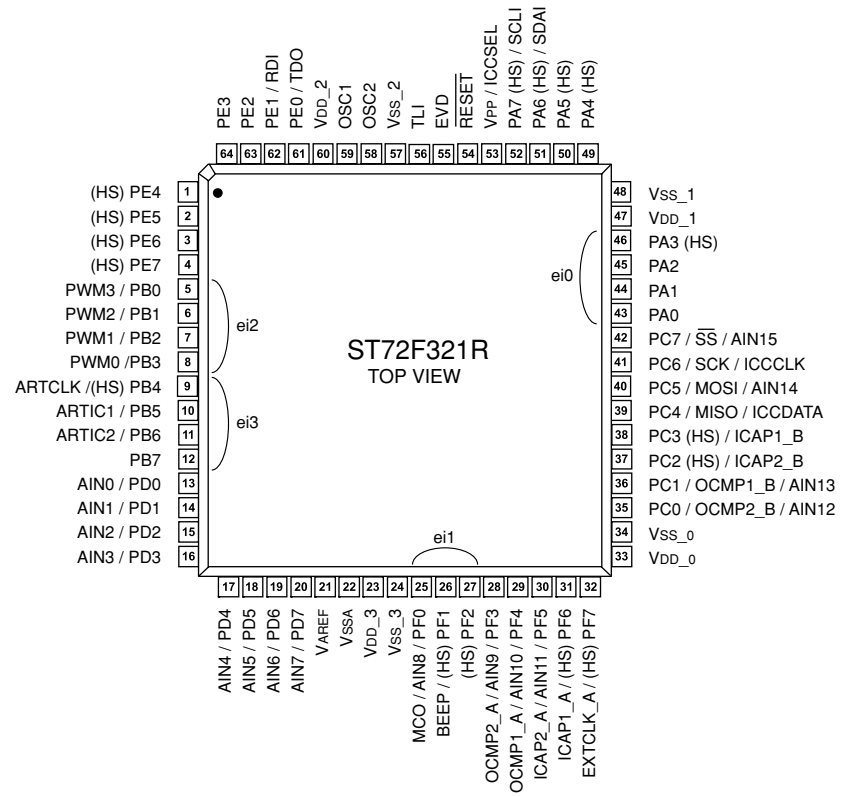

Pin no.		Pin Name	Type	Level		Port						Main function (afterreset)	Alternate function	
						Input				Output				
TQFP64	TQFP44			Input	Output	float	wpu	int	ana	OD	PP			
1	-	RTS_RS232	/O	C_T	HS	X	X			X	X	Port E4		
2	-	CTS_RS232C	I/O	C_T	HS	X	X			X	X	Port E5		
3	-	VFD_RESET	I/O	C_T	HS	X	X			X	X	Port E6		
4	-	N.C.	I/O	C_T	HS	X	X			X	X	Port E7		
5	2	EXT_SW1(RS232)	I/O	C_T		X	ei2			X	X	Port B0	PWM output 3	
6	3	N.C.	I/O	C_T		X	ei2			X	X	Port B1	PWM output 2	
7	4	DSP_RESET	I/O	C_T		X	ei2			X	X	Port B2	PWM output 1	
8	5	DSP_BUSY	I/O	C_T		X		ei2		X	X	Port B3	PWM output 0	
9	6	DSP_INTREQ	I/O	C_T	HS	X	ei3			X	X	Port B4	PWM-ART external clock	
10	-	HDMI_DET.	I/O	C_T		X	ei3			X	X	Port B5	PWM-ART input capture 1	
11	-	HDMI_INTH	I/O	C_T		X	ei3			X	X	Port B6	PWM-ART input capture 2	
12	-	DAC_RESET	I/O	C_T		X		ei3		X	X	Port B7		
13	7	KEY#1	I/O	C_T		X	X		X	X	X	Port D0	ADC analog input 0	
14	8	KEY#2	I/O	C_T		X	X		X	X	X	Port D1	ADC analog input 1	
15	9	N.C.	I/O	C_T		X	X		X	X	X	Port D2	ADC analog input 2	
16	10	N.C.	I/O	C_T		X	X		X	X	X	Port D3	ADC analog input 3	
17	11	PWR_CTL	I/O	C_T		X	X		X	X	X	Port D4	ADC analog input 4	
18	12	A_MUTE	I/O	C_T		X	X		X	X	X	Port D5	ADC analog input 5	
19	-	VMUTE1	I/O	C_T		X	X		X	X	X	Port D6	ADC analog input 6	
20	-	INT/EXT_SEL	I/O	C_T		X	X		X	X	X	Port D7	ADC analog input 7	
21	13	V_{AREF}	I									Analog reference voltage for ADC		
22	14	V_{SSA}	S									Analog ground voltage		
23	-	V_{DD_3}	S									Digital main supply voltage		
24	-	V_{SS_3}	S									Digital ground voltage		
25	15	REMOTE/BUS_IN	I/O	C_T		X	ei1		X	X	X	Port F0	Main clock out (fOSC/2)	ADC analog input 8
26	16	REMOTE_OUT	I/O	C_T	HS	X	ei1			X	X	Port F1	Beep signal output	
27	17	N.C.	I/O	C_T	HS	X		ei1		X	X	Port F2		
28	-	HDMI_RESET	I/O	C_T		X	X		X	X	X	Port F3	Timer A output compare 2	ADC analog input 9
29	18	FL_OFF_LED	I/O	C_T		X	X		X	X	X	Port F4	Timer A output compare 1	ADC analog input 10
30	-	HDMI_ON_LED	I/O	C_T		X	X		X	X	X	Port F5	Timer A input capture 2	ADC analog input 11
31	19	HDMI_LINK_LED	I/O	C_T	HS	X	X			X	X	Port F6	Timer A input capture 1	
32	20	STANDBY_LED	I/O	C_T	HS	X	X			X	X	Port F7	Timer A external clock source	
33	21	V_{DD_0}	S									Digital main supply voltage		
34	22	V_{SS_0}	S									Digital ground voltage		
35	23	DSP_SCS	I/O	C_T		X	X		X	X	X	Port C0	Timer B output compare 2	ADC analog input 12
36	24	DSP_FCS	I/O	C_T		X	X		X	X	X	Port C1	Timer B output compare 1	ADC analog input 13
37	25	DAC_CS2	I/O	C_T	HS	X	X			X	X	Port C2	Timer B input capture 2	
38	26	DAC_CS1	I/O	C_T	HS	X	X			X	X	Port C3	Timer B input capture 1	
39	27	DSP&DAC_IN	I/O	C_T		X	X			X	X	Port C4	SPI master in/slave out data	ICC data input
40	28	DSP&DAC_OUT	I/O	C_T		X	X		X	X	X	Port C5	SPI master out/slave in data	ADC analog input 14
41	29	ICCCLK	I/O	C_T		X	X			X	X	Port C6	SPI serial clock	ICC clock output
	30													
42	-	DSP_FINTREQ.	I/O	C_T		X	X		X	X	X	Port C7	SPI slave select (active low)	ADC analog input 15
43	-	PMCLK&DMCLK_SEL	I/O	C_T		X	ei0			X	X	Port A0		
44	-	MREQ	I/O	C_T		X	ei0			X	X	Port A1		
45	31	KEY W/U	I/O	C_T		X	ei0			X	X	Port A2		
46	32	MRESET	I/O	C_T	HS	X		ei0		X	X	Port A3		
47	33	VDD_1	S									Digital main supply voltage		
48	34	VSS_1	S									Digital ground voltage		
49	35	F_REQ	I/O	C_T	HS	X	X			X	X	Port A4		
50	36	I2C_DATA	I/O	C_T	HS	X	X			X	X	Port A5		
51	37	I2C_DATA1	I/O	C_T	HS	X				T		Port A6	I^2C data[1)]	
52	38	I2C_CLK1	I/O	C_T	HS	X				T		Port A7	I^2C clock[1)]	
53	39	RS232(+12V)	I									Must be tied low. In flash programming mode, this pin acts as the programming voltage input VPP. See section 12.9.2 for more details. High voltage must not be applied to ROM devices.		
54	-	RESET	I/O	C_T								Top priority non maskable interrupt		
55	-	N.C.										External voltage detector		
56	40	N.C.	I	C_T				X				Top level interrupt input pin		
57	41	V_{SS_2}	S									Digital ground voltage		
58	42	OSC2	I/O									Resonator oscillator inverter output		
59	43	OSC1	I									External clock input or resonator oscillator inverter input		
60	44	V_{DD_2}	S									Digital main supply voltage		
61	1	TX_RS232	I/O	C_T		X	X			X	X	Port E0	SCI transmit data out	
62	-	RX_RS-232	I/O	C_T		X	X			X	X	Port E1	SCI receive data in	
63	-	GND	I/O	C_T			X					Port E2		
64	-	N.C.	I/O	C_T		X	X			X	X	Port E3		

IC15, 16: ADV7320KSTZ (VIDEO P.C.B.)
Video decoder

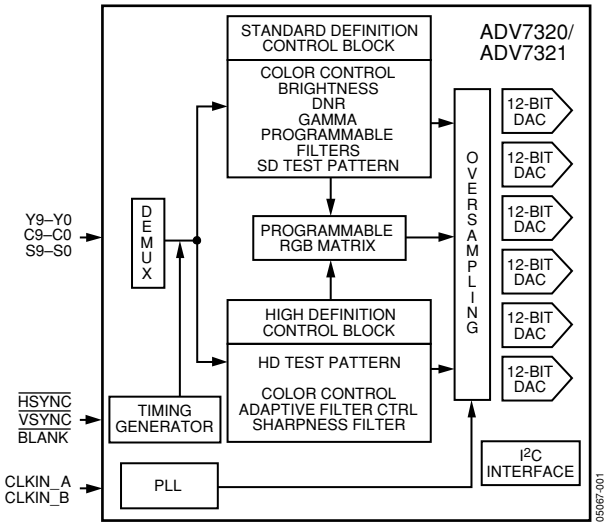

Simplified Functional Block Diagram

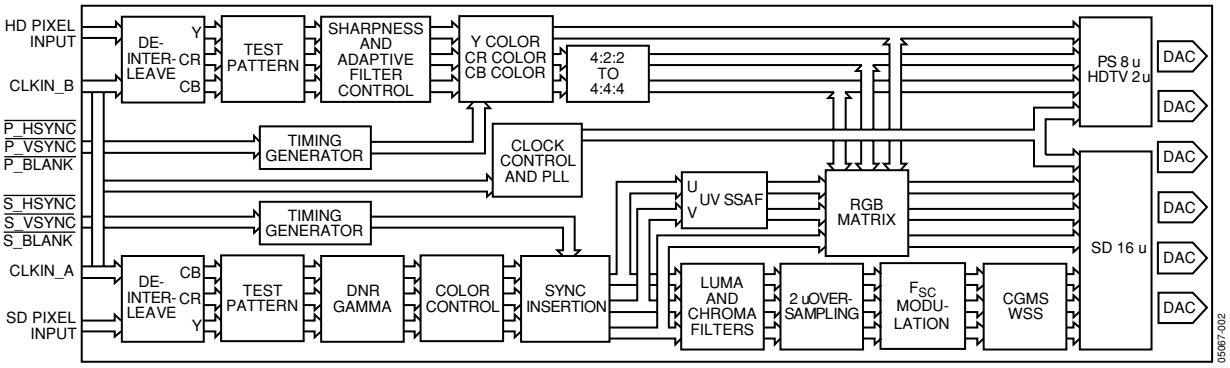

Detailed Functional Block Diagram

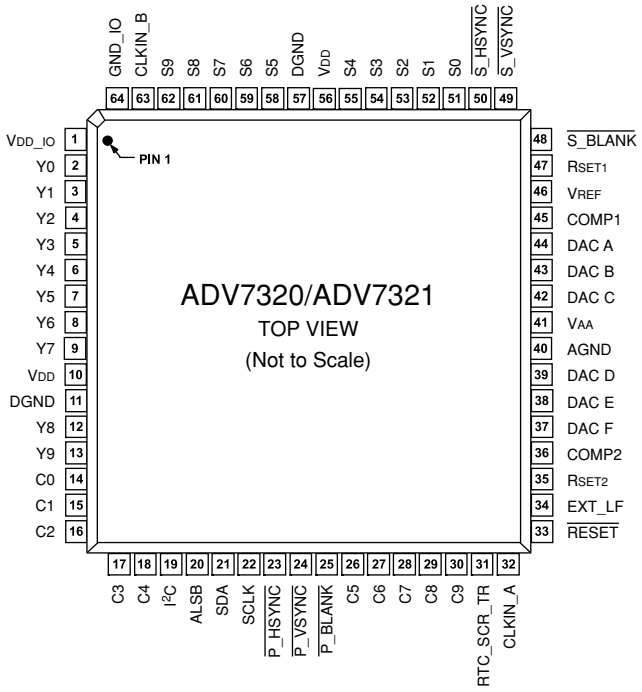

Pin No	Mnemonic	Input/Output	Description
1	V_{DD_IO}	P	Power supply for digital inputs and outputs.
2	Y0	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
3	Y1	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
4	Y2	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
5	Y3	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
6	Y4	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
7	Y5	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
8	Y6	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
9	Y7	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
10	V_{DD}	P	Digital power supply.
11	DGND	G	Digital ground.
12	Y8	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
13	Y9	I	SD or progressive scan/HDTV input port for Y data. Input port for interleaved progressive scan data. The LSB is set up on pin Y0. For 8-bit data input, LSB is set up on Y2.
14	C0	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
15	C1	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
16	C2	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on Pin C0. For 8-bit data input, LSB is set up on C2.
17	C3	I	Progressive Scan/HDTV Input Port 4:4:4 Input Mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
18	C4	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
19	XSPI/I²C	I	This input pin must be tied high (V_{DD_IO}) for the ADV7320/ADV7321 to interface over the I²C port.
20	ALSB_SO	I	TTL Address Input. This signal sets up the LSB of the I²C address. When this pin is tied low, the I²C filter is activated, which reduces noise on the I²C interface.
21	SDA_CLKSP	I/O	I²C port serial data input/output.
22	SCLK_SI	I	I²C port serial interface clock input.
23	XP_HSYNC	I	Video horizontal SYNC control signal for HD in simultaneous SD/HD mode and HD only mode.
24	XP_VSYNC	I	Video vertical SYNC control signal for HD in simultaneous SD/HD mode and HD only mode.
25	P_BLANK	I	Video blanking control signal for HD in simultaneous SD/HD mode and HD only mode.
26	C5	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
27	C6	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
28	C7	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
29	C8	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
30	C9	I	Progressive scan/HDTV input port 4:4:4 input mode. This port is used for the Cb [Blue/U] data. The LSB is set up on pin C0. For 8-bit data input, LSB is set up on C2.
31	RTC_SCR_TR	I	Multifunctional input. Real-time control (RTC) input, timing reset input, subcarrier reset input.
32	CLKIN_A	I	Pixel clock input for HD (74. 25 MHz only, PS only (27 MHz), SD only (27 MHz)).
33	$\overline{\text{RESET}}$	I	This input resets the on-chip timing generator and sets the ADV7320/ADV7321 into default register setting. RESET is an active low signal.
34	EXT_LF	I	External loop filter for the internal PLL.

Pin No	Mnemonic	Input/Output	Description
35	R_{SET2}	I	A 3040 ohm resistor must be connected from this pin to AGND and is used to control the amplitudes of the DAC outputs.
36	COMP2	O	Compensation pin for DACs. Connect 0. 1 uF capacitor from COMP pin to V_{AA}.
37	DAC_F	O	In SD only mode: Chroma/Red/V analog output; in HD only mode and simultaneous HD/SD. Mode: Pb/Blue [HD] analog output.
38	DAC_E	O	In SD only mode: Luma/Blue/U analog output; in HD only mode and simultaneous HD/SD. Mode: Pr/Red analog output
39	DAC_D	O	In SD only mode: CVBS/Green/Y analog output; in HD only mode and simultaneous HD/SD. Mode: Y/Green [HD] analog output.
40	AGND	G	Analog ground.
41	V_{AA}	P	Analog power supply.
42	DAC_C	O	Luma/Red/V/Pr analog output.
43	DAC_B	O	Chroma/Blue/U/Pb analog output.
44	DAC_A	O	CVBS/Green/Y/Y analog output.
45	COMP1	O	Compensation pin for DACs. Connect 0. 1 uF capacitor from COMP pin to V_{AA}.
46	V_{REF}	I/O	Optional external voltage reference input for DACs or voltage reference output (1.235 V).
47	R_{SET1}	I	A 3040 ohm resistor must be connected from this pin to AGND and is used to control the amplitudes of the DAC outputs.
48	XS_BLANK	I/O	Video blanking control signal for SD only.
49	XS_VSYNC	I/O	Video vertical SYNC control signal for SD only.
50	XS_HSYNC	I/O	Video horizontal SYNC control signal for SD only.
51	S0	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
52	S1	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
53	S2	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
54	S3	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
55	S4	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
56	V_{DD}	P	Digital power supply.
57	DGND	G	Digital ground.
58	S5	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
59	S6	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
60	S7	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
61	S8	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
62	S9	I	SD or progressive scan/HDTV input port for Cr [Red/V] data in 4:4:4 input mode. LSB is set up on pin S0. For 8-bit data input, LSB is set up on S2.
63	CLKIN_B	I	Pixel clock input. Requires a 27 MHz reference clock for progressive scan mode or a 74.25 MHz (74.1758 MHz) reference clock in HDTV mode. This clock is only used in dual modes.
64	GND_IO		Digital input/output ground.

IC20: SAA7893HLC2 (MAIN P.C.B.)
DSD decoder

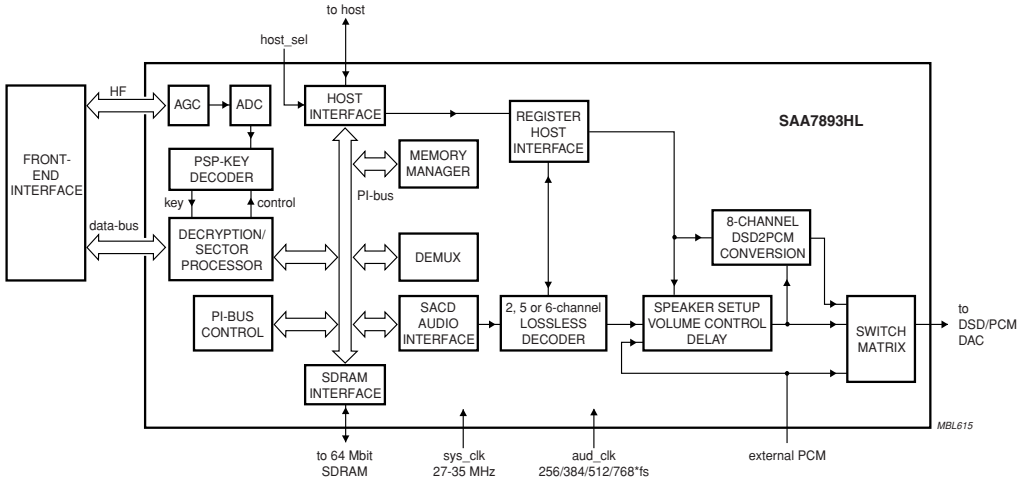

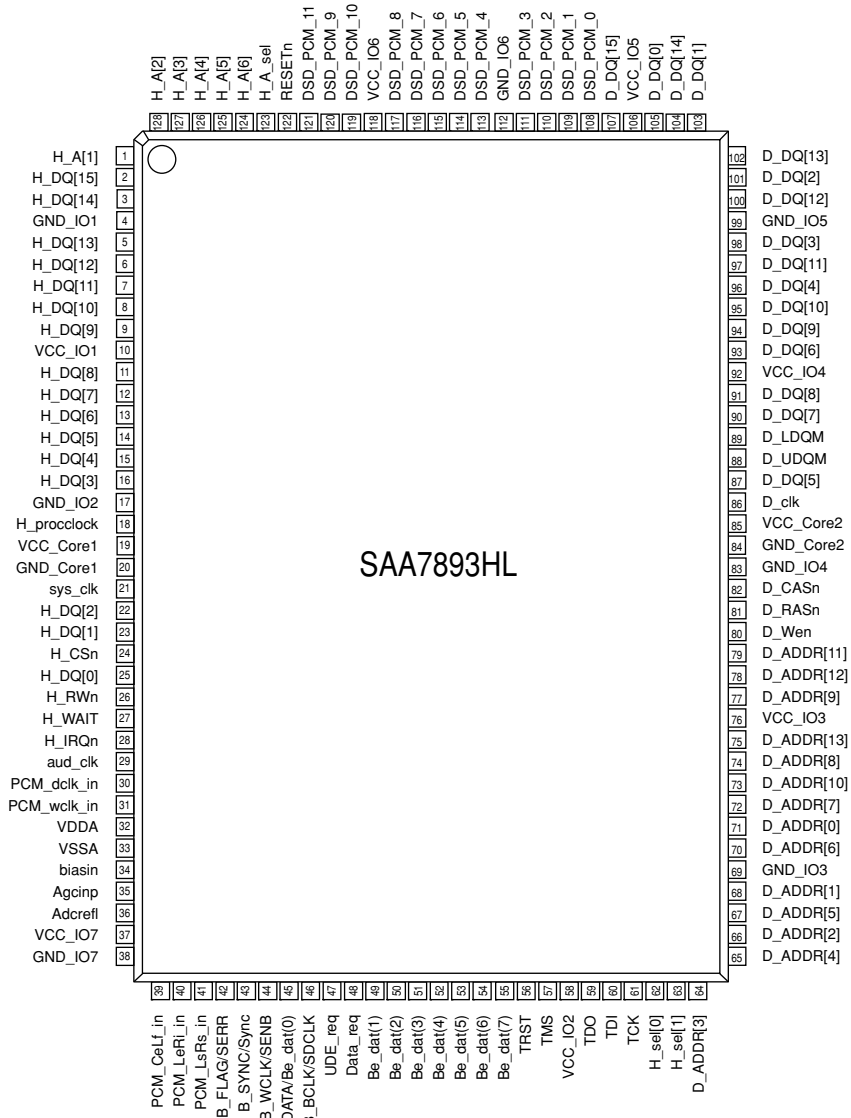

Pin.	Symbol	Type[1]	Description	Pin	Symbol	Type[1]	Description
1	H_A[1]	IN	Address bus	64	D_ADDR[3]	O10	SDRAM address bus
2	H_DQ[15]	I/O10	Data bus	65	D_ADDR[4]	O10	SDRAM address bus
3	H_DQ[14]	I/O10	Data bus	66	D_ADDR[2]	O10	SDRAM address bus
4	GND_IO1	GND_IO	GND I/O pads	67	D_ADDR[5]	O10	SDRAM address bus
5	H_DQ[13]	I/O10	Data bus	68	D_ADDR[1]	O10	SDRAM address bus
6	H_DQ[12]	I/O10	Data bus	69	GND_IO3	GND_IO	GND I/O pads
7	H_DQ[11]	I/O10	Data bus	70	D_ADDR[6]	O10	SDRAM address bus
8	H_DQ[10]	I/O10	Data bus	71	D_ADDR[0]	O10	SDRAM address bus
9	H_DQ[9]	I/O10	Data bus	72	D_ADDR[7]	O10	SDRAM address bus
10	VCC_IO1	VCC_IO1	Vcc_I/O pads	73	D_ADDR[10]	O10	SDRAM address bus
11	H_DQ[8]	I/O10	Data bus	74	D_ADDR[8]	O10	SDRAM address bus
12	H_DQ[7]	I/O10	Data bus	75	D_ADDR[13]	O10	SDRAM address bus
13	H_DQ[6]	I/O10	Data bus	76	VCC_IO3	VCC_IO	Vcc I/O pads
14	H_DQ[5]	I/O10	Data bus	77	D_ADDR[9]	O10	SDRAM address bus
15	H_DQ[4]	I/O10	Data bus	78	D_ADDR[12]	O10	SDRAM address bus
16	H_DQ[3]	I/O10	Data bus	79	D_ADDR[11]	O10	SDRAM address bus
17	GND_IO2	GND_IO	GND I/O pads	80	D_Wen	O10	Read or write
18	H_procclock	IN	Host processor EMI interface clock	81	D_RASn	O10	Row address select; active LOW
19	VCC_Core1	VCC_core	Core supply voltage	82	D_CASn	O10	Column address select; active LOW
20	GND_Core1	GND_core	Core ground	83	GND_IO4	GND_IO	GND I/O pads
21	sys_clk	IN	System clock	84	GND_Core2	GND_core	Core ground
22	H_DQ[2]	I/O10	Data bus	85	VCC_Core2	VCC_core	Core supply voltage
23	H_DQ[1]	I/O10	Data bus	86	D_clk	O10	Clock signal needed for SDRAM
24	H_CSn	IN	Host chip select; active LOW	87	D_DQ[5]	I/O10	Data bus
25	H_DQ[0]	I/O10	Data bus	88	D_UDQM	O10	DQ mask enable (upper)
26	H_RWn	IN	Read = 1; Write = 0	89	D_LDQM	O10	DQ mask enable (lower)
27	H_WAIT	O10	Wait signal	90	D_DQ[7]	I/O10	Data bus
28	H_IRQn	O10	Interrupt request; active LOW	91	D_DQ[8]	I/O10	Data bus
29	aud_clk	IN	DSD audio clock	92	VCC_IO4	VCC_IO	Vcc I/O pads
30	PCM_dclk_in	IN	PCM data clock	93	D_DQ[6]	I/O10	Data bus
31	PCM_wclk_in	IN	PCM word clock	94	D_DQ[9]	I/O10	Data bus
32	V_{DDA}	VDDCO	V_{DD} of ADC	95	D_DQ[10]	I/O10	Data bus
33	V_{SSA}	VSSCO	V_{SS} of AGC and ADC; Connected to substrate	96	D_DQ[4]	I/O10	Data bus
				97	D_DQ[11]	I/O10	Data bus
34	biasin	APIO	Bias current input	98	D_DQ[3]	I/O10	Data bus
35	Agcinp	APIO	AGC positive input signal; HF in	99	GND_IO5	GND_IO	GND I/O pads
36	Adcrefl	APIO	ADC decoupling	100	D_DQ[12]	I/O10	Data bus
37	V_{CC}_IO7	VCC_IO	VCC I/O pads	101	D_DQ[2]	I/O10	Data bus
38	GND_IO7	GND_IO	GND I/O pads	102	D_DQ[13]	I/O10	Data bus
39	PCM_CeLf_in	IN	PCM data center or LFE	103	D_DQ[1]	I/O10	Data bus
40	PCM_LeRi_in	IN	PCM data left or right	104	D_DQ[14]	I/O10	Data bus
41	PCM_LsRs_in	IN	PCM data left or right surround	105	D_DQ[0]	I/O10	Data bus
42	B_FLAG/SERR	IN	I^2S-bus flag (EDC flag)	106	VCC_IO5	VCC_IO	Vcc_IO pads
43	B_SYNC/Sync	IN	Sector sync or absolute time sync	107	D_DQ[15]	I/O10	Data bus
44	B_WCLK/SENB	IN	I^2S-bus word clock or UDE data sense from host	108	DSD_PCM_0	O10	6-channel data output
				109	DSD_PCM_1	O10	6-channel data output
45	B_DATA/Be_dat(0)	IN	I^2S-bus data or LSB data of parallel interface	110	DSD_PCM_2	O10	6-channel data output
46	B_BCLK/SDCLK	IN	I^2S-bus bit clock	111	DSD_PCM_3	O10	6-channel data output
47	UDE_req	IN	Host request data from front-end; routed via the SAA7893HL	112	GND_IO6	GND_IO	GND I/O pads
				113	DSD_PCM_4	O10	6-channel data output
48	Data_req	O10	Data request for UDE	114	DSD_PCM_5	O10	6-channel data output
49	Be_dat(1)	IN	Front-end parallel data interface	115	DSD_PCM_6	O10	6-channel data output
50	Be_dat(2)	IN	Front-end parallel data interface	116	DSD_PCM_7	O10	6-channel data output
51	Be_dat(3)	IN	Front-end parallel data interface	117	DSD_PCM_8	O10	2-channel data output
52	Be_dat(4)	IN	Front-end parallel data interface	118	VCC_IO6	VCC_IO	V_{CC} I/O pads
53	Be_dat(5)	IN	Front-end parallel data interface	119	DSD_PCM_10	O10	2-channel data output
54	Be_dat(6)	IN	Front-end parallel data interface	120	DSD_PCM_9	O10	2-channel clock or control
55	Be_dat(7)	IN	Front-end parallel data interface	121	DSD_PCM_11	O10	2-channel data output
56	TRST	IN1	Boundary scan reset	122	RESETn	IN	Asynchronous reset; active LOW
57	TMS	IN1	Boundary scan mode select	123	H_A_sel	IN	Address select
58	VCC_IO2	VCC_IO	V_{CC} I/O pads	124	H_A[6]	IN	Address bus
59	TDO	O10	Output	125	H_A[5]	IN	Address bus
60	TDI	IN1	Boundary scan data input	126	H_A[4]	IN	Address bus
61	TCK	IN	Boundary scan clock	127	H_A[3]	IN	Address bus
62	H_sel[0]	IN	Host select signals: SAD16, MAD16 and SAD08	128	H_A[2]	IN	Address bus
63	H_sel[1]	IN	Host select signals: SAD16, MAD16 and SAD08				

IC35: ZR36778 (MAIN P.C.B.)
MPEG decoder

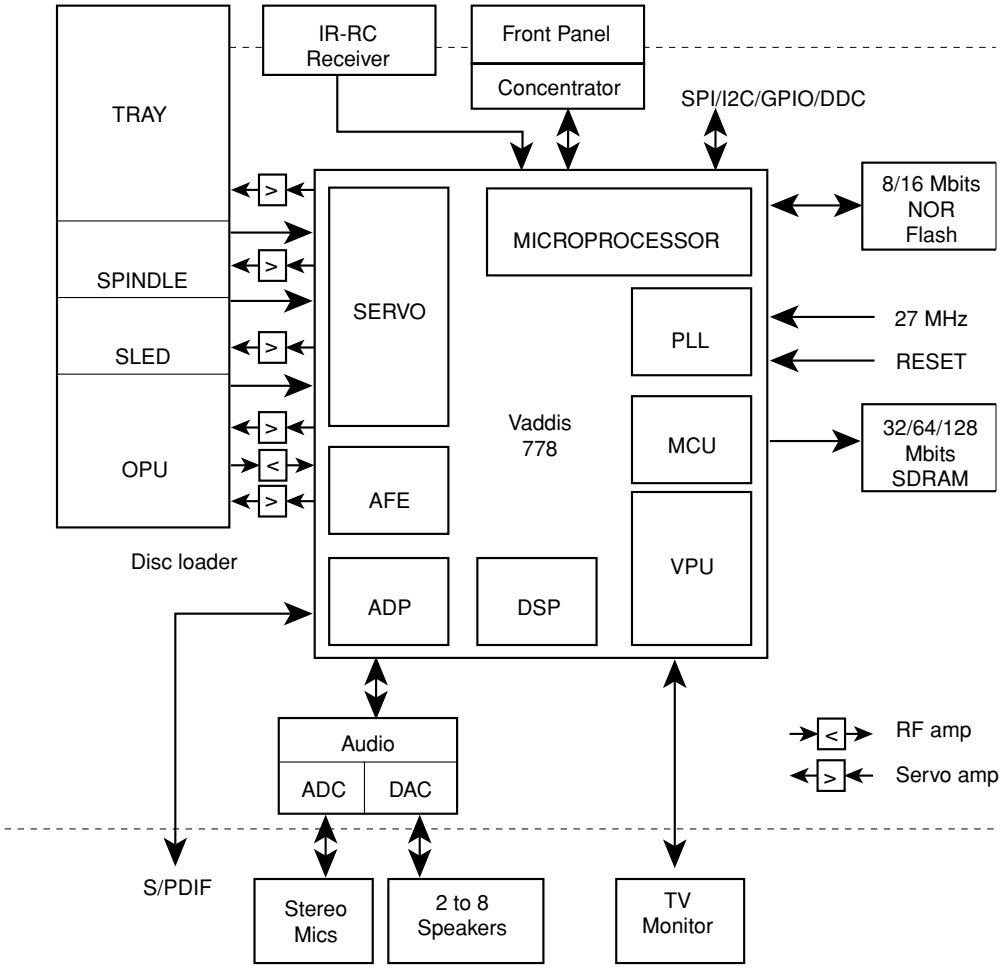

No.	Pin Functions	Direction	Description
1	SSCRXD	I	SSC data input
	GPCI/O[17]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP or FCU SW
	PM[15]	O	Probe mux data output
2	MEMCS[1]#	O	PNVM/SRAM chip select (active low) output
	GPCI/O[18]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
3	VDDP	S	3.3 V digital periphery power supply
4,5	MEMAD [15,16]	O	PNVM/SRAM address bus outputs
	SYSIND[1,0]	I	General purpose system configuration indication input / Level sampled during RESET
6	MEMAD[14]	O	PNVM/SRAM address bus output
	GCLKSEL	I	GCLKPOUT or GCLKA function selection / Level sampled during RESET
7	MEMAD[13]	O	PNVM/SRAM address bus output
	FCUIF[29]	O	Flash card interface unit output signal
8	MEMAD[12]	O	PNVM/SRAM address bus output
	PLLCFGA	I	Audio PLL configuration input / Level sampled during RESET / In normal operation the pin must be low during RESET
9	MEMDA[15]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[28]	I/O	Flash card interface unit I/O signal
10	MEMAD[11]	O	PNVM/SRAM address bus output
	PLLCFGP	I	Process PLL configuration input / Level sampled during RESET / In normal operation the pin must be low during RESET
11	MEMDA[7]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[9]	I/O	Flash card interface unit I/O signals
12	GNDP	S	Digital periphery ground of 3.3 V supply
13	MEMAD[10]	O	PNVM/SRAM address bus output
	FCUIF[20]	O	Flash card interface unit output signal
14	MEMDA[14]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[27]	I/O	Flash card interface unit I/O signal
15	MEMAD[9]	O	PNVM/SRAM address bus outputs
	FCUIF[19]	O	Flash card interface unit output signal
16	MEMDA[6]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[8]	I/O	Flash card interface unit I/O signals
17	MEMAD[8]	O	PNVM/SRAM address bus outputs
	FCUIF[18]	O	Flash card interface unit output signal
18-19	MEMDA[13,5]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[26,7]	I/O	Flash card interface unit I/O signals
20	MEMAD[20]	O	PNVM/SRAM address bus outputs
	MEMCS[2]#	O	PNVM/SRAM chip select (active low) output
	GPCI/O[19]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
21	VDDP	S	3.3 V digital periphery power supply
22	MEMDA[12]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[25]	I/O	Flash card interface unit I/O signal
23	MEMWR#	O	PNVM/SRAM write enable (active low) output
	FCUIF[0]	O	Flash card interface unit output signal
24	MEMDA[4]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[6]	O	Flash card interface unit output signal
25	VDDC	S	1.8 V digital core power supply
26	MEMDA[11]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[24]	I/O	Flash card interface unit I/O signal
27	MEMDA[3]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[5]	I/O	Flash card interface unit I/O signals
28	MEMAD[19]	O	PNVM/SRAM address bus outputs
	PLLSEL	I	PLL frequency selection -108 MHz (low) or 135 MHz (high) / Level sampled during RESET
29	GNDC	S	Digital core ground of 1.8 V supply
30	MEMDA[10]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[23]	I/O	Flash card interface unit I/O signal
31	MEMAD[18]	O	PNVM/SRAM address bus output
32	GNDP	S	Digital periphery ground of 3.3 V supply
33	MEMDA[2]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[4]	I/O	Flash card interface unit I/O signals
34	MEMAD[17]	O	PNVM/SRAM address bus output
35	MEMDA[9]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[22]	I/O	Flash card interface unit I/O signal
36	MEMAD[7]	O	PNVM/SRAM address bus outputs
	FCUIF[17]	O	Flash card interface unit output signal
37	MEMDA[1]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[3]	I/O	Flash card interface unit I/O signals
38	MEMAD[6]	O	PNVM/SRAM address bus outputs

No.	Pin Functions	Direction	Description
	FCUIF[16]	O	Flash card interface unit output signal
39	MEMDA[8]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[21]	I/O	Flash card interface unit I/O signal
40	MEMAD[5]	O	PNVM/SRAM address bus outputs
	FCUIF[15]	O	Flash card interface unit output signal
41	VDDP	S	3.3 V digital periphery power supply
42	MEMDA[0]	I/O	PNVM/SRAM bi-directional data bus
	FCUIF[2]	O	Flash card interface unit output signal
43	MEMAD[4]	I/O	PNVM/SRAM address bus outputs
	FCUIF[14]	O	Flash card interface unit output signal
44	MEMRD#	O	PNVM/SRAM read enable (active low) output
	FCUIF[1]	I/O	Flash card interface unit I/O signal
45-46	MEMAD[3, 2]	O	PNVM/SRAM address bus outputs
	FCUIF[13, 12]	O	Flash card interface unit output signal
47	MEMCS[0]#	O	PNVM/SRAM chip select (active low) output
48	MEMAD[1]	O	PNVM/SRAM address bus outputs
	FCUIF[11]	O	Flash card interface unit output signals
	BOOTSEL[2]	I	Microprocessor SW boot (and execute) source selection: (high, high) - For production testing; (high, low) - Flash+SRAM (for debug monitor); (low, high) - First debug UART (low, low) - Flash (low) or Level sampled during RESET
49	MEMAD[0]	O	PNVM/SRAM address bus outputs
	FCUIF[10]	O	Flash card interface unit output signals
	BOOTSEL[1]	I	Microprocessor SW boot (and execute) source selection: (high, high) - For production testing; (high, low) - Flash+SRAM (for debug monitor); (low, high) - First debug UART (low, low) - Flash (low) or Level sampled during RESET
50	GNDP	S	Digital periphery ground of 3.3 V supply
51	VDD-IP	S	3.3 V periphery reference voltage
52	VDDP	S	3.3 V digital periphery power supply
53-57	RAMADD [4, 3, 5, 2, 6]	O	SDRAM address bus output
58	VDDP	S	3.3 V digital periphery power supply
59-61	RAMADD [1, 7, 0]	O	SDRAM address bus output
62	GNDP	S	Digital periphery ground of 3.3 V supply
63	RAMADD[8]	O	SDRAM address bus output
64	VDDC	S	1.8 V digital core power supply
65	RAMADD[10]	O	SDRAM address bus output
66	GNDC	S	Digital core ground of 1.8 V supply
67	RAMADD[9]	O	SDRAM address bus output
68	VDDP	S	3.3 V digital periphery power supply
69	RAMADD[11]	O	SDRAM address bus output
70	RAMCS[0]#	O	SDRAM chip select (active low)
	RAMBA[1]	O	SDRAM bank select output
71	RAMBA[0]	O	SDRAM bank select output
72	GNDP	S	Digital periphery ground of 3.3 V supply
73	RAMCS[1]#	O	SDRAM chip select (active low) output
74	RAMRAS#	O	SDRAM row select (active low) output
75	RAMCAS#	O	SDRAM column select (active low) output
76	VDDP	S	3.3 V digital periphery power supply
77	RAMWE#	O	SDRAM write enable (active low) output
78	RAMDQM	O	SDRAM data masking (active high) output
79	GNDPCLK	S	Digital ground of filtered 3.3 V supply for PCLK
80	PCLK	O	SDRAM clock output (same as internal processing clock)
81	VDDPCLK	S	3.3 V filtered digital power supply for PCLK
82	RAMDAT[8]	I/O	SDRAM bi-directional data bus
83	GNDP	S	Digital periphery ground of 3.3 V supply
84-86	RAMDAT [7, 9, 6]	I/O	SDRAM bi-directional data bus
87	VDDP	S	3.3 V digital periphery power supply
88-90	RAMDAT [10, 5, 11]	I/O	SDRAM bi-directional data bus
91	GNDP	S	Digital periphery ground of 3.3 V supply

No.	Pin Functions	Direction	Description
92	RAMDAT[4]	I/O	SDRAM bi-directional data bus
93	VDDC	S	1.8 V digital core power supply
94	RAMDAT[12]	I/O	SDRAM bi-directional data bus
95	GNDC	S	Digital core ground of 1.8 V supply
96	RAMDAT[3]	I/O	SDRAM bi-directional data bus
97	VDDP	S	3.3 V digital periphery power supply
98-100	RAMDAT [13, 2, 14]	I/O	SDRAM bi-directional data bus
101	GNDP	S	Digital periphery ground of 3.3 V supply
102-104	RAMDAT [1, 15, 0]	I/O	SDRAM bi-directional data bus
105	VDDP	S	3.3 V digital periphery power supply
106	GPCI/O[20]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	CPUNMI	I	Microprocessor non-maskable interrupt input
	SDATA[0]	I	SERVO channel sample data input for AFE by-pass
	PM[0]	O	Probe mux data output
107	GNDP	S	Digital periphery ground of 3.3 V supply
108	ICGPCI/O[0]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the microprocessor
	AOUT[3]	O	Serial output of digital stereo audio
	SDATA[1]	I	SERVO channel sample data input for AFE by-pass
	PM[1]	O	Probe mux data output
109	IDGPCI/O[0]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the DSP
	RAMCKE	O	Clock enable signal to the SDRAM (for power down)
	SDATA[2]	I	SERVO channel sample data input for AFE by-pass
	PM[2]	O	Probe mux data output
110	S/PDIFOUT	O	S/PDIF transmitter output for digital coded or reconstructed audio data
	SDATA[3]	I	SERVO channel sample data input for AFE by-pass
	PM[3]	O	Probe mux data output
111	AOUT[2]	O	Serial outputs of digital stereo audio
	GPCI/O[21]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	SDATA[4]	I	SERVO channel sample data inputs for AFE by-pass
	PM[4]	O	Probe mux data outputs
112	AOUT[1]	O	Serial output of digital stereo audio
	GPCI/O[22]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	PM[5]	O	Probe mux data outputs
113	AOUT[0]	O	Serial output of digital stereo audio
	SDATA[6]	I	SERVO channel sample data input for AFE by-pass
	PM[6]	O	Probe mux data outputs
114	GPAI/O	I/O	General purpose I/O, monitored/controlled by the ADP SW
	AOUT[3]	O	Serial output of digital stereo audio
	IDGPCI/O[0]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the DSP
	PM[7]	O	Probe mux data output
115	ALRCLK	O	Digital audio left/right select output for the audio port / Square wave, at the sampling frequency / Programmable polarity
116	ABCLK	O	Digital audio bit-clock output / Data on AOUT and AIN is output or latched, respectively, with the rising or falling (programmable) edge of this clock
117	GNDP-A2	S	Digital ground filtered 3.3 V supply for AMCLK
118	AMCLK	I/O	Audio master clock I/O / 128, 192, 256 or 384 times the sampling frequency (programmable)
119	VDDP-A2	S	3.3 V filtered digital power supply for AMCLK
120	AIN	I	Serial input of digital stereo audio
	GPCI/O[23]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	PM[8]	O	Probe mux data output
121	GNDC	S	Digital core ground of 1.8 V supply
122	VSYNC#	O	SD digital video vertical sync output signal
	HDFI	I	HD digital video field index input signal
	GPI/O[24]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	DACTEST[9]	I	DACs test input
	PM[9]	O	Probe mux data output
123	VDDC	S	1.8 V digital core power supply
124	HSYNC#	O	SD digital video horizontal sync output signal
	HDHS	I	HD digital video horizontal sync input signal
	GPCI/O[25]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
125	GNDP	S	Digital periphery ground of 3.3 V supply
126	VCLKx2	O	Digital video clock output / 27,000 (for SD interlaced), 54,000 (SD progressive) or 135,000 (for HD) MHz

No.	Pin Functions	Direction	Description
	COSYNC	O	Composite sync output / Active only when component analog output is selected
	ICGPCI/O[1]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the microprocessor
127	VDDP	S	3.3 V digital periphery power supply
128	VID[7]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	GPCI/O[26]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
129	VID[6]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	ICGPCI/O[2]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the microprocessor
130	VID[5]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	IDGPCI[1]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the DSP
131	GNDP	S	Digital periphery ground of 3.3 V supply
132	VID[4]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	GPCI/O[27]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
133	VID[3]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	GPCI/O[28]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	SERVOCLK	O	SERVO channel clock output for AFE by-pass
134	VID[2]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	GPCI/O[29]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	SSEL[0]	O	SERVO channel select output for AFE by-pass
135	VDDP	S	3.3 V digital periphery power supply
136	VID[1]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	GPCI/O[30]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	SSEL[1]	O	SERVO channel output for AFE by-pass
137	VID[0]	O	Digital 4: 2: 2 video luma/chroma output, interleaved U, Y V Y
	ICGPCI/O[3]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the microprocessor
138	GNDP	S	Digital periphery ground of 3.3 V supply
139	GNDA	S	Ground plane of internal PLL circuit
140	RESET#	ID	Reset input (active low)
141	VDDA	S	1.8 V power supply for internal PLL circuit
142	XO	AO	Output to a crystal that is connected to GCLKP If a crystal is not used at GCLKP, XO must be left not connected.
143	GCLKP	ID	27.000MHz clock or crystal input for main processing clock generation.
144	GCLKA	ID	27.000MHz clock input for audio master clock generation.
	GPCI/O[31]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
	GCLKPOUT	O	GCLKP output
145	VDDP	S	3.3 V digital periphery power supply
146	ICGPCI/O[4]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the microprocessor
147	S/PDIFIN[0]	I	S/PDIF receiver input for digital coded or reconstructed audio data
	GPCI/O[33]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
148	ICGPCI/O[5]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the microprocessor
149	S/PDIFIN[1]	I	S/PDIF receiver input for digital coded or reconstructed audio data
	GPCI/O[34]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
150	IDGPCI/O[3]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the DSP
	FCUIF[33]	I	Flash card interface unit input signal
151	GNDP	S	Digital periphery ground of 3.3 V supply
152	DUPRD0	I	First debug UART data input
	GPCI/O[35]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
153	DUPTD0	O	First debug UART data output
	GPCI/O[36]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
154	VDD-IP	S	3.3 V periphery reference voltage
155	DUPRD1	I	Second debug UART data output
	GPCI/O[37]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
156	DUPTD1	O	Second debug UART data output
	GPCI/O[38]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
157	GNDDACD	S	Ground for the video DACs 3.3 V analog power supply
158	CVBS/G/Y	AO	When the Vaddis 778 outputs composite (SCART or non-SCART) video, this line is CVBS output
	(DAC A)		When the Vaddis 778 outputs RGB, this line is the Green output When the Vaddis 778 outputs YUV, this line is the Y output
159	CVBS/C	AO	When the other Vaddis 778 output are not SCART video, the output on this line can be either CVBS or C / the
	(DAC D)		selection is independent of the specific selection of the other three DACs

No.	Pin Functions	Direction	Description
			When the Vaddis 778 outputs composite SCART video, this line is the Y output
160	VDDDAC	S	3.3 V analog power supply for the video DACs
161	Y/R/V (DAC B)	AO	When the Vaddis 778 outputs composite non-SCART video, this line is Y output When the Vaddis 778 output RGB, this line is the Red output When the Vaddis 778 outputs YUV, this line is the V output When the Vaddis 778 outputs composite SCART video, this line is the C output
162	C/B/U (DAC C)	AO	When the Vaddis 778 outputs composite (SCART or non-SCART) video, this line is C output When the Vaddis 778 outputs RGB, this line is the Blue output When the Vaddis 778 outputs YUV, this line is the U output
163	RSET	AI	Resistive load for gain adjustment of the DACs
164	GNDDACP	S	Ground for the video DACs 3.3 V analog power supply
165	GNDDABS2	S	Common ground for the video and SERVO DACs
166	GNDDACPS	S	Ground for the SERVO DAC 3.3 V analog power
167	DACDRIVE[0]	AO	Drive DACs output signal
168	VDDDACS	S	3.3 V SERVO DACs power supply
169	DACDRIVE[1]	AO	Drive DACs output signal
170	GNDDACDS	S	Ground for the SERVO DAC 3.3 V analog power supply
171	VDDAFERF	S	3.3 V analog RF (AFE) power supply
172	RFINP	AI	RF positive input signal (differential input) // RF input signal (single ended)
173	RFINN	AI	RF negative input signal (differential input) // RF reference input signal
174	GNDAFERF	S	Analog RF (AFE) ground of 3.3 V supply
175	VDDAFES	S	3.3 V analog SERVO (AFE) power supply
176	ADCIN[7]	AI	SERVO ADC input signal (e.g. from RF amplifier)
177	ADCIN[6]	AI	SERVO ADC input signal from RF amplifier
178-183	ADCIN[5-0]	AI	SERVO ADC input signal (e.g. from RF amplifier)
184,185	VBIASS[0, 1]	AI	Servo analog signal reference voltage inputs
186	GNDAFES	S	Analog SERVO (AFE) ground of 3.3 V supply
187	PWMACT[0] GPCI/O[39] DVDDAT[0] NRZDATA	O I/O I I	PWM0 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP or FCU SW AV data input for FE by-pass NRZ data input for AFE and DRC by-pass
188	PWMACT[1] GPCI/O[40] DVDDAT[1] NRZCLK	O I/O I I	PWM1 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP or FCU SW AV data input for FE by-pass NRZ clock input for AFE and DRC by-pass
189	PWMCO[0] GPCI/O[41] DVDDAT[2] NRZLOCK	O I/O I I	PWM2 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP SW AV data input for FE by-pass NRZ lock input for AFE and DRC by-pass
190	GNDC	S	Digital core ground of 1.8 V supply
191	PWMCO[1] GPCI/O[42] DVDDAT[3] NRZDFCT	O I/O I I	PWM3 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP SW AV data input for FE by-pass NRZ defect input for AFE and DRC by-pass
192	VDDC	S	1.8 V digital core power supply
193	PWMCO[2] GPCI/O[43] FCUIF[34] DVDDAT[4]	O I/O O I	PWM4 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP SW Flash card interface unit input signal AV data input for FE by-pass
194	PWMCO[3] GPCI[44] FCUIF[35] IDGPCI/O[2] DVDDAT[5]	O I/O I/O I/O I	PWM5 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP SW Flash card interface unit I/O signal General purpose I/O, monitored/controlled by the microprocessor or DSP SW When input, the pin can be used as general purpose external interrupt to the DSP AV data input for FE by-pass
195	GNDPWMS	S	SERVO PWMs ground of 3.3 V supply
196	PWMCO[4] GPCI/O[45] DVDDAT[6]	O I/O I	PWM6 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP SW AV data input for FE by-pass
197	VDDPWMS	S	3.3 V SERVO PWM power supply
198	PWMCO[5] GPCI/O[46] FCUIF[36] DVDDAT[7]	O I/O I/O I	PWM7 output signal General purpose I/O, monitored/controlled by the microprocessor or DSP SW Flash card interface unit I/O signal AV data input for FE by-pass

No.	Pin Functions	Direction	Description
199	PWMCO[6]	O	PMW8 output signal
	IDGPCI/O[4]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
			When input, the pin can be used as general purpose external interrupt to the DSP
	FCUIF[32]	I/O	Flash card interface unit I/O signal
	DVDSTRB	I	AV data input for FE by-pass
	RFDAT[4]	I	RF channel sample data inputs for AFE by-pass
200	DEFFCT	I/O	Disc defect input or output signal
	IDGPCI/O[5]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
			When input, the pin can be used as general purpose external interrupt to the DSP
	FCUIF[37]	I/O	Flash card interface unit I/O signal
	DVDREQ	O	AV data request output for FE by-pass / Programmable polarity
201	ICGPI/O[6]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP or FCU SW
			When input, the pin can be used as general purpose external interrupt to the microprocessor
	DVDVALID	I	AV data valid input for FE by-pass / Programmable polarity
202	GNDP	S	Digital periphery ground of 3.3 V supply
203	ICGPI/O[7]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP or FCU SW
			When input, the pin can be used as general purpose external interrupt to the microprocessor
	DVDERR	I	AV error input for FE by-pass / Programmable polarity
204	VDDP	S	3.3 V digital periphery power supply
205	SLEDPULSE	I	Sled optical encoder input
	IDGPCI/O[6]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
			When input, the pin can be used as general purpose external interrupt to the DSP
	FCUIF[30]	I	Flash card interface unit output signal
	DVDSOS	I	AV start of sector indication input for FE by-pass / Programmable polarity
206	SPIND LEPULSE	I	Spindle optical encoder input
	IDGPCI/O[7]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW
			When input, the pin can be used as general purpose external interrupt to the DSP
	FCUIF[31]	I/O	Flash card interface unit I/O signal
207	SSCCLK	I/O	SSC clock input signal
	GPCI/O[47]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP or FCU SW
208	SSCTXD	O	SSC data output signal
	GPCI/O[16]	I/O	General purpose I/O, monitored/controlled by the microprocessor or DSP SW

■ BLOCK DIAGRAM

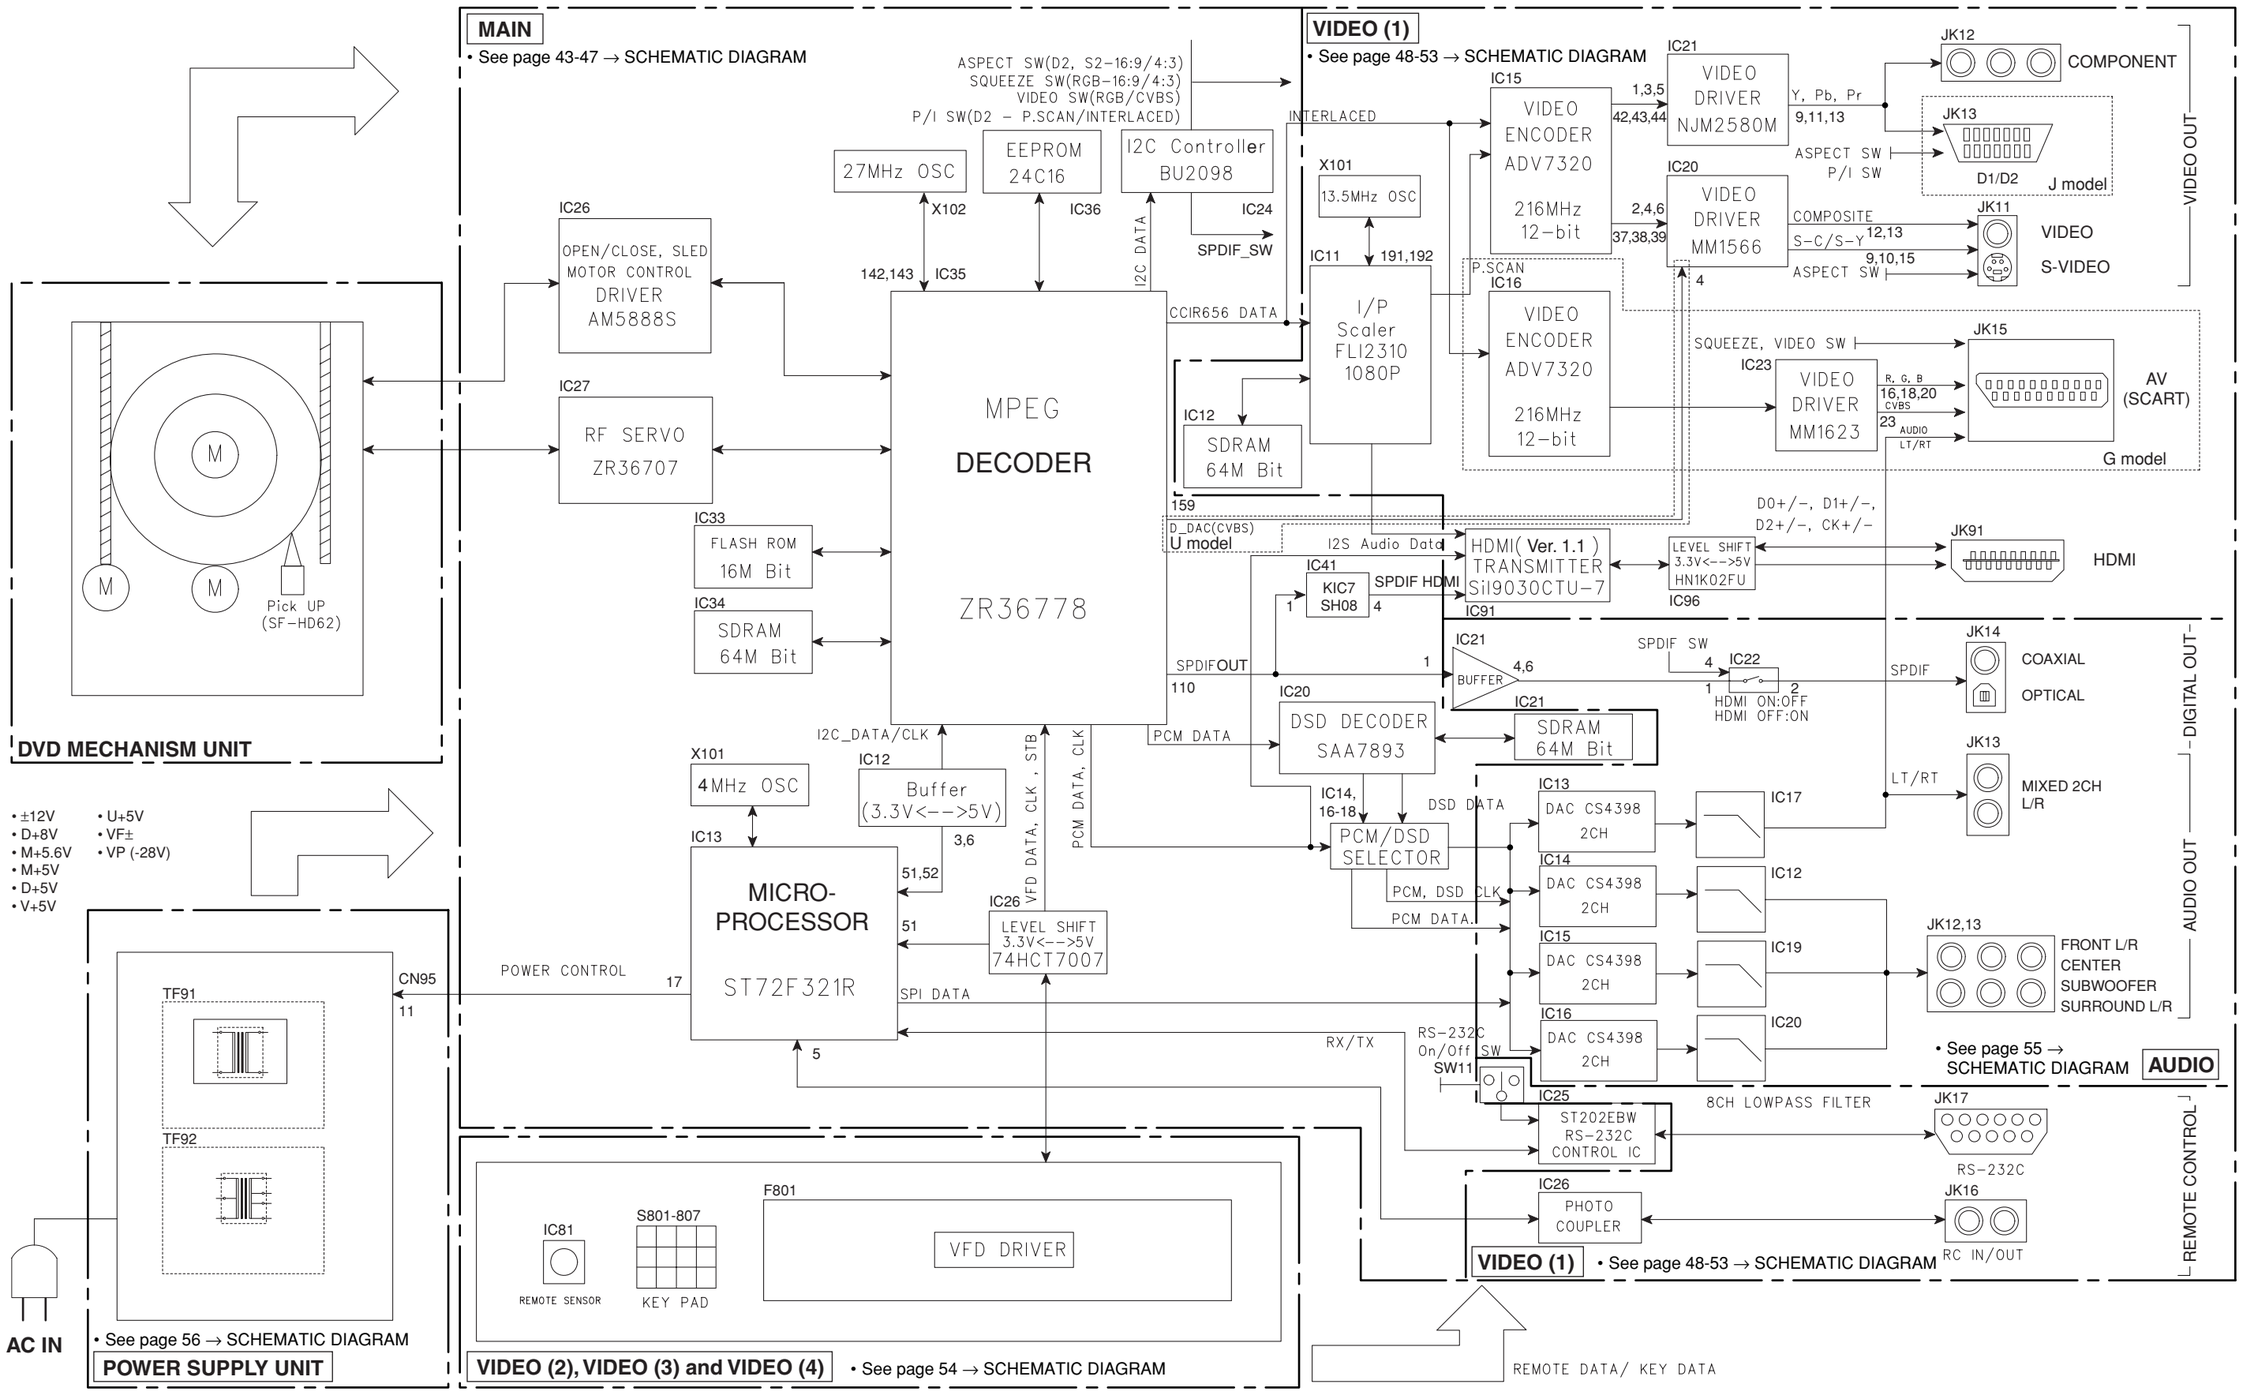

■ WIRING DIAGRAM

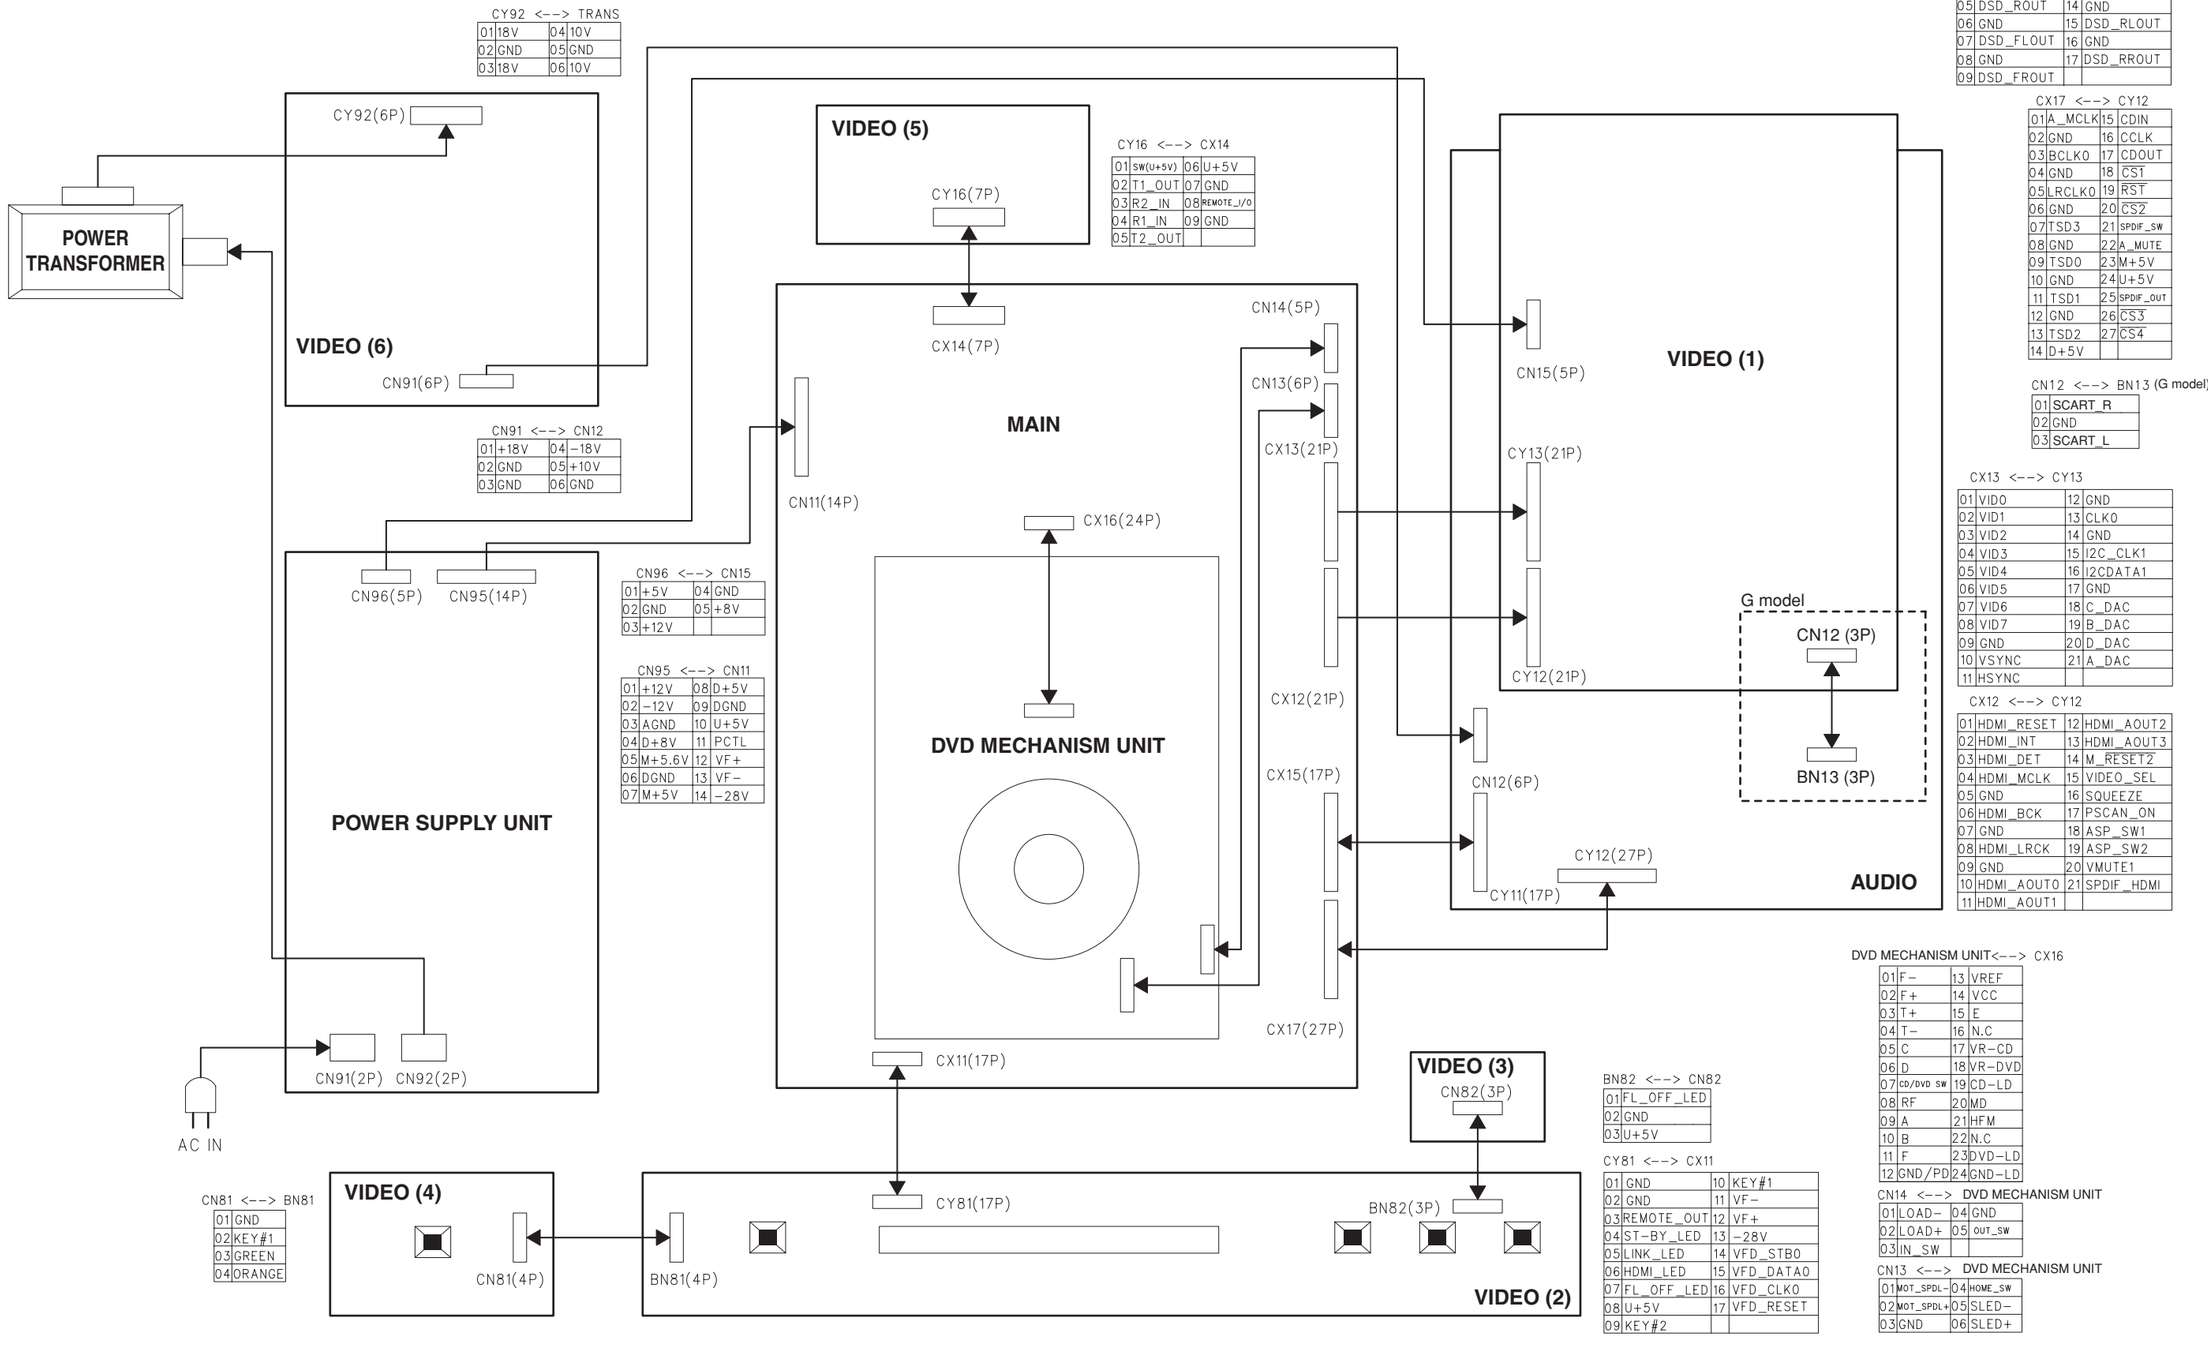

■ PRINTED CIRCUIT BOARDS

When any part not included in the replacement parts list has failed, replace the P.C.B..
パーツリストに記載されている部品以外は供給できません。部品交換が必要な場合はP.C.B.を交換してください。

MAIN P.C.B.
(Top view)

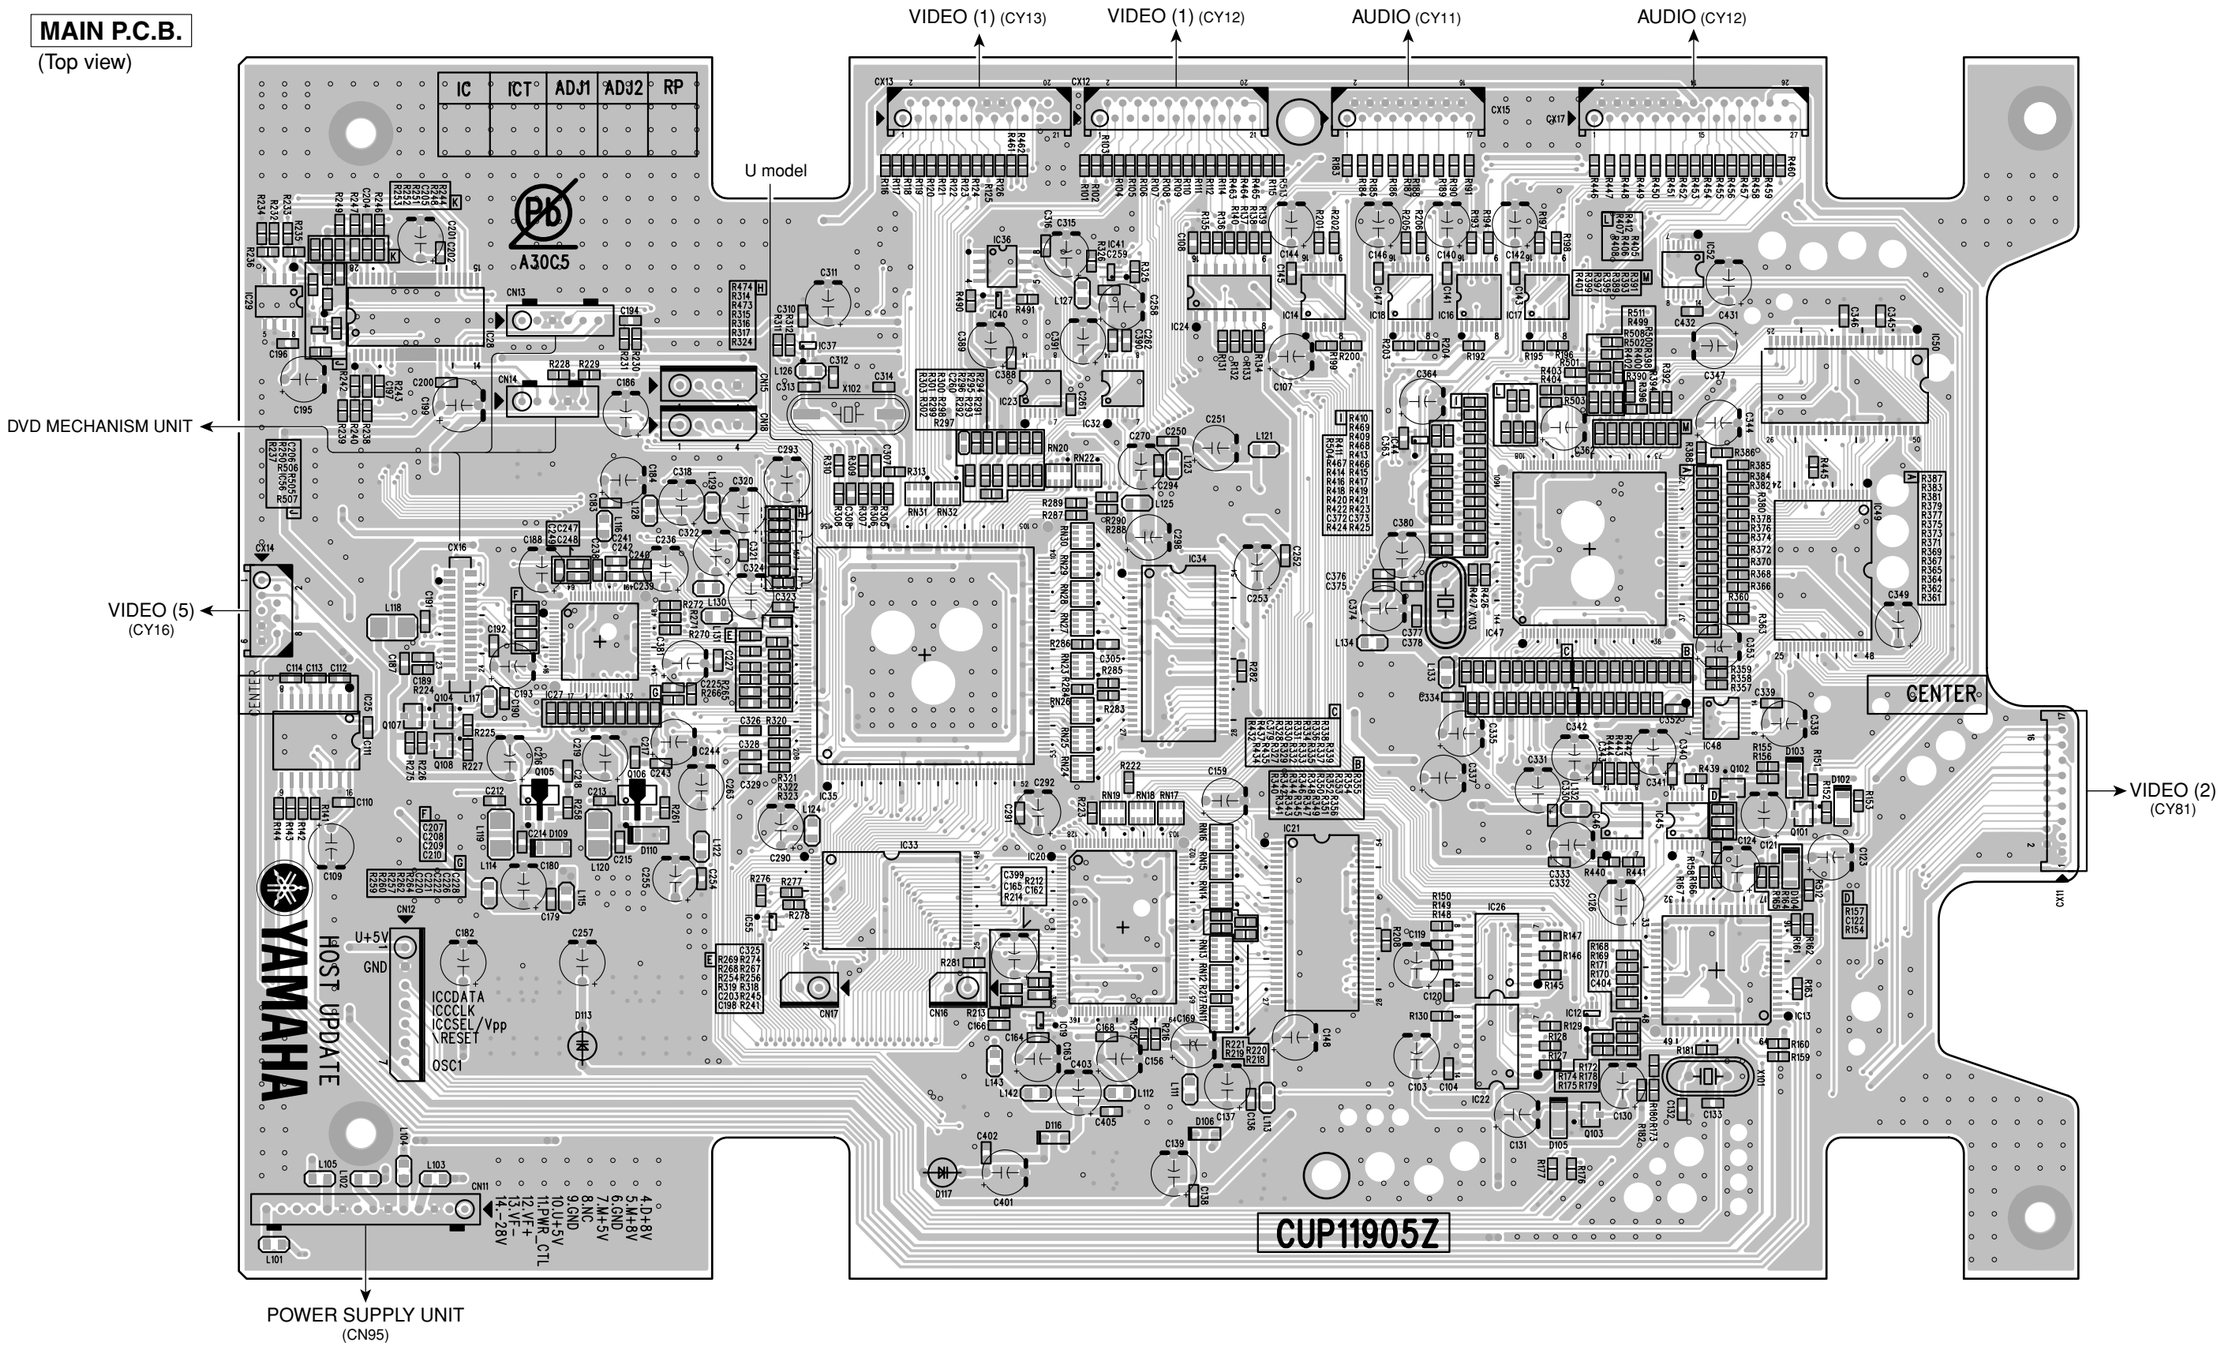

MAIN P.C.B. (Bottom view)

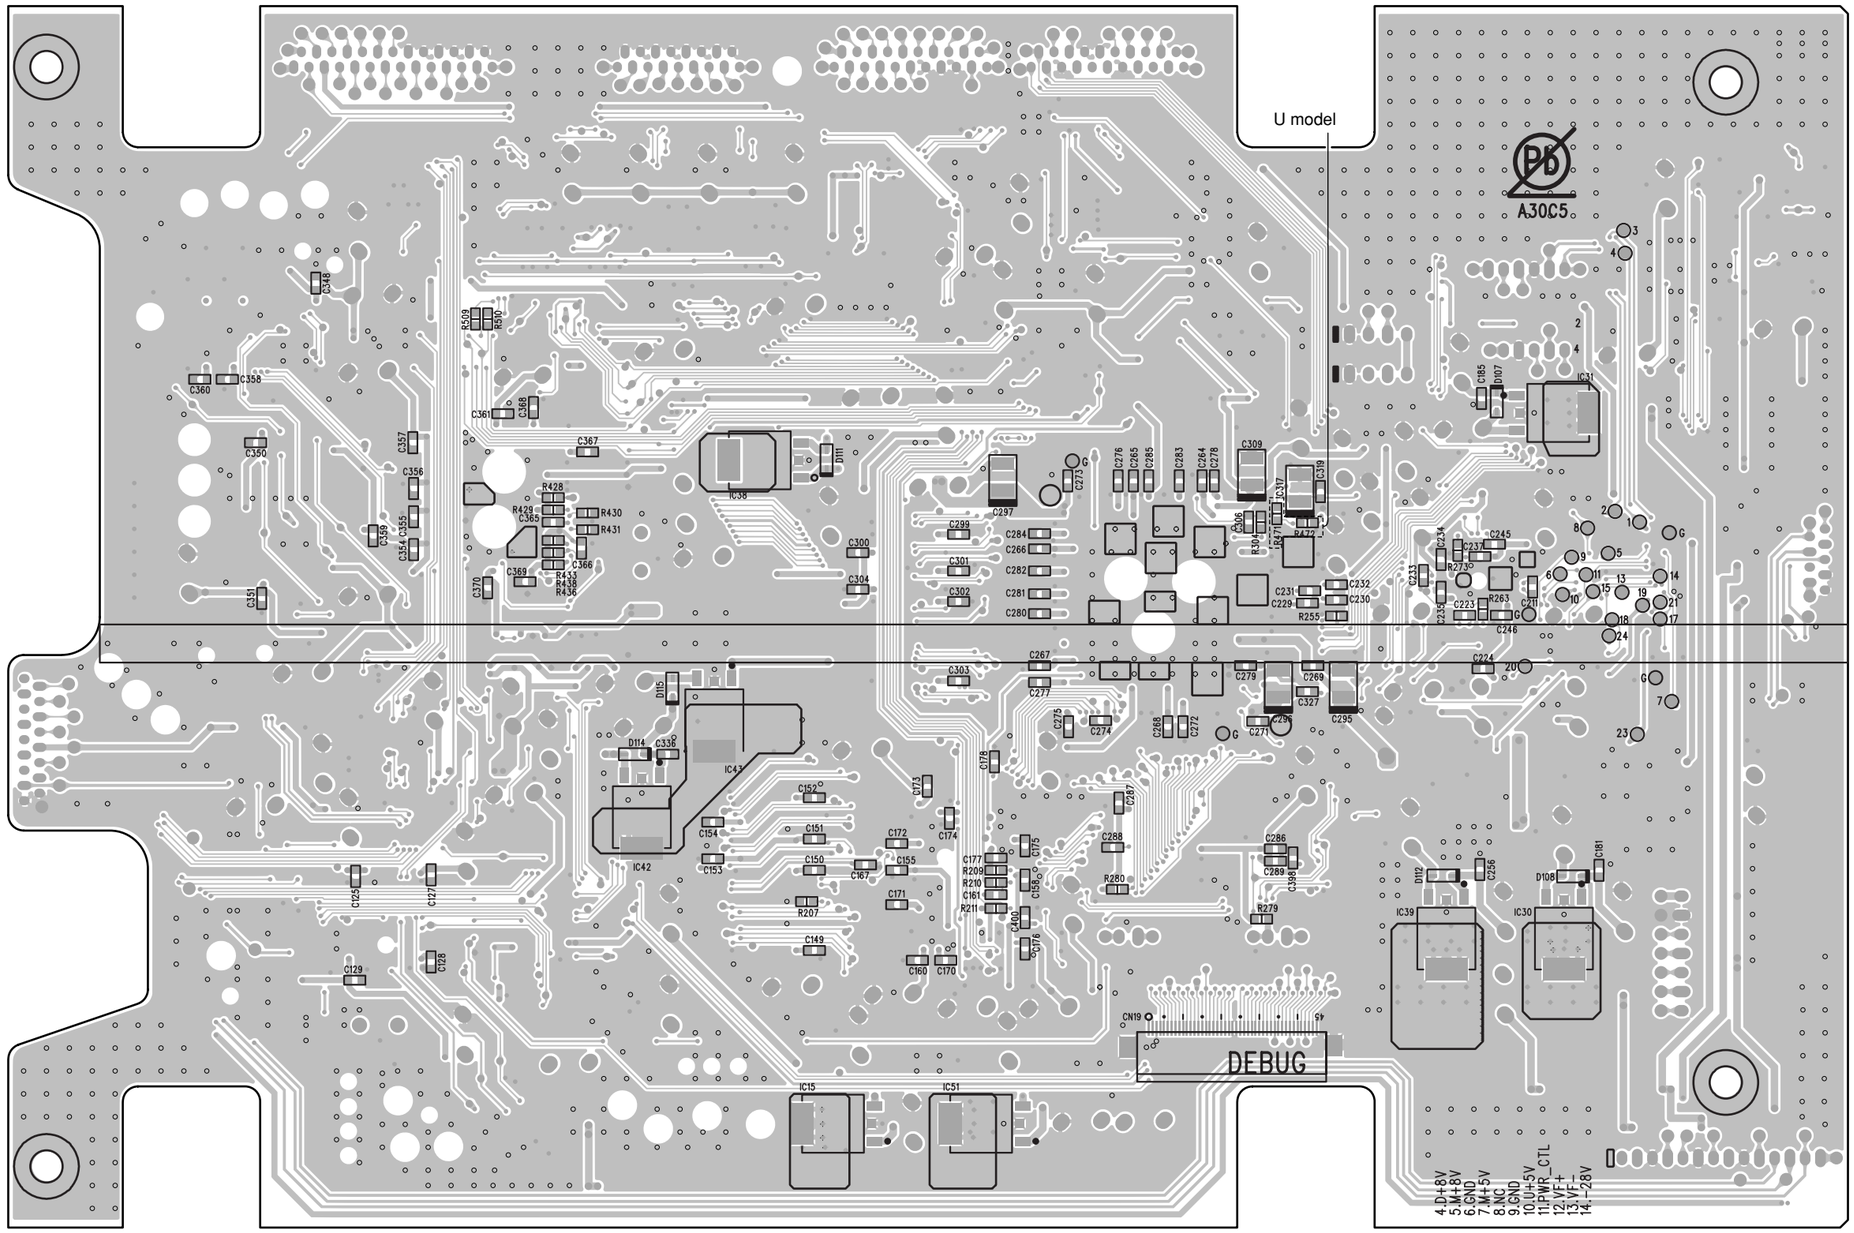

VIDEO (1) P.C.B.

(Top view)

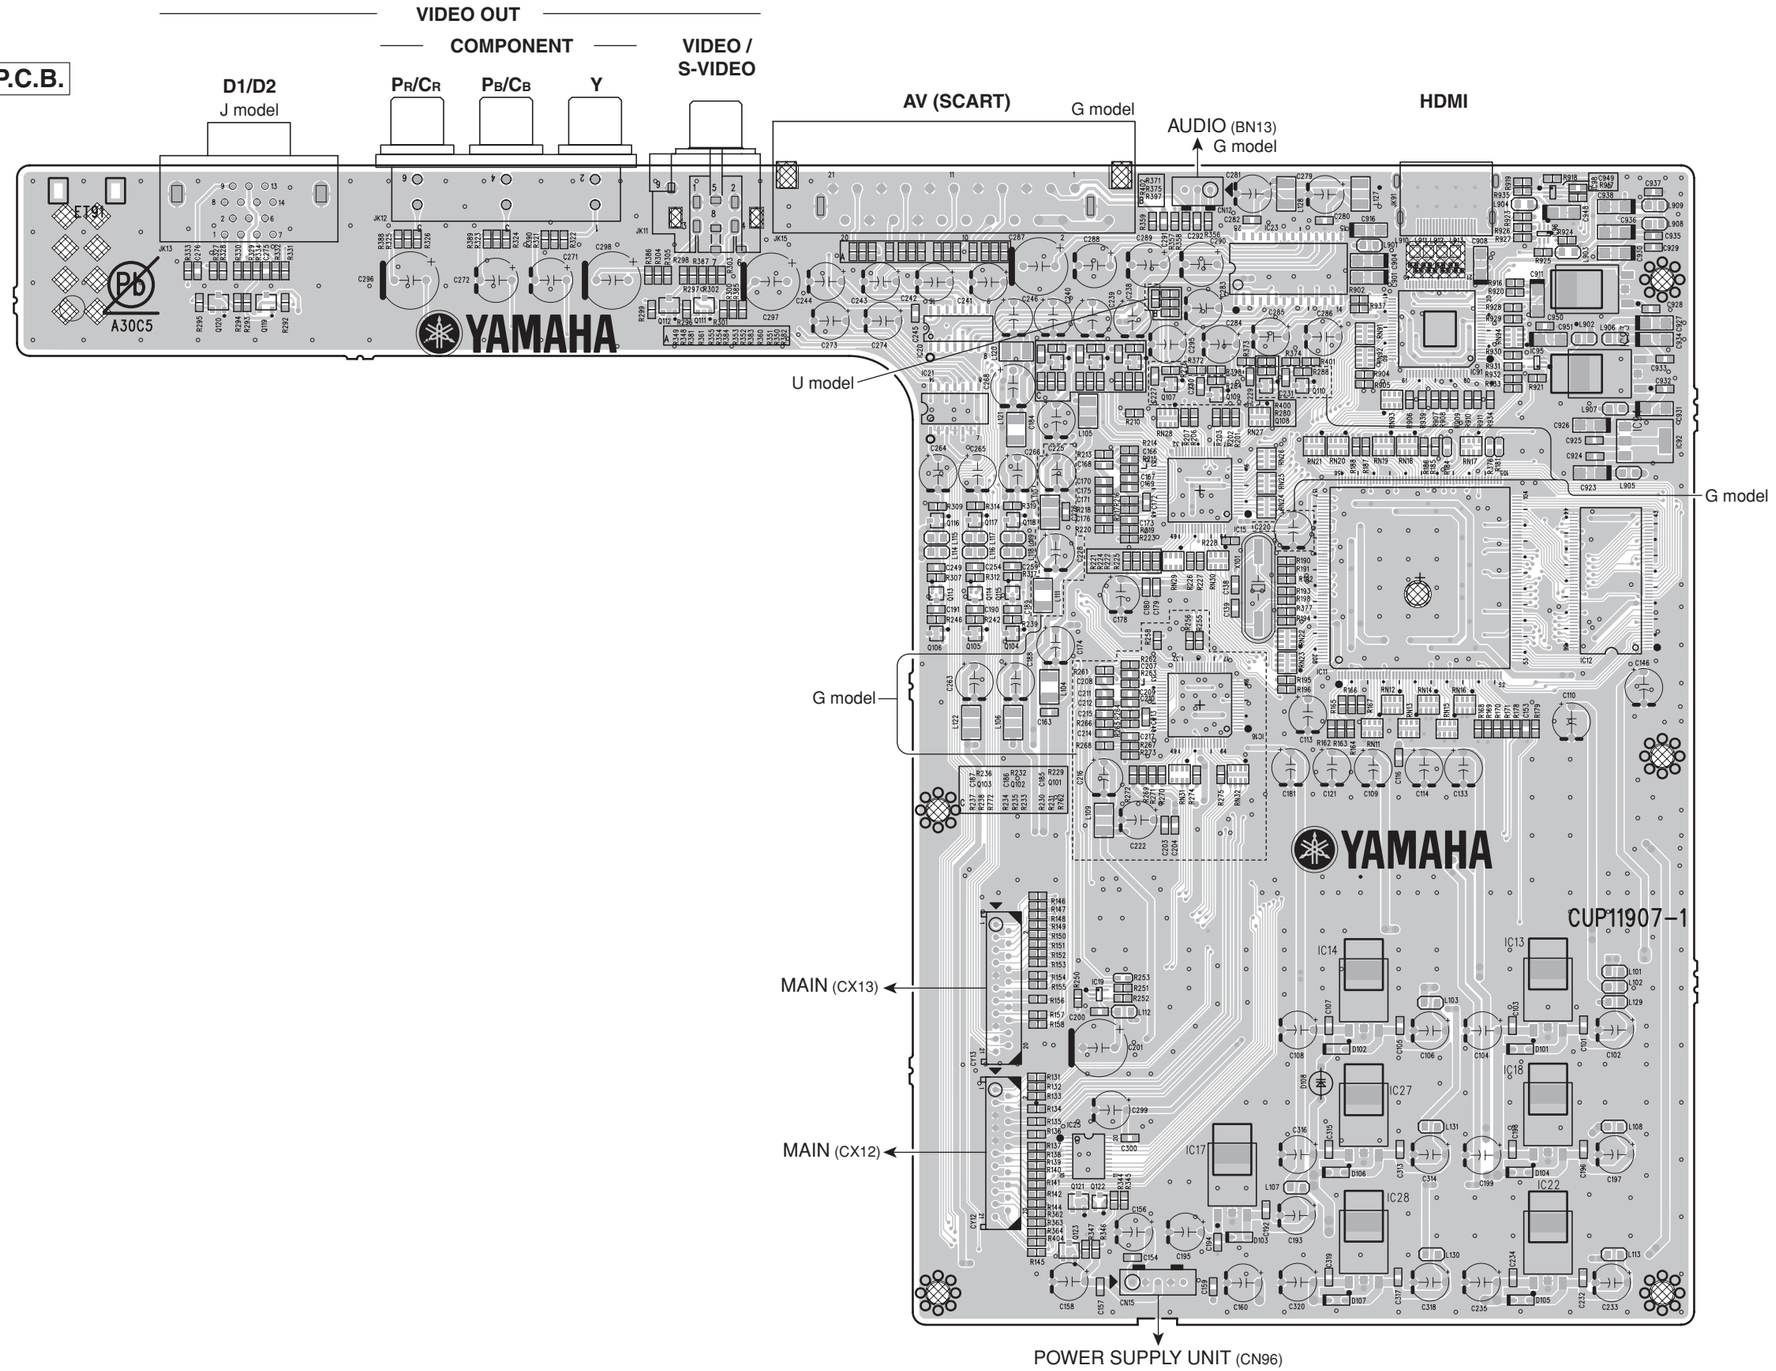

VIDEO (1) P.C.B.
(Bottom view)

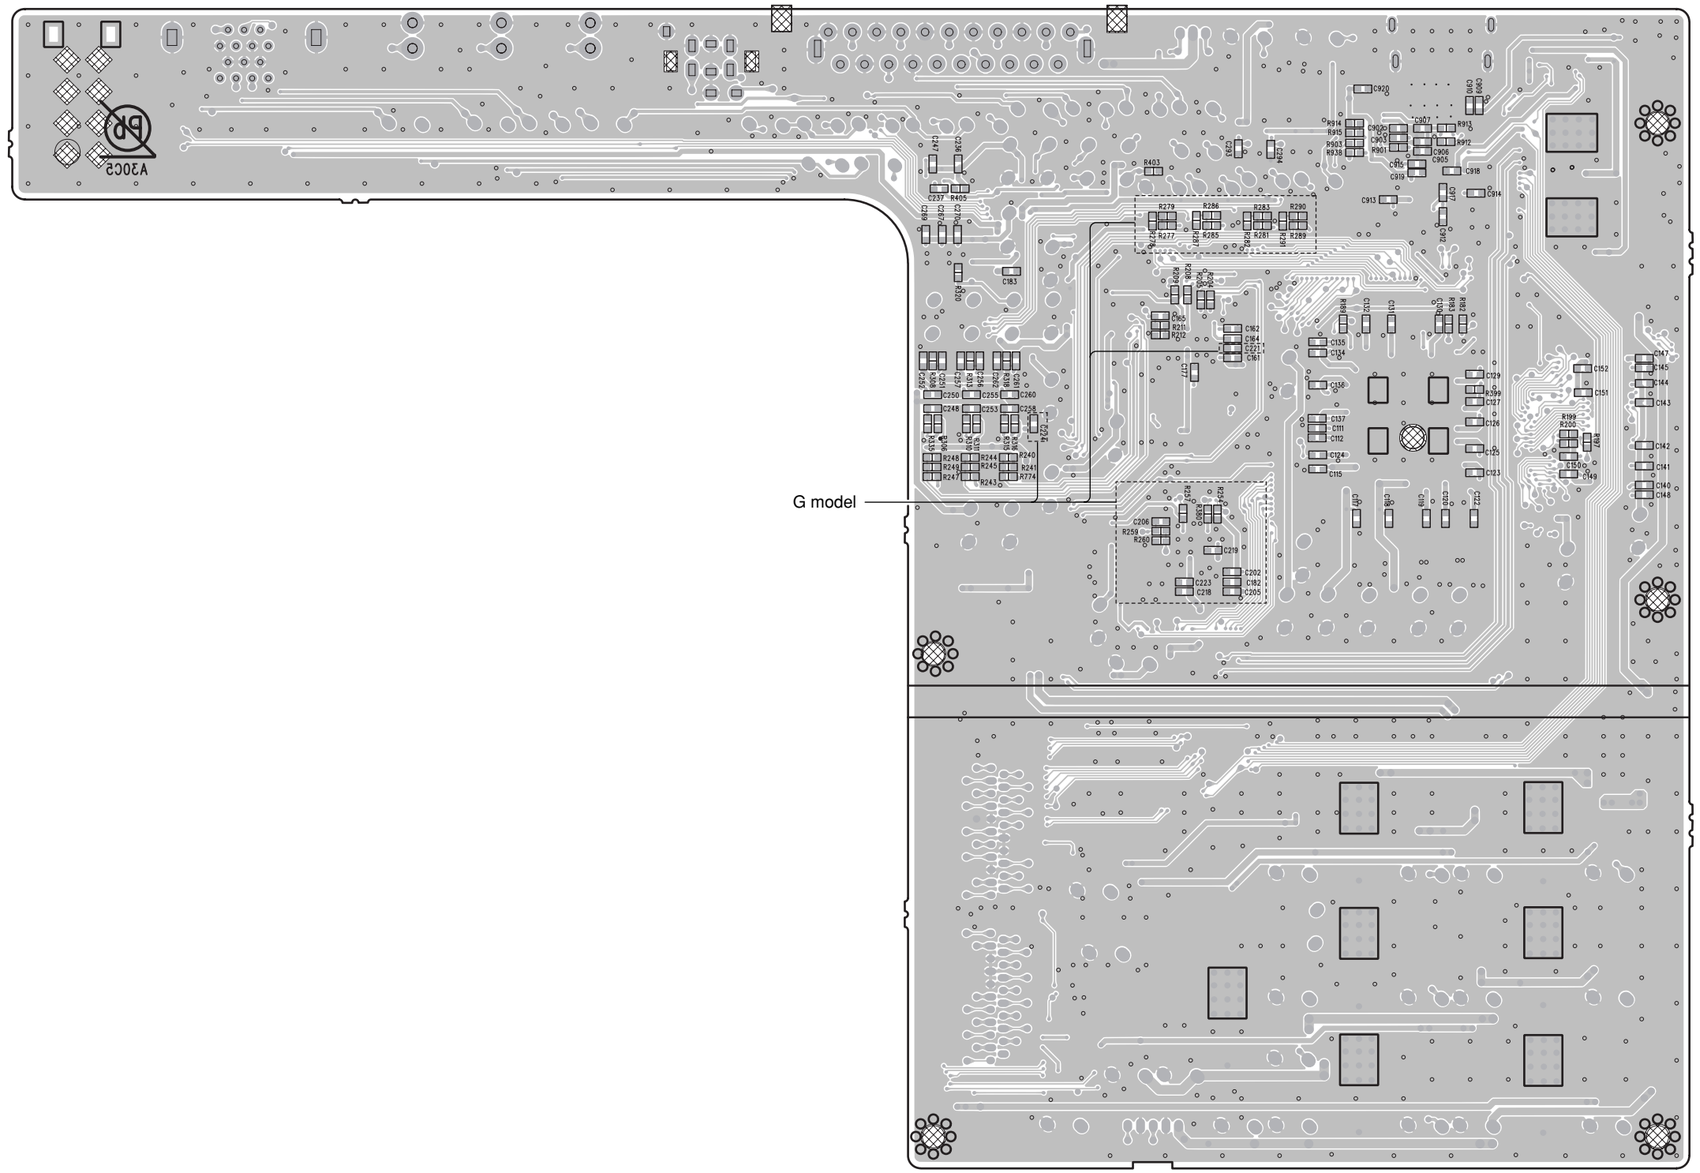

VIDEO (2) P.C.B.

(Top view)

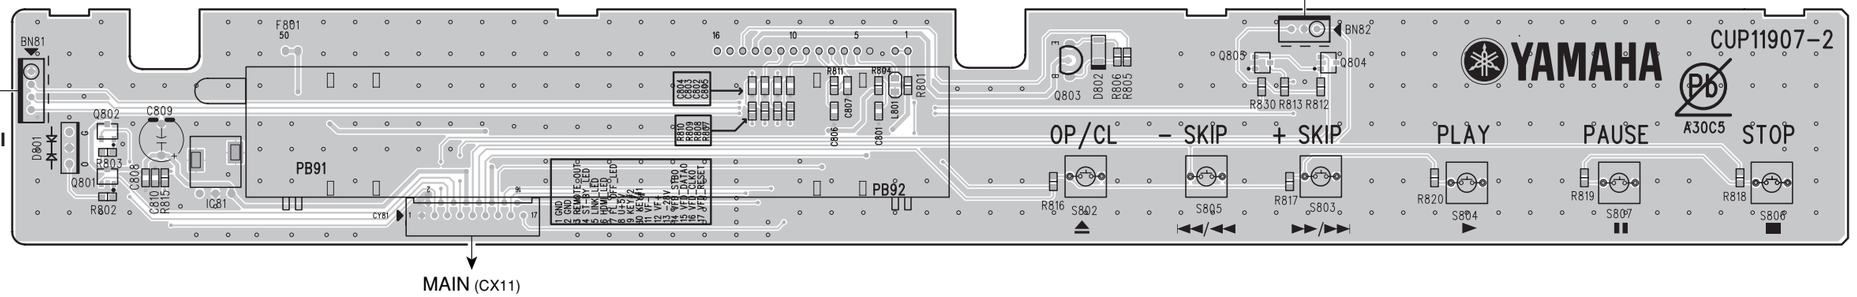

VIDEO (2) P.C.B.

(Bottom view)

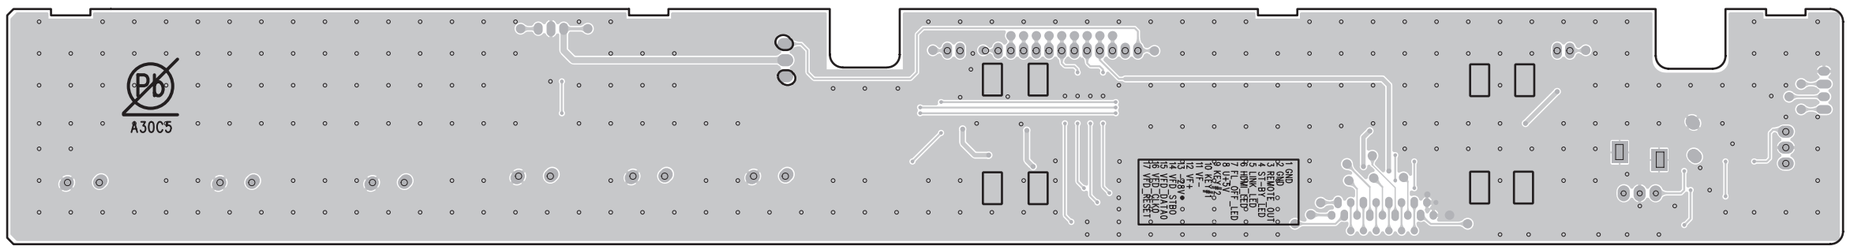

VIDEO (3) P.C.B.

(Top view)

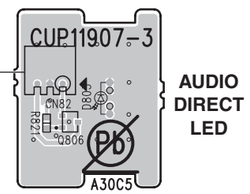

VIDEO (3) P.C.B.

(Bottom view)

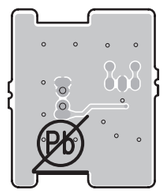

VIDEO (4) P.C.B.

(Top view)

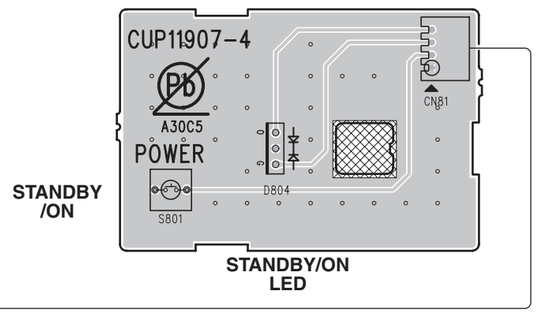

VIDEO (4) P.C.B.

(Bottom view)

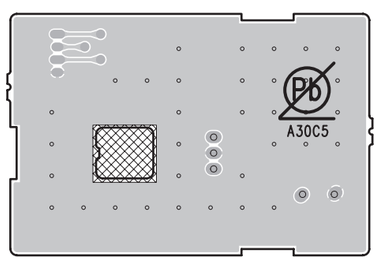

VIDEO (5) P.C.B. (Top view)

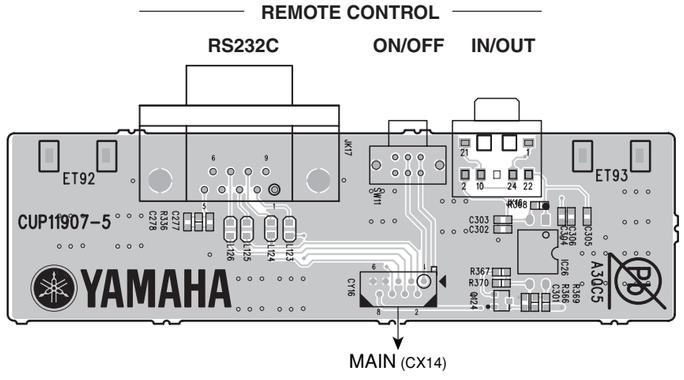

VIDEO (5) P.C.B. (Bottom view)

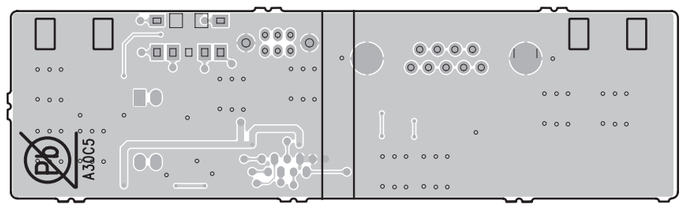

VIDEO (6) P.C.B. (Top view)

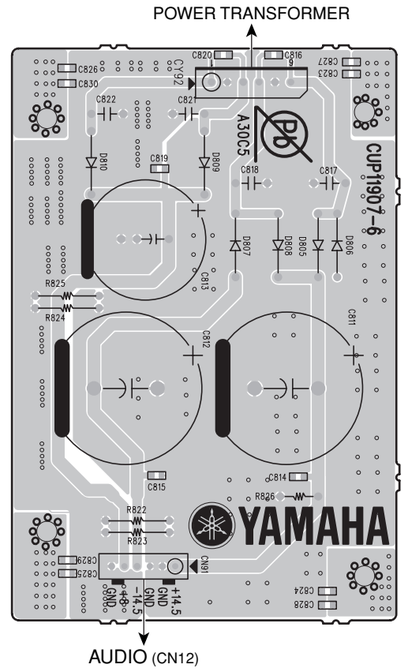

VIDEO (6) P.C.B. (Bottom view)

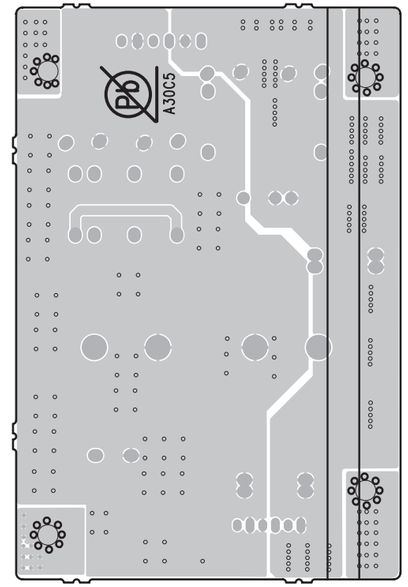

AUDIO P.C.B. (Top view)

AUDIO P.C.B. (Bottom view)

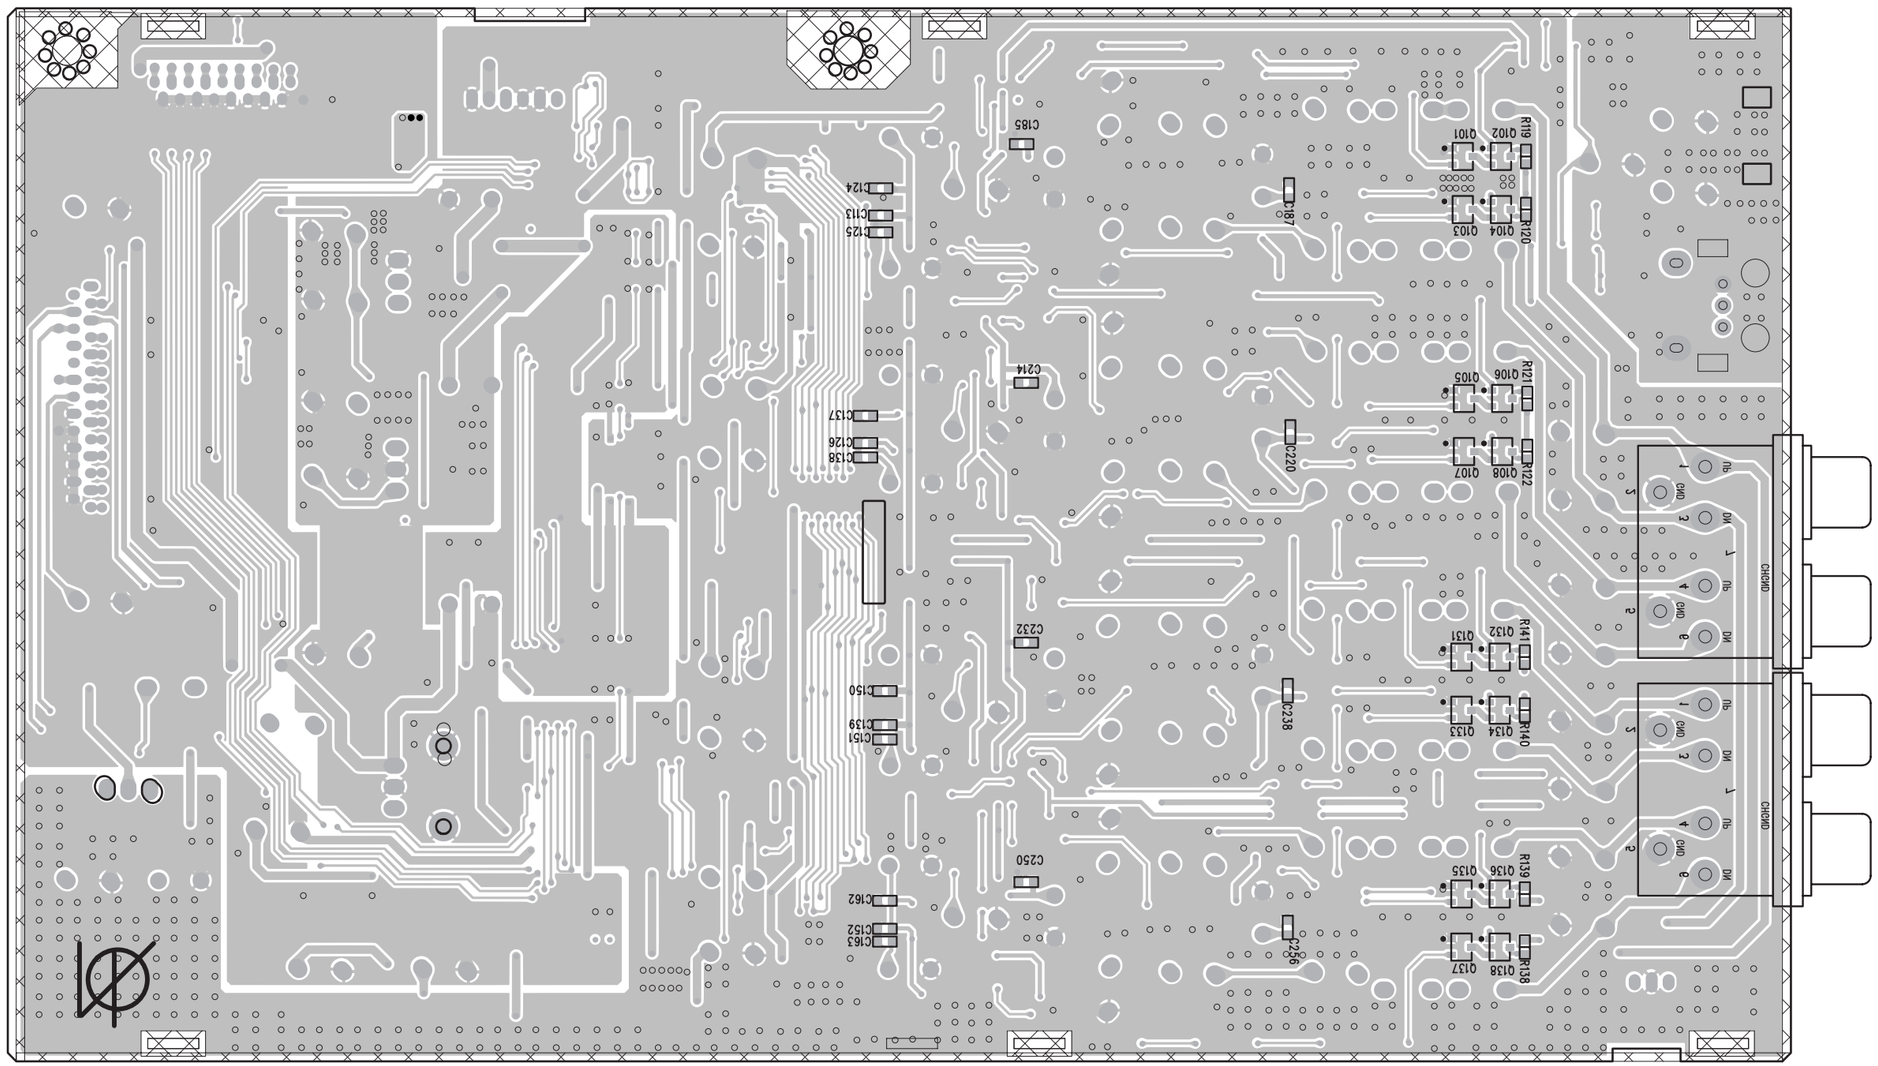

POWER SUPPLY UNIT (Top view)

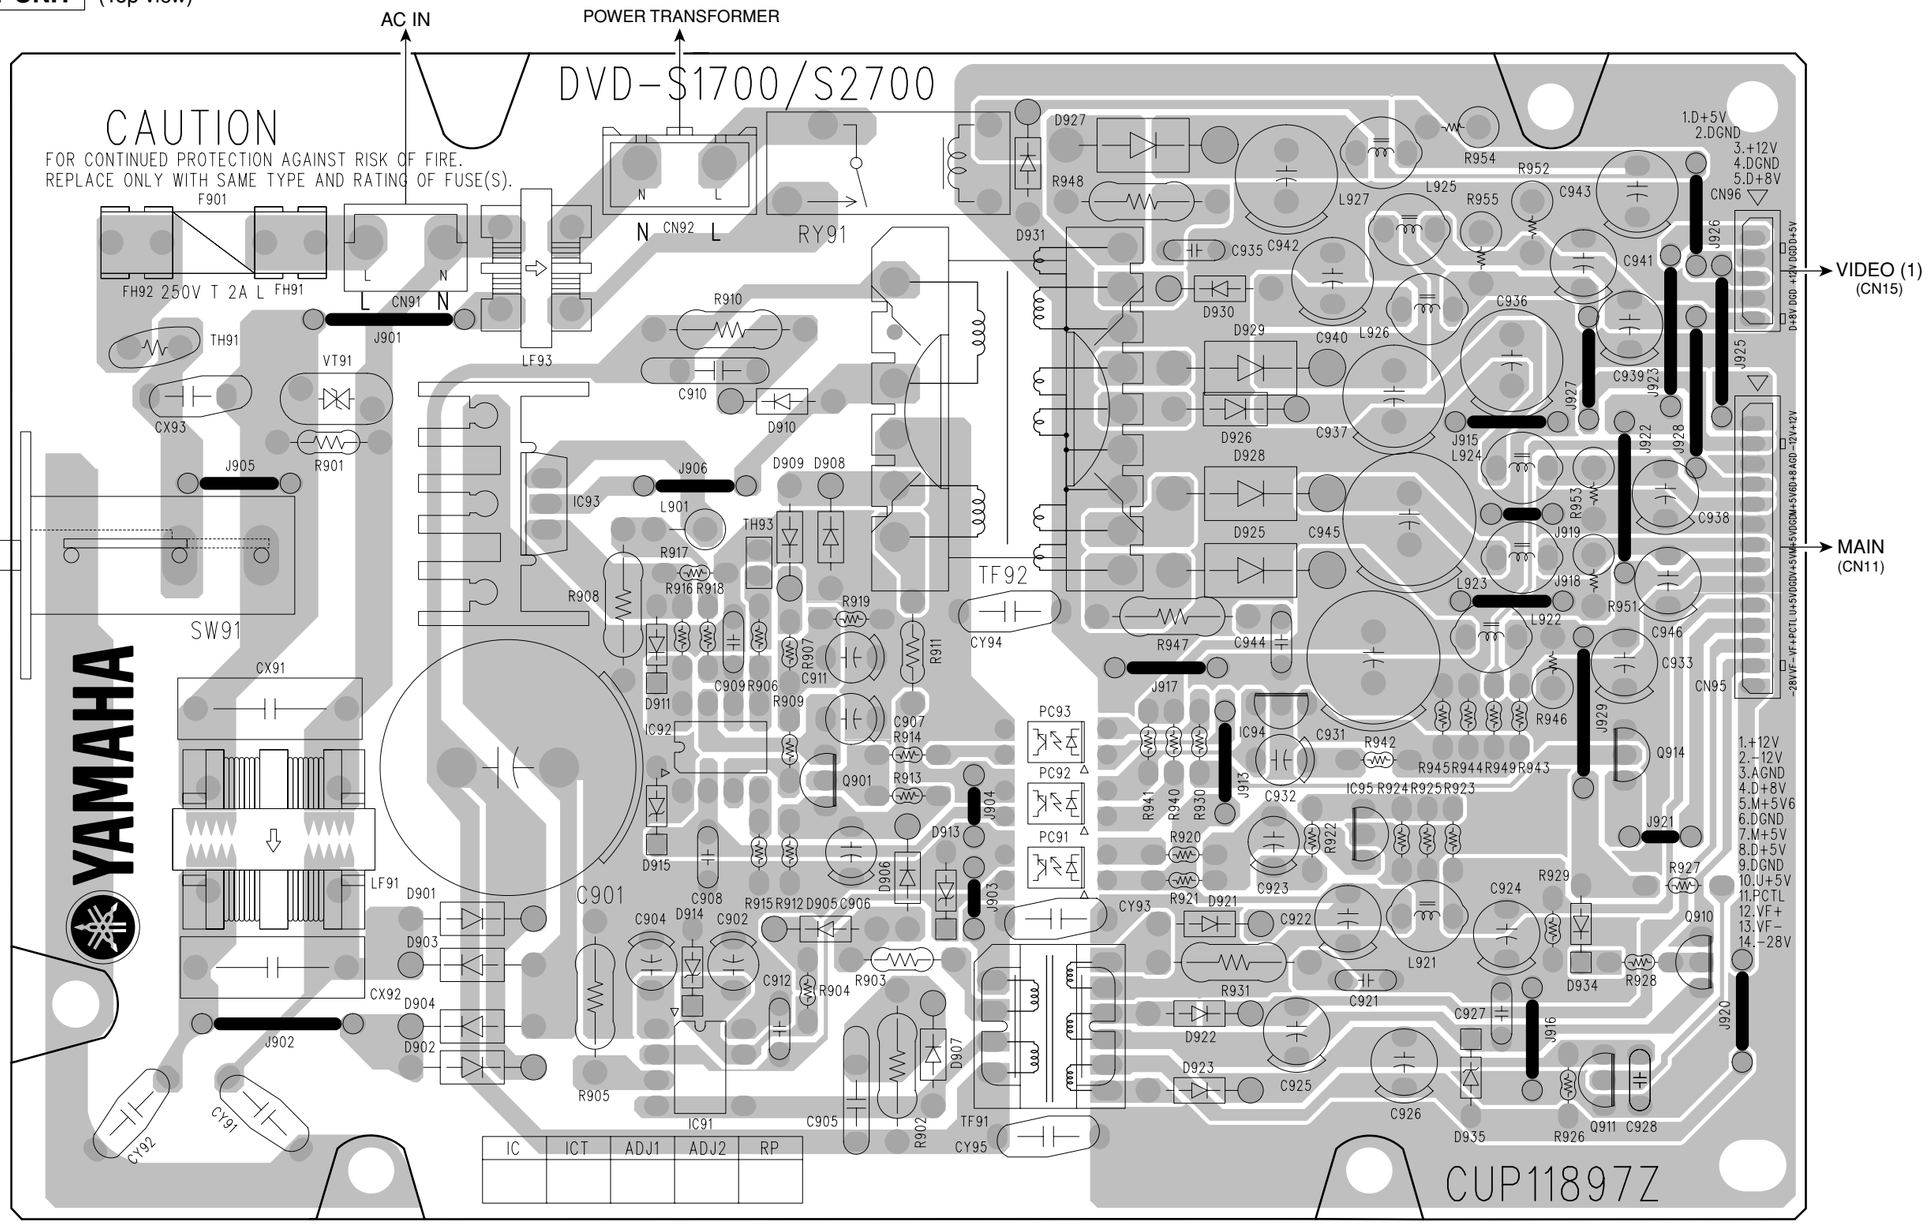

■ SCHEMATIC DIAGRAMS

When any part not included in the replacement parts list has failed, replace the P.C.B..
パーツリストに記載されている部品以外は供給できません。部品交換が必要な場合はP.C.B.を交換してください。

MAIN 1/5

HOST&CONNECTOR PART

RS-232C PART

Page 54 D5
to VIDEO (2)_CY81

Page 56 I3
to POWER SUPPLY UNIT_CN95

Page 48 B4
to VIDEO (1)_CY12

Page 48 B6
to VIDEO (1)_CY13

Page 54 G7
to VIDEO (5)_CY16

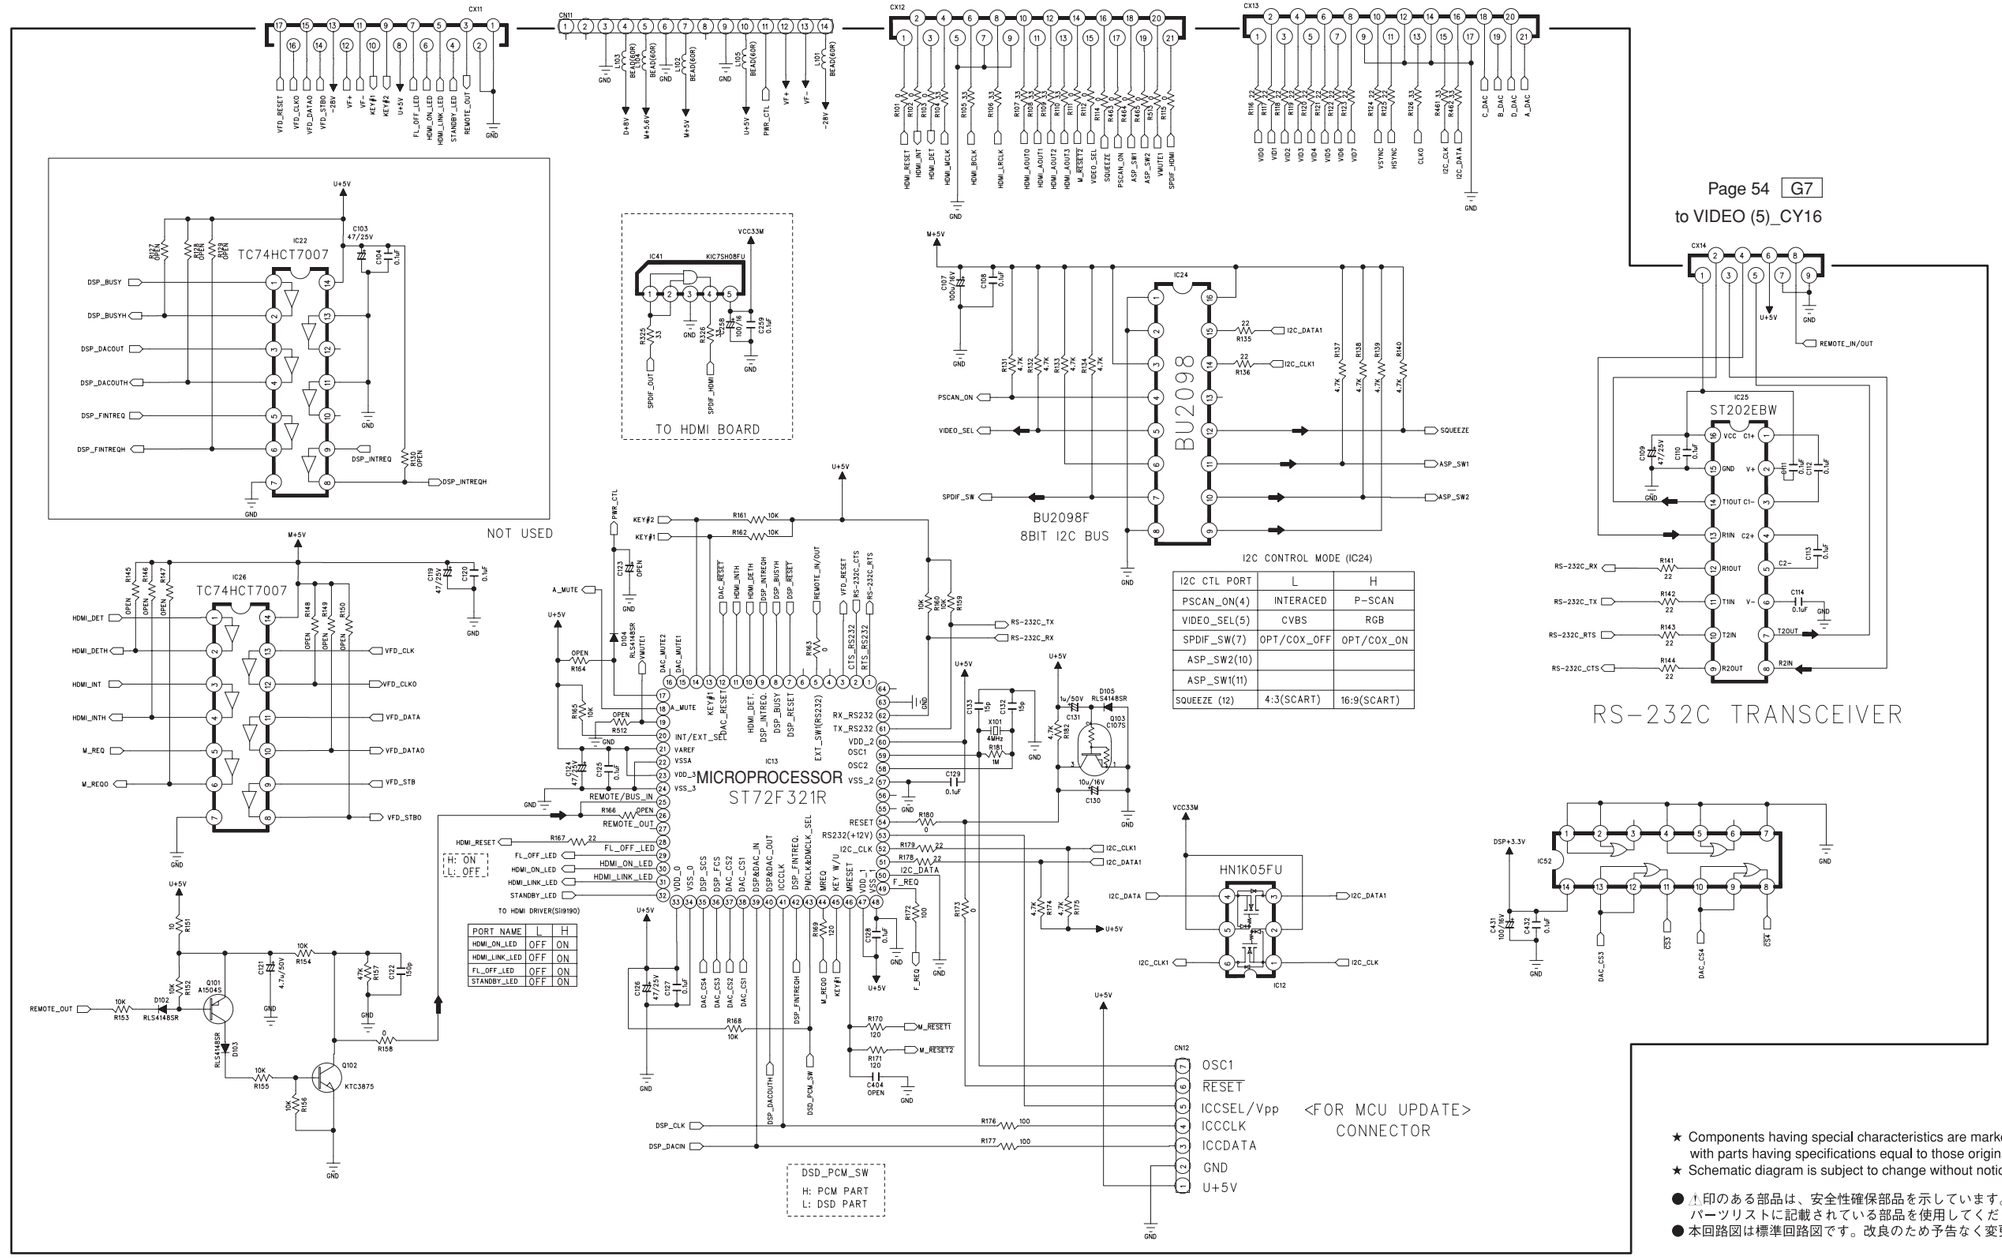

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

MAIN 2/5

<SACD PART , DSD/PCM DATA SWITCHING>

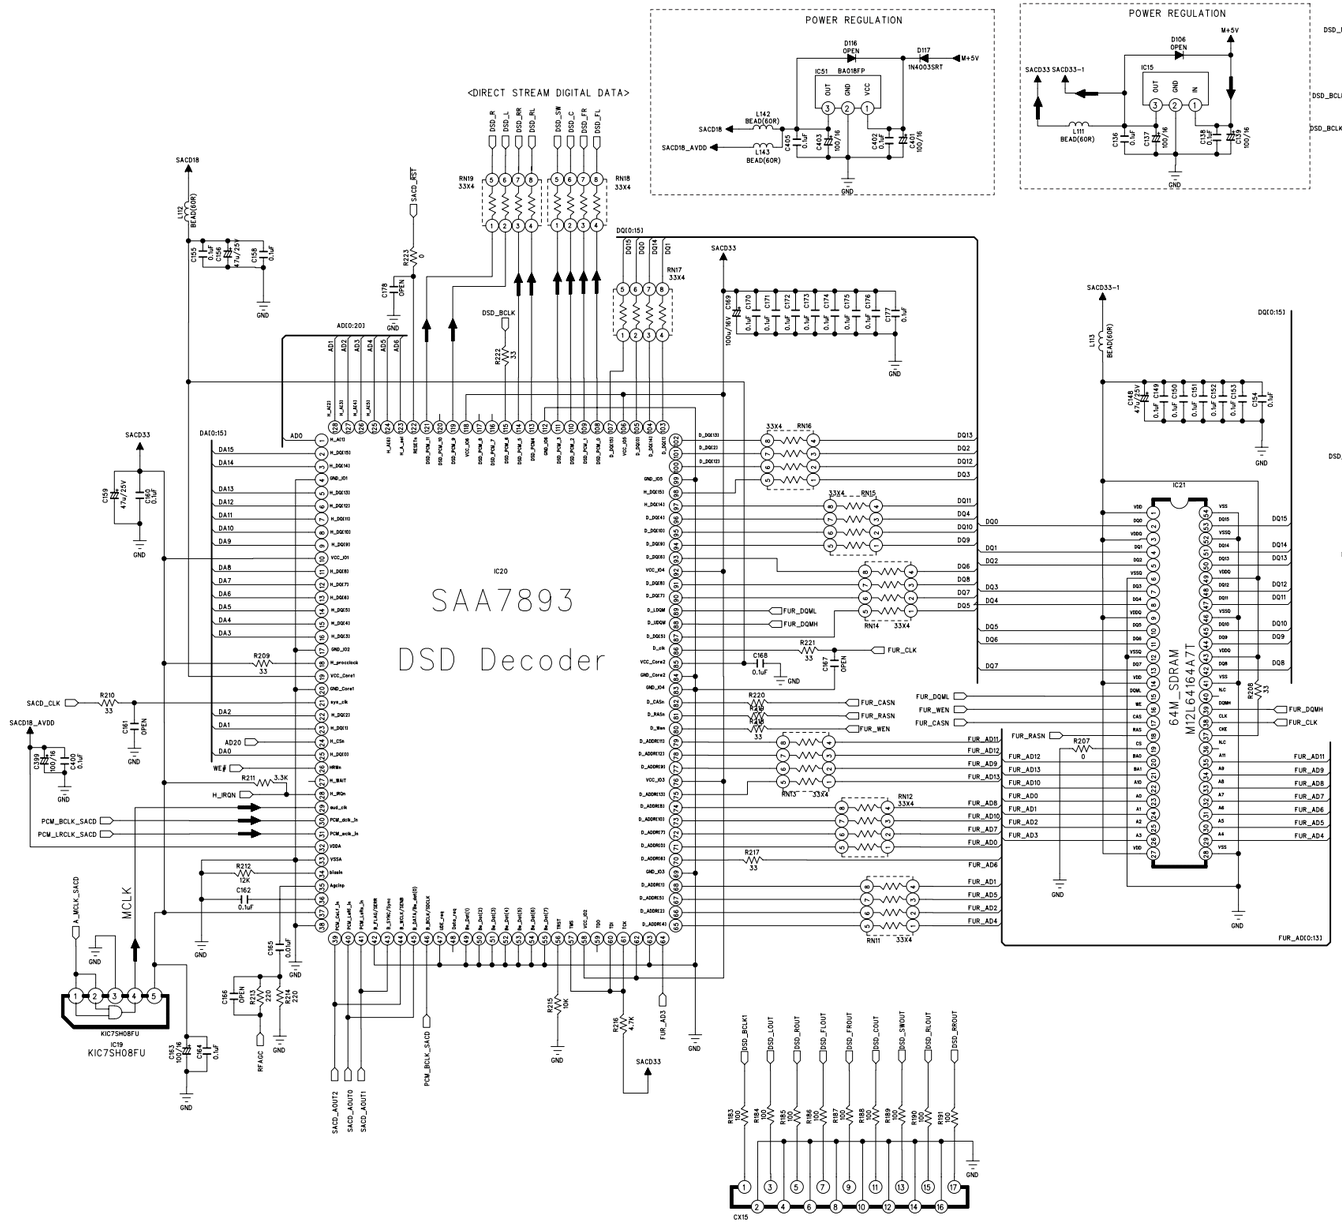

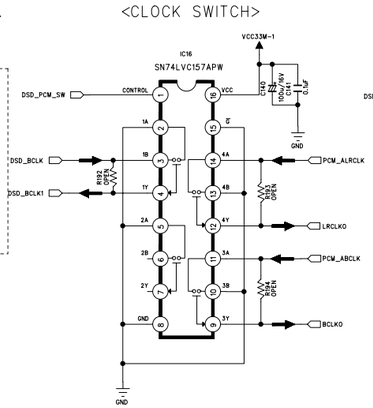

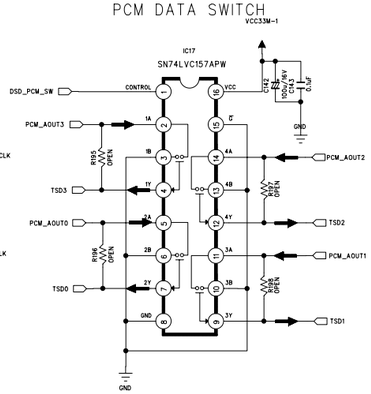

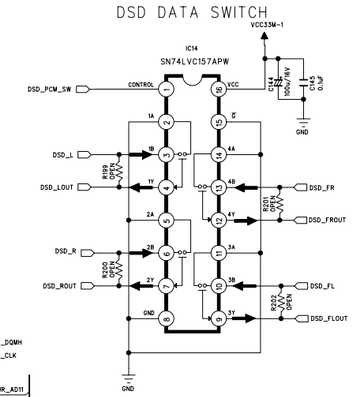

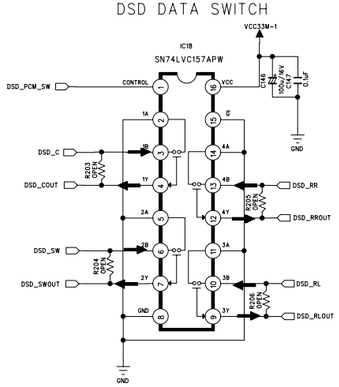

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

Page 55 B2
to AUDIO_CY11

MAIN 3/5

<SERVO PART>

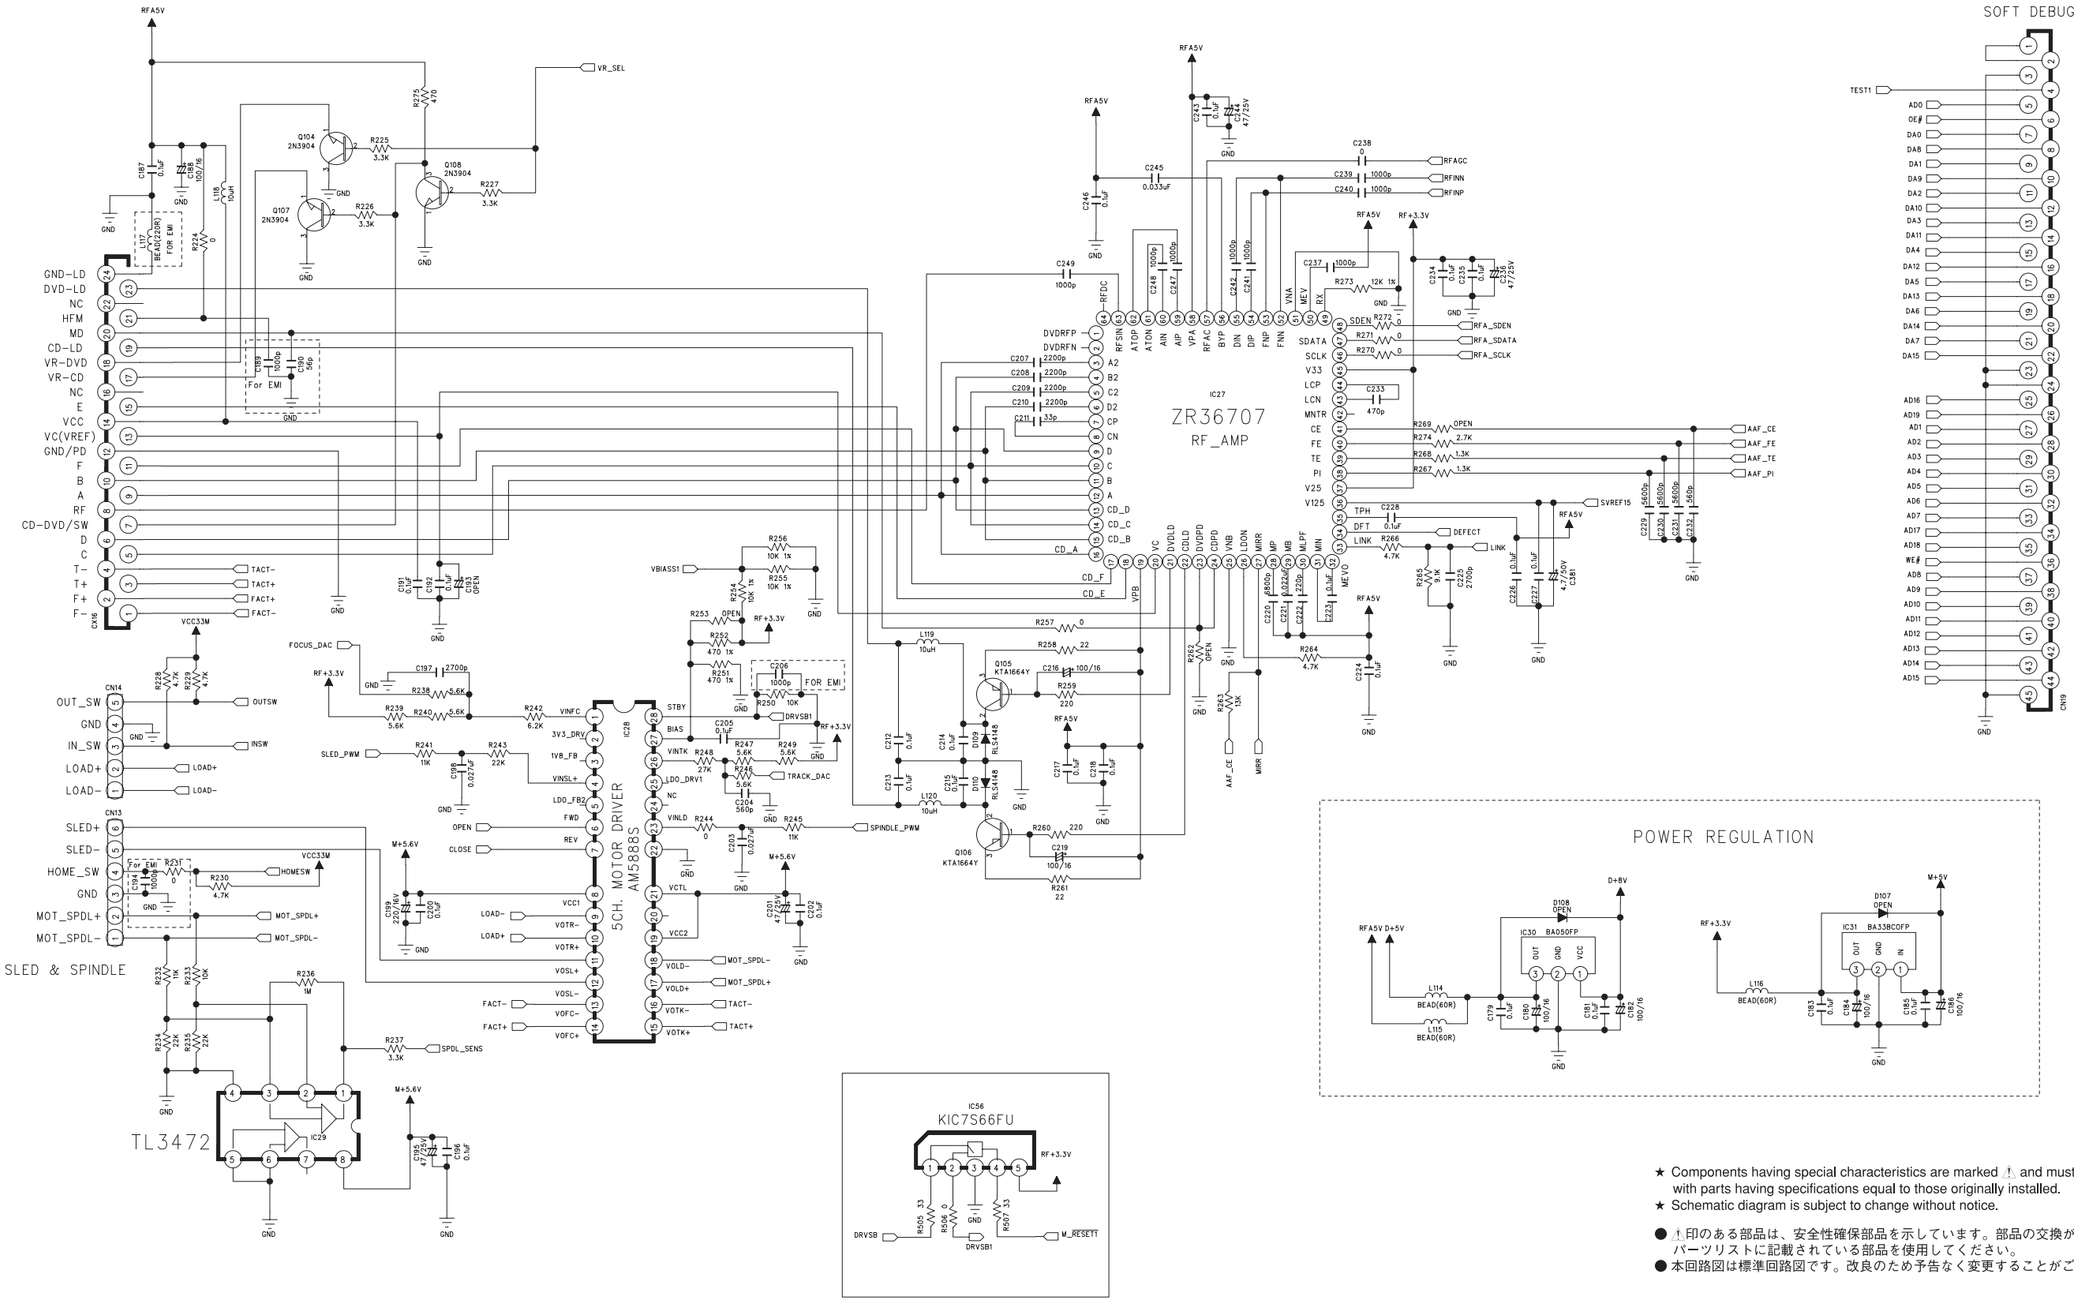

To DVD MECHANISM UNIT

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

MAIN 4/5

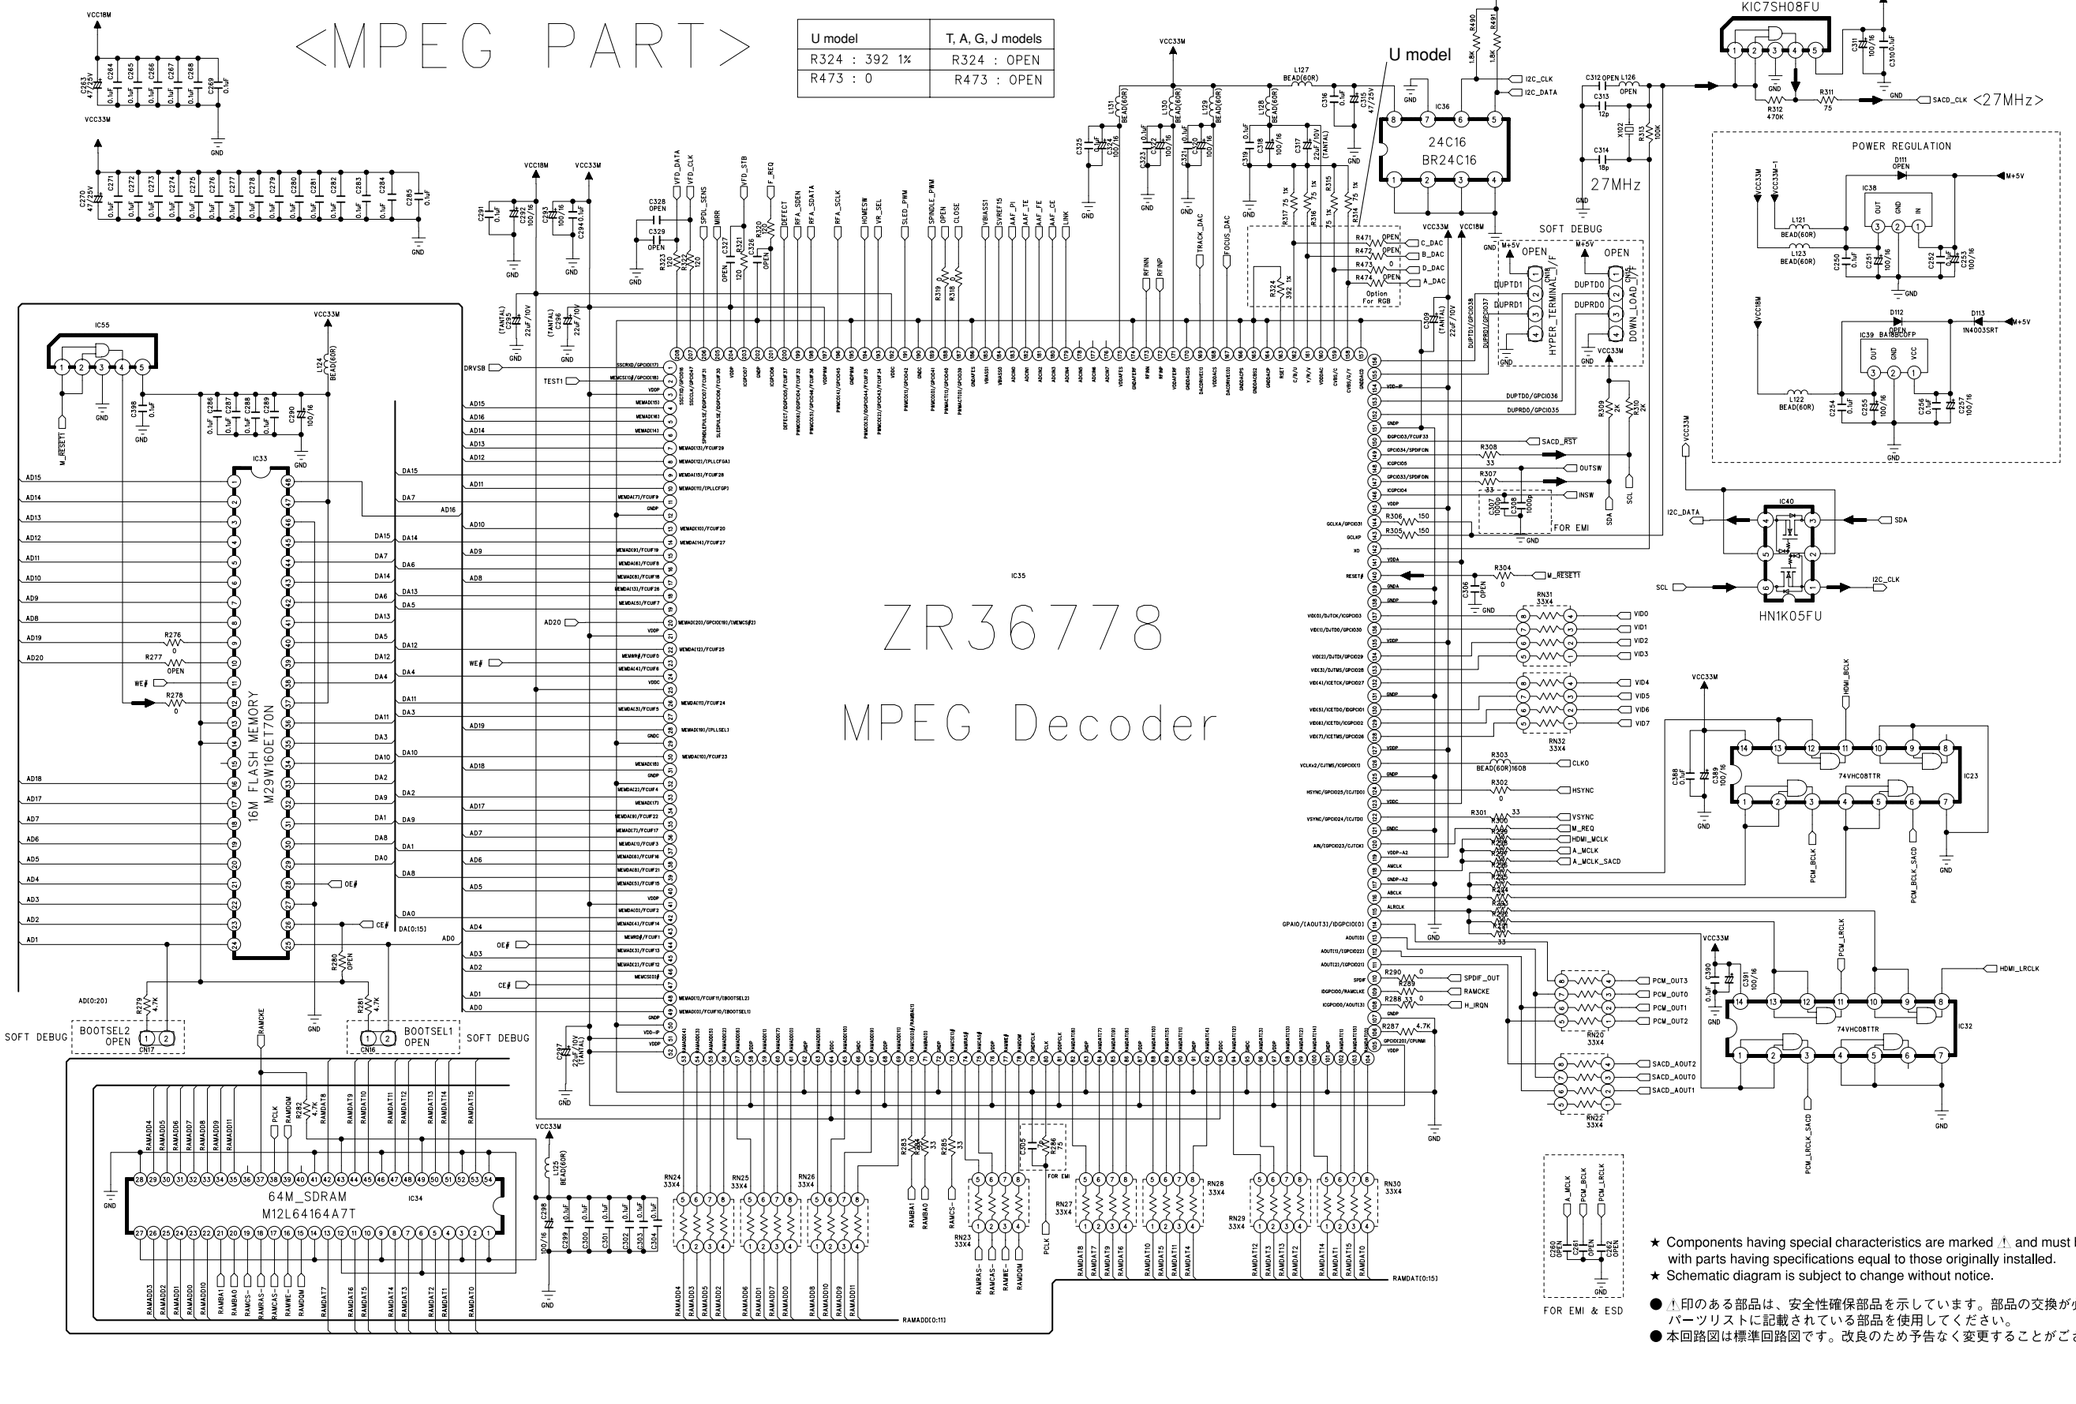

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

MAIN 5/5

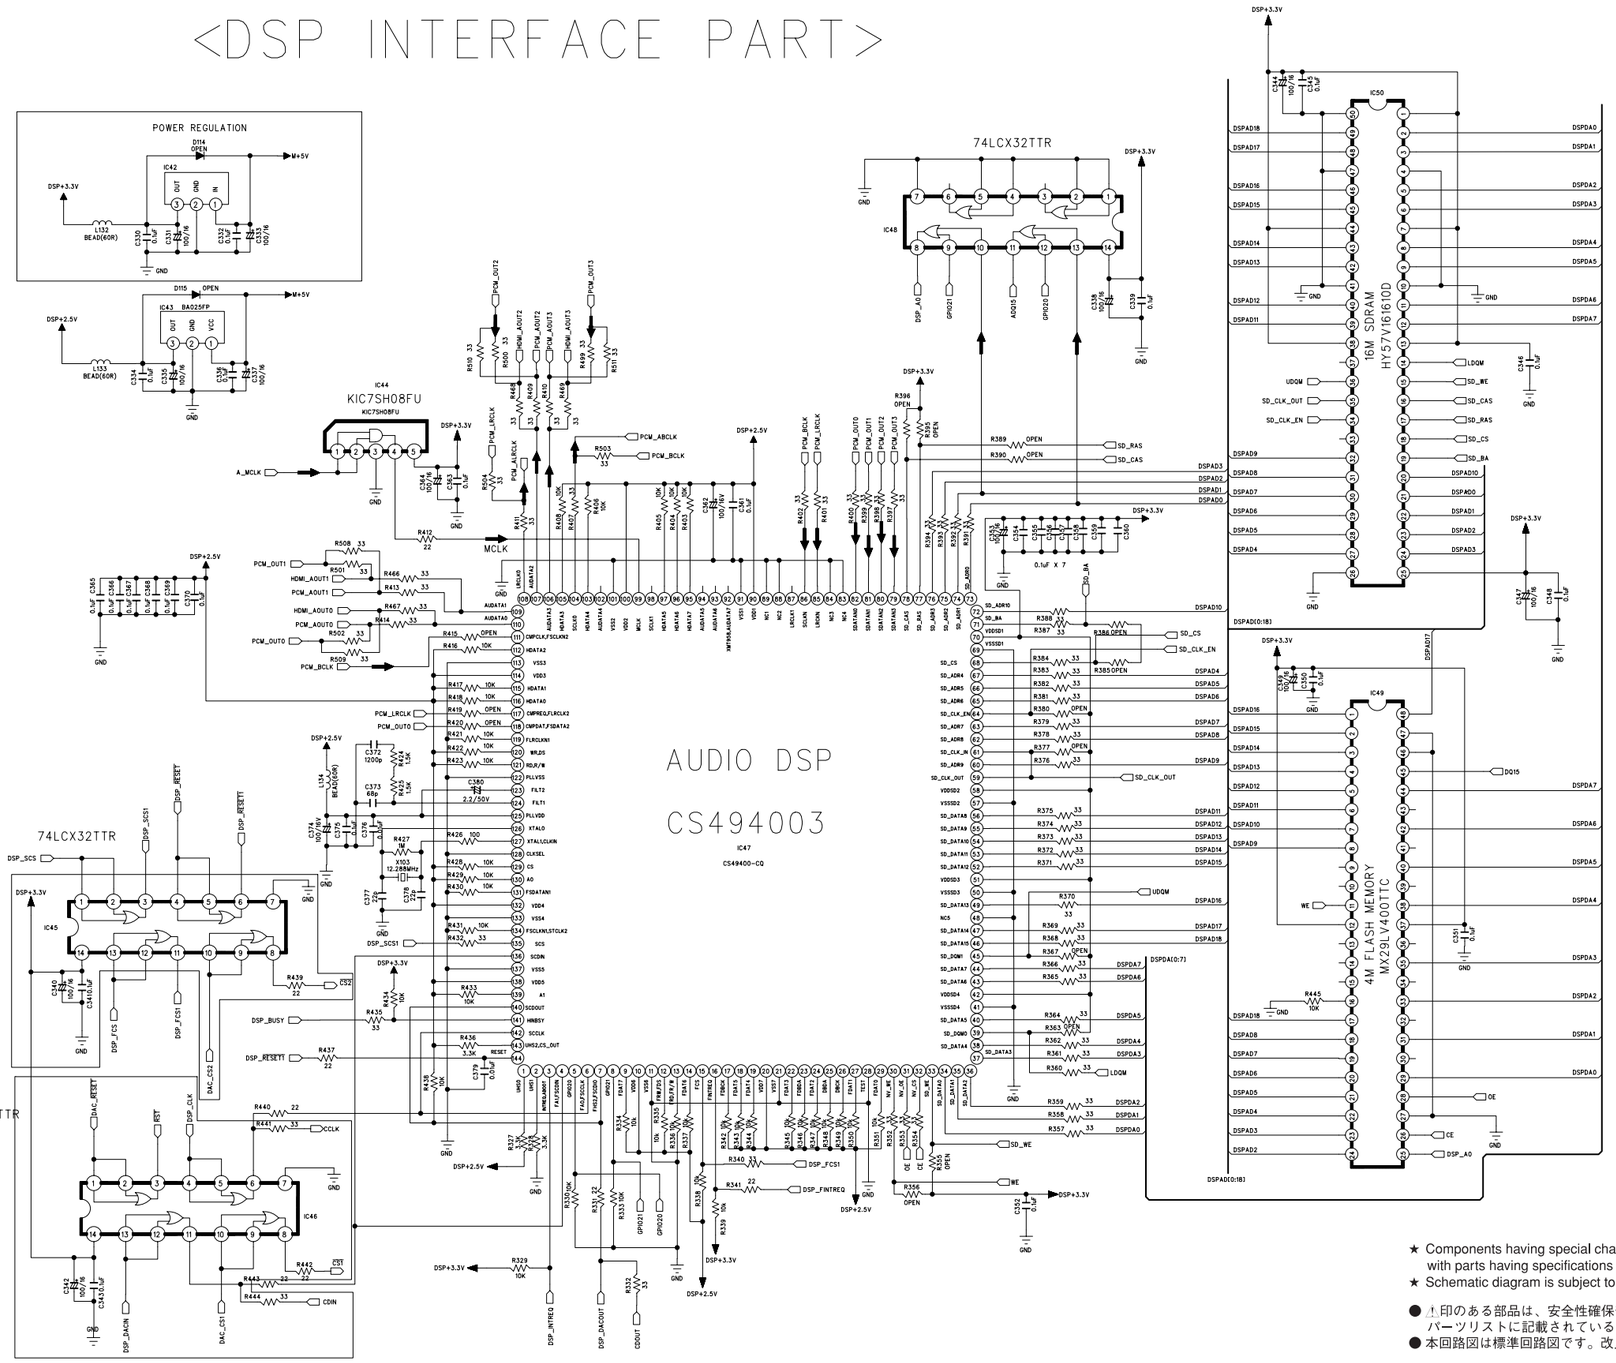

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 1/7

VIDEO (1)

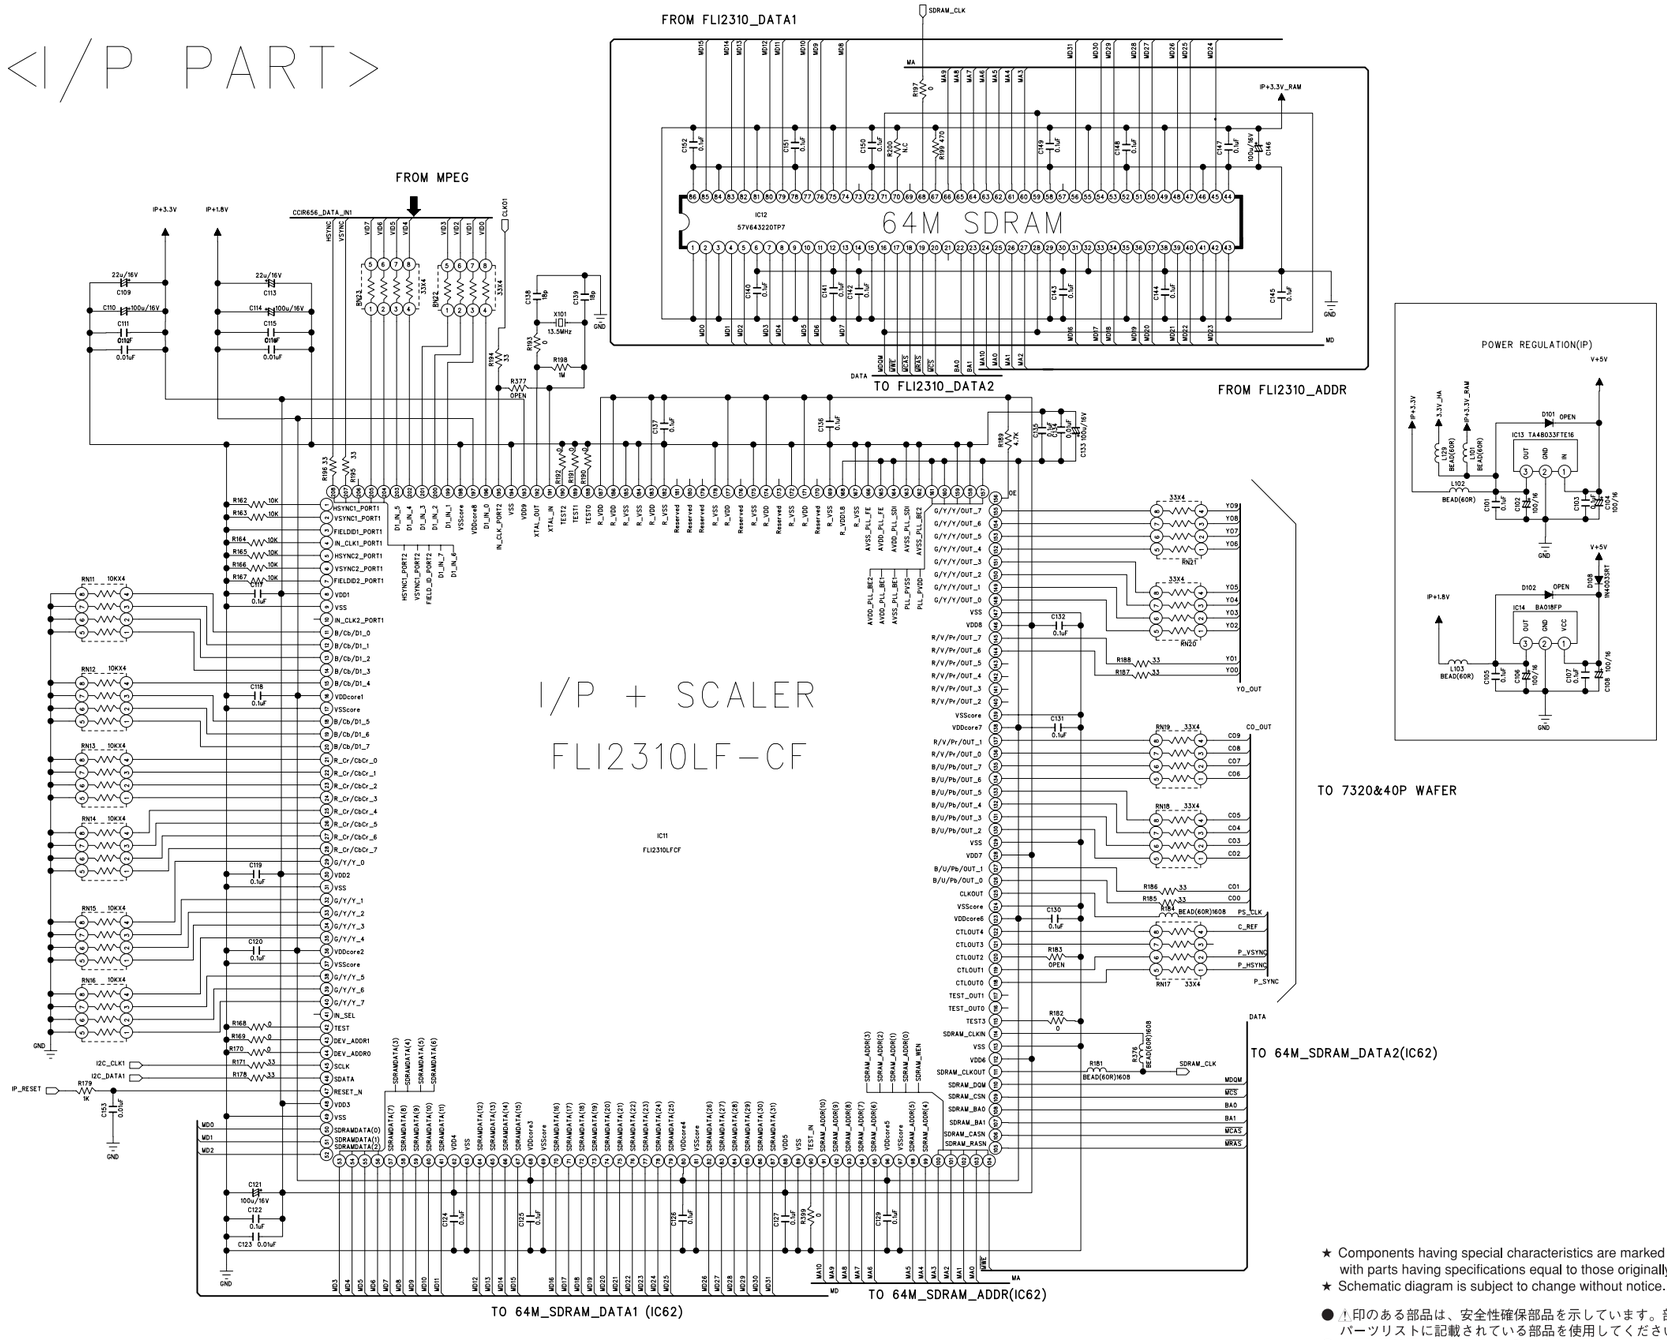

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 2/7

VIDEO (1)

<VIDEO_DAC1 PART>

Page 56 I2
to POWER SUPPLY UNIT_CN96

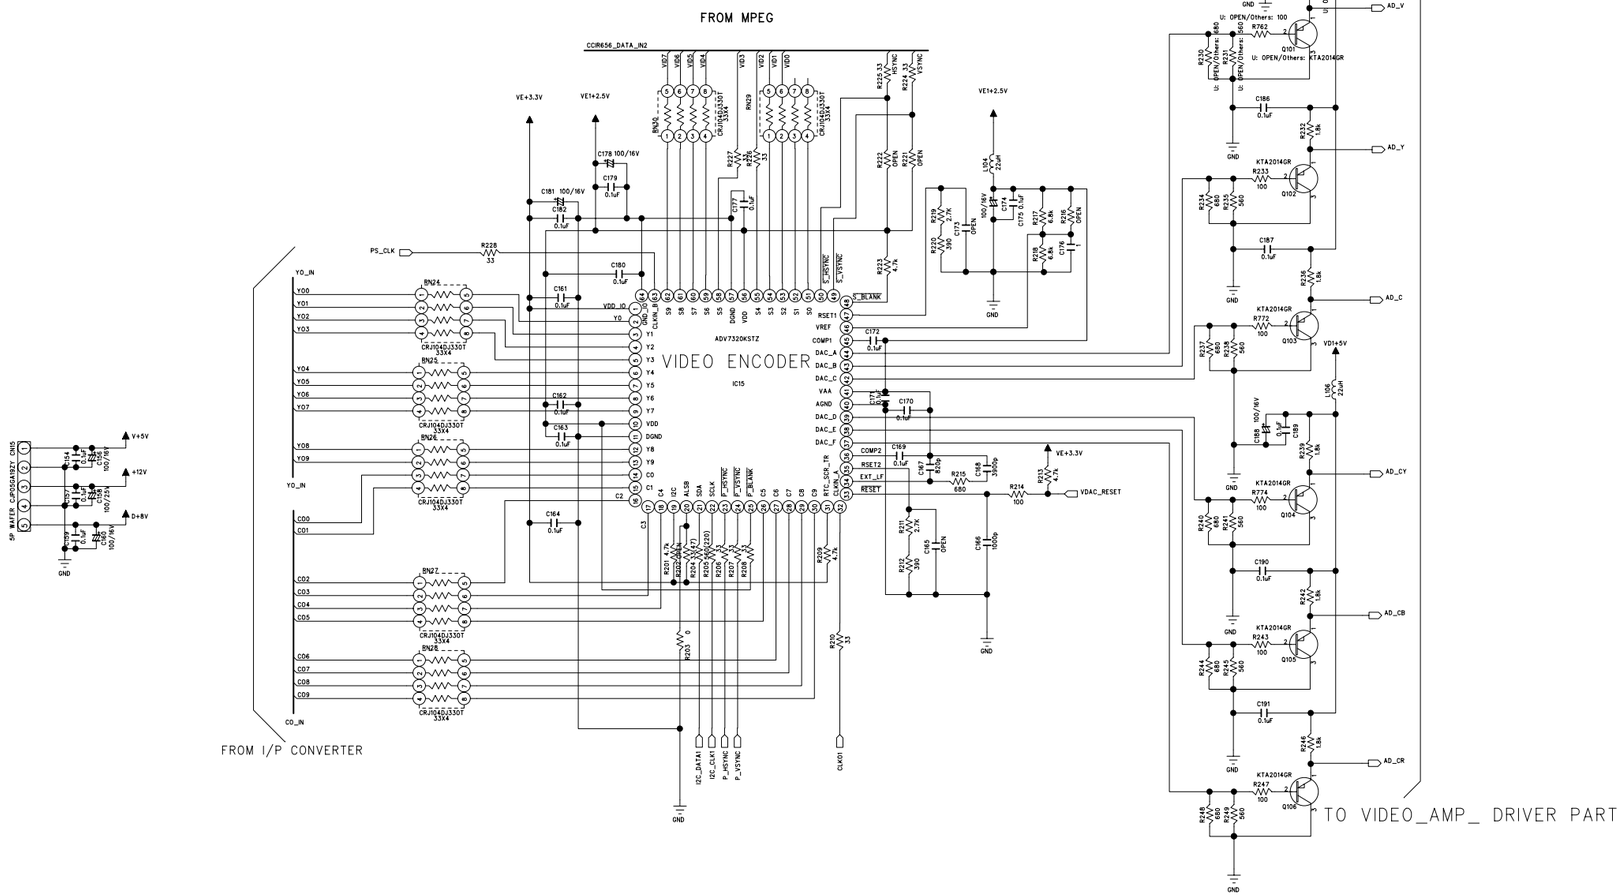

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 3/7

VIDEO (1)

<VIDEO_DAC2 PART>

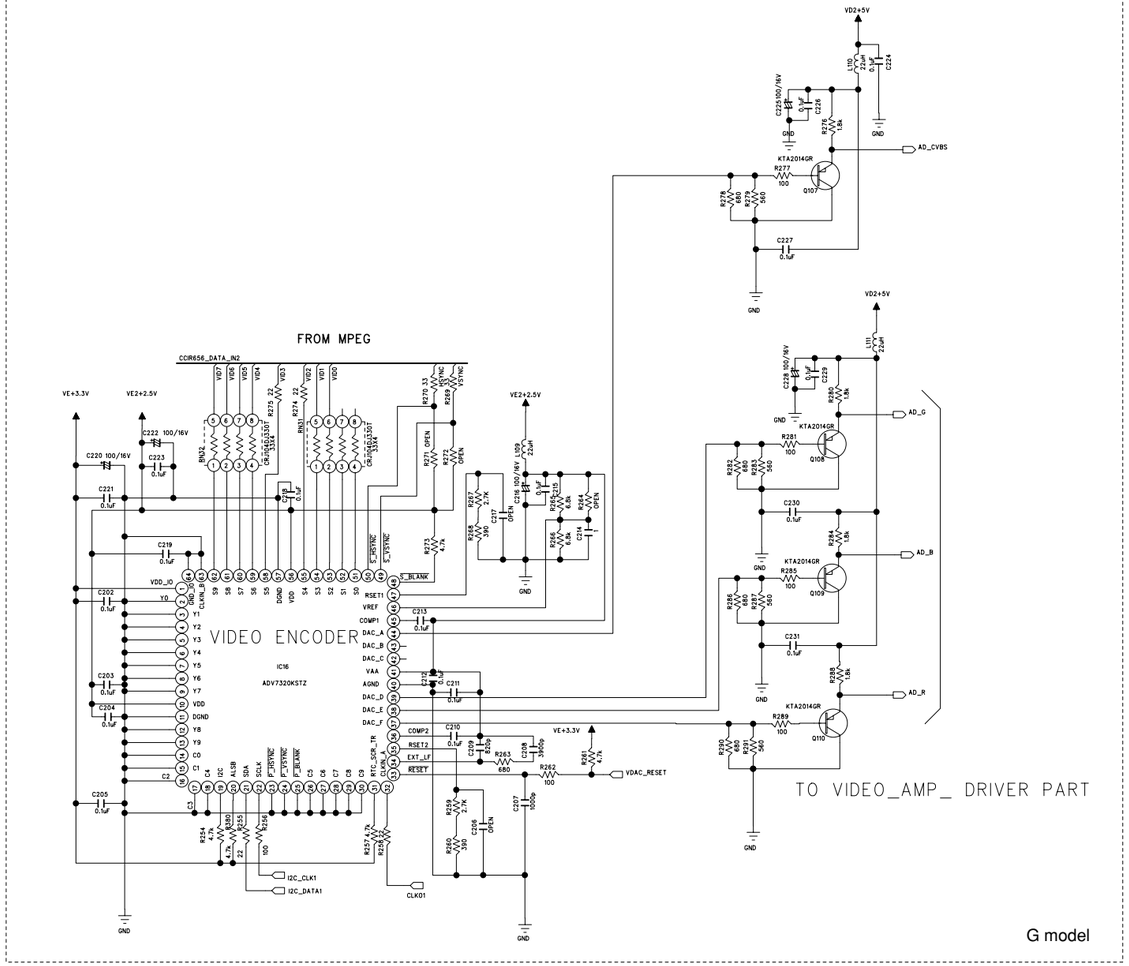

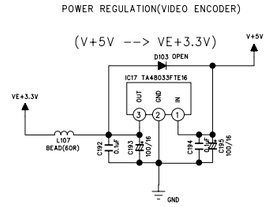

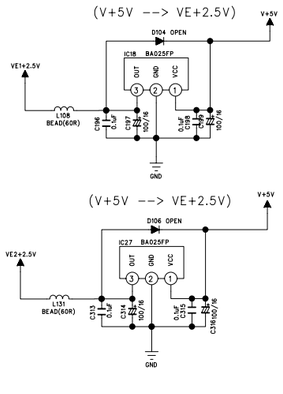

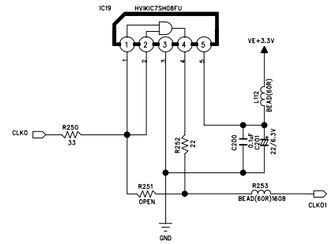

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 4/7

VIDEO (1)

<VIDEO_AMP1 PART>

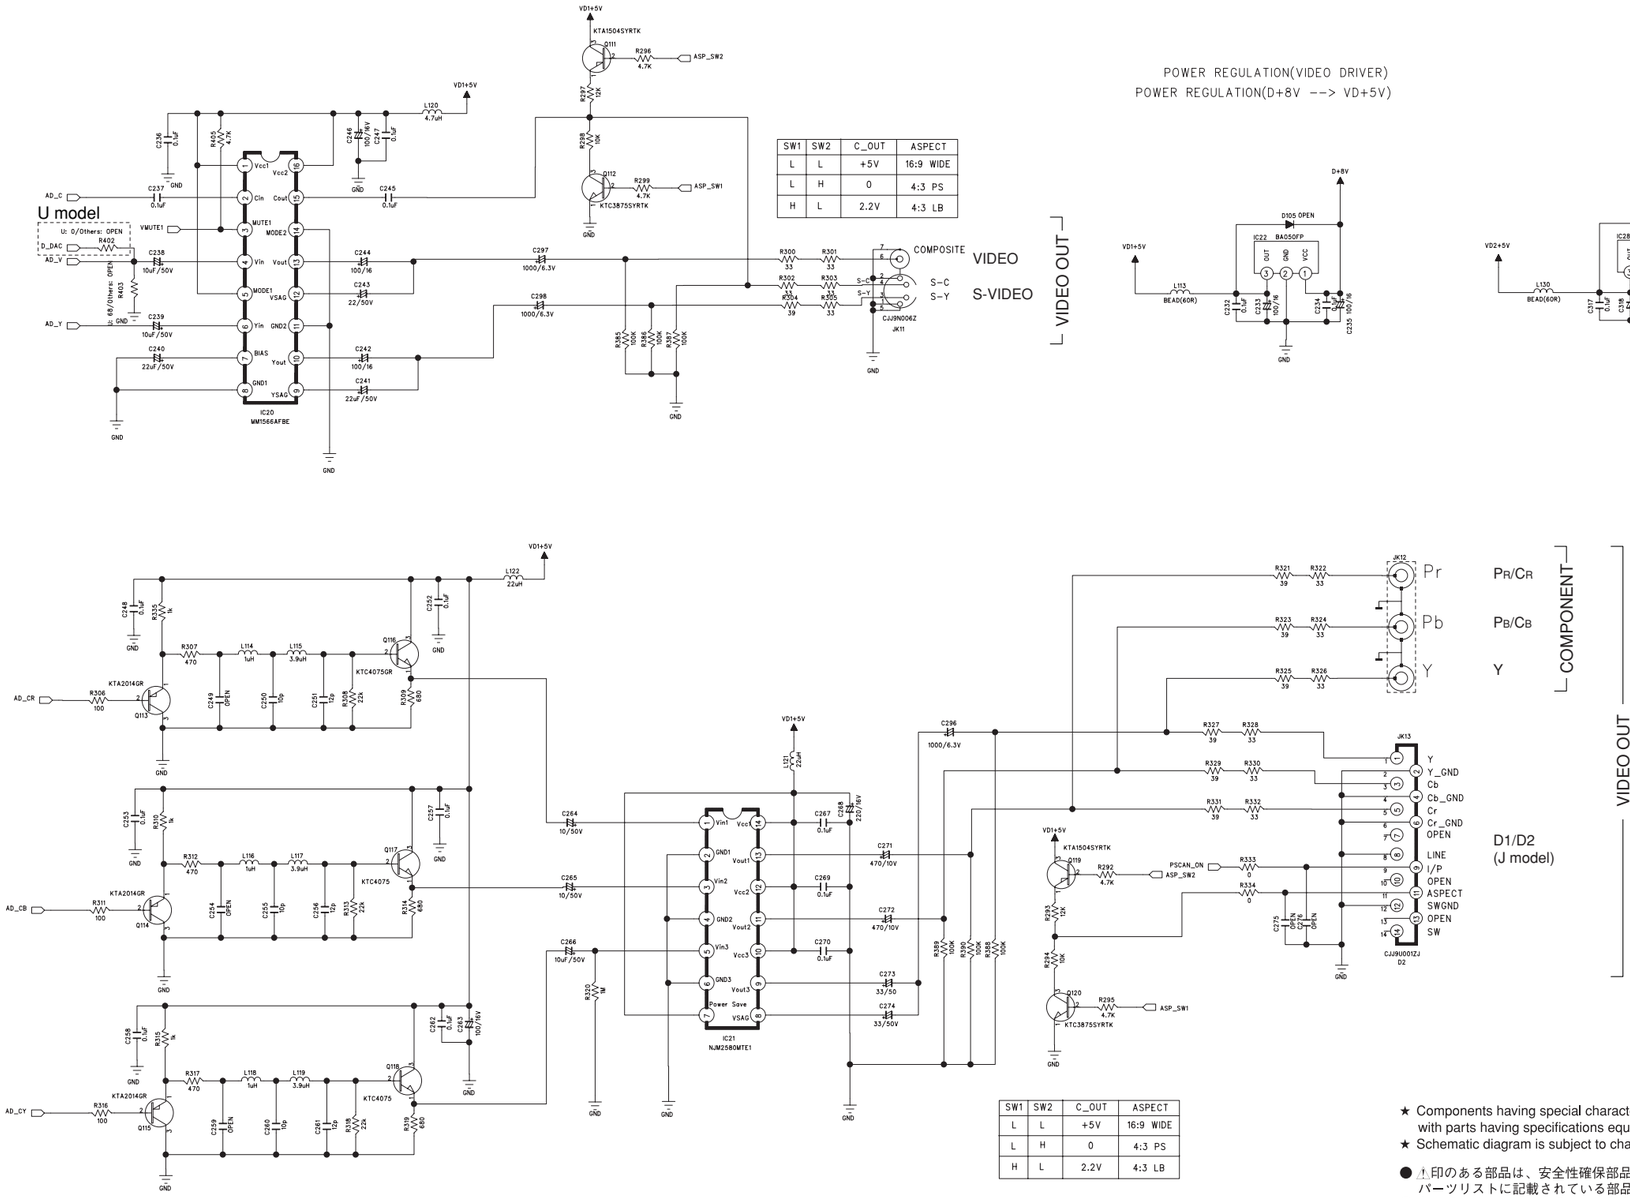

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 5/7

VIDEO (1) G model

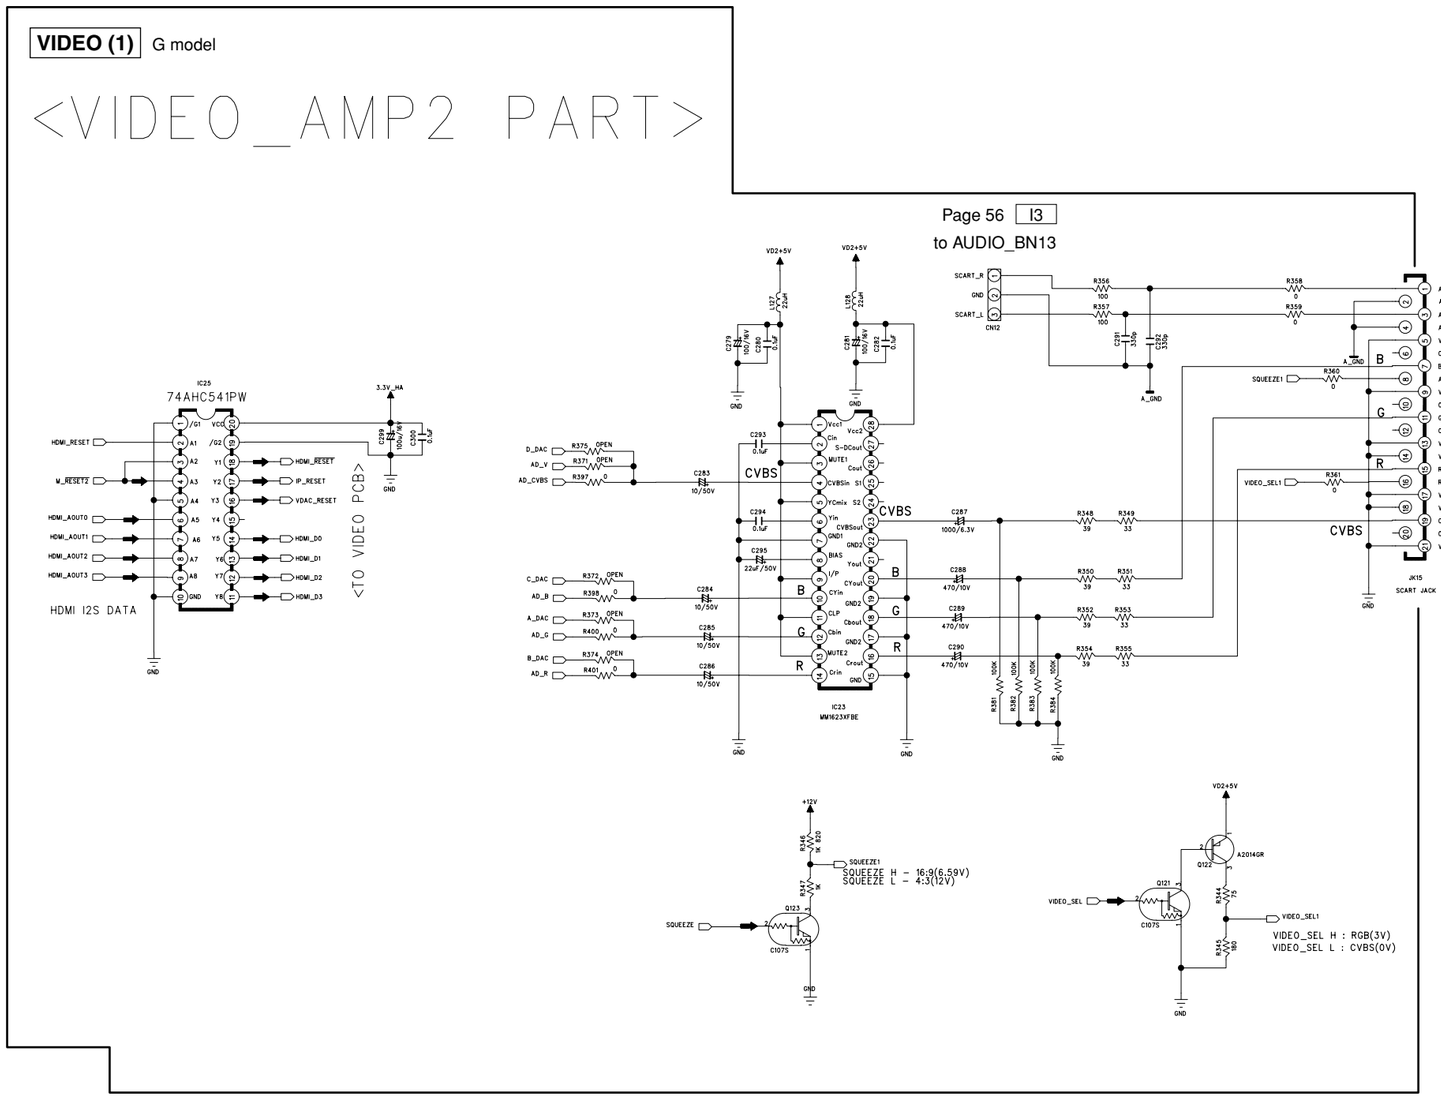

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 6/7

VIDEO (1)

< HDMI PART >

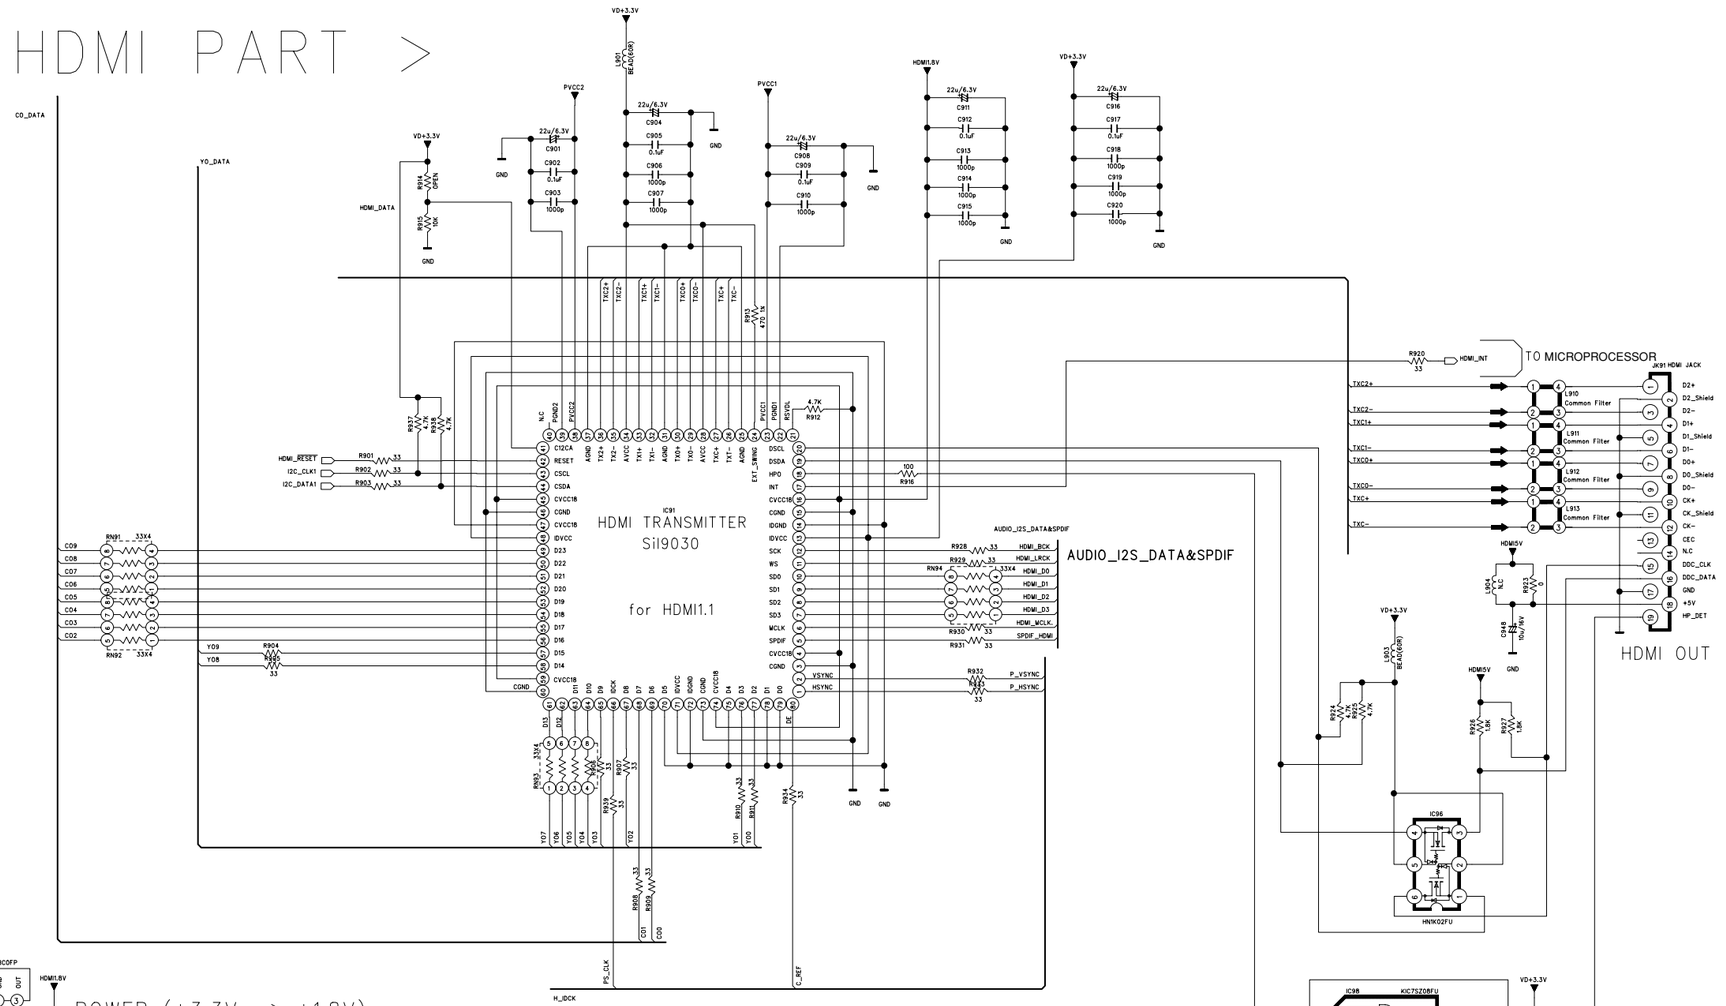

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 7/7

VIDEO (2)

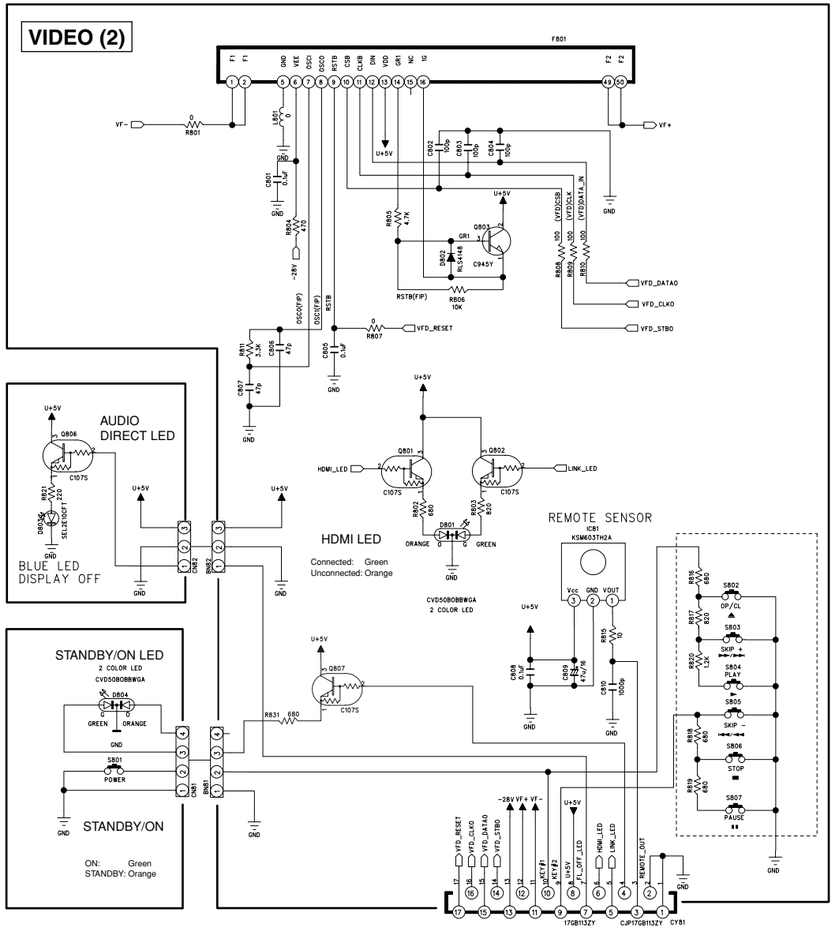

VIDEO (3)

VIDEO (4)

Page 43 C2
to MAIN_CX11

VIDEO (6)

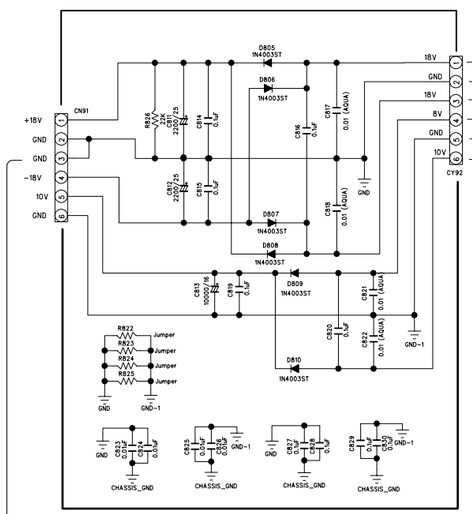

Page 55 B7
to AUDIO_CN12

Page 56 B2
to POWER SUPPLY UNIT_CN92

VIDEO (5)

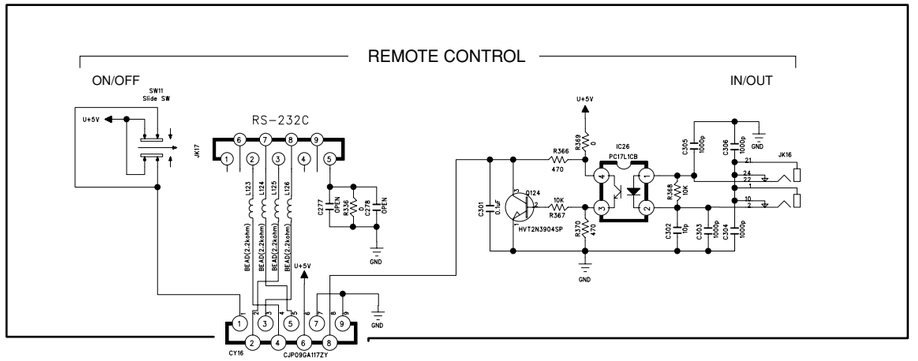

Page 43 H3
to MAIN_CX14

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

AUDIO

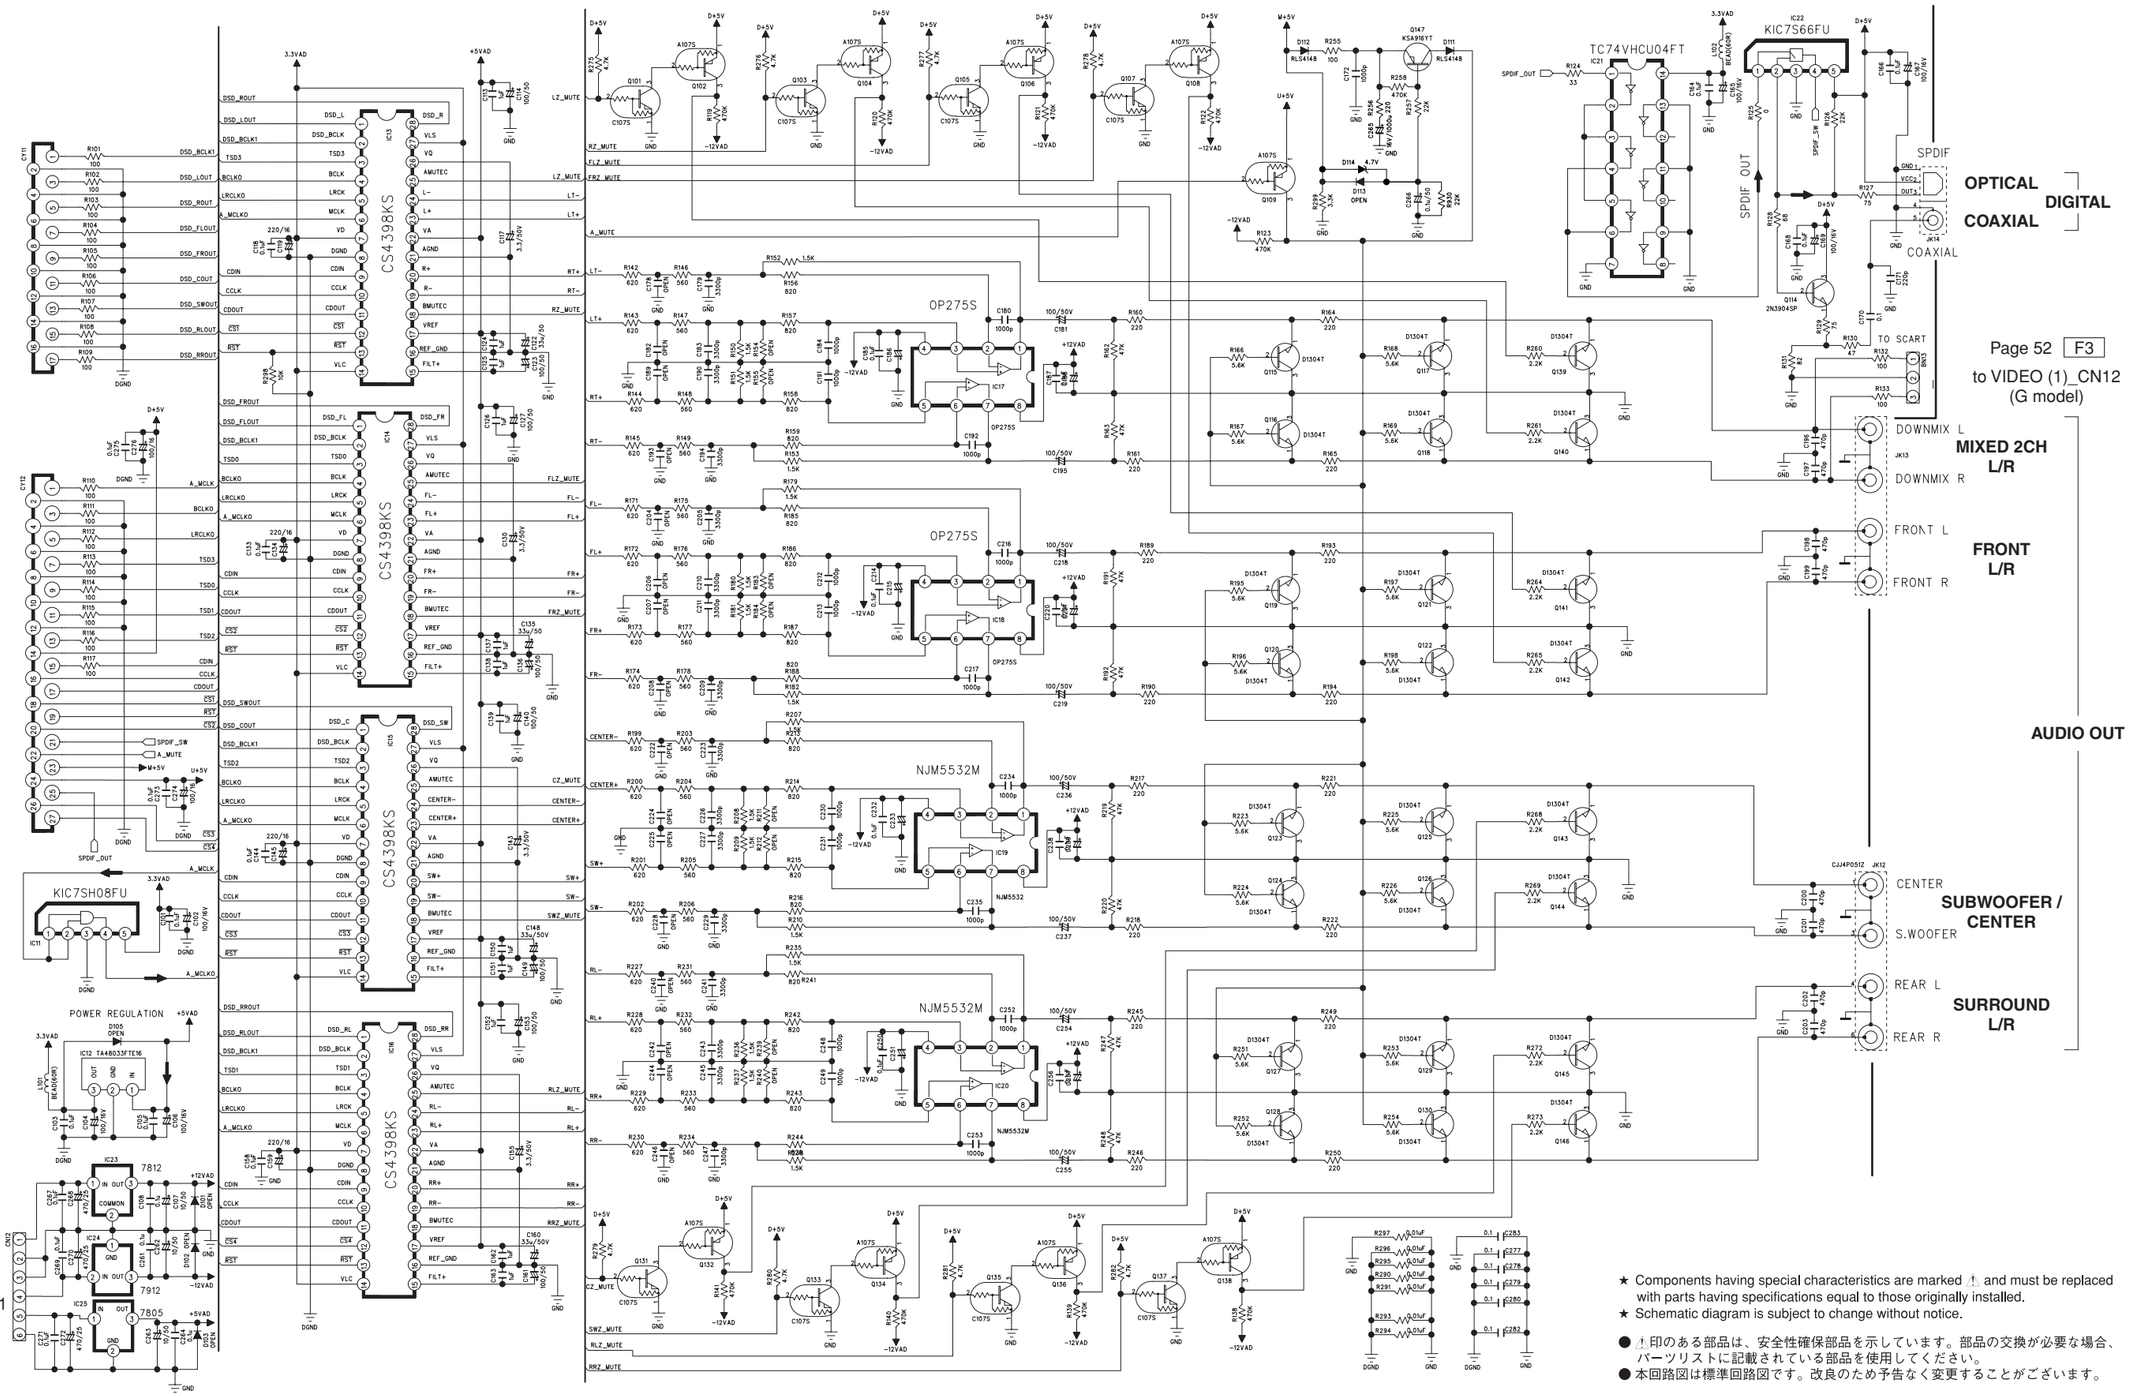

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

POWER SUPPLY UNIT

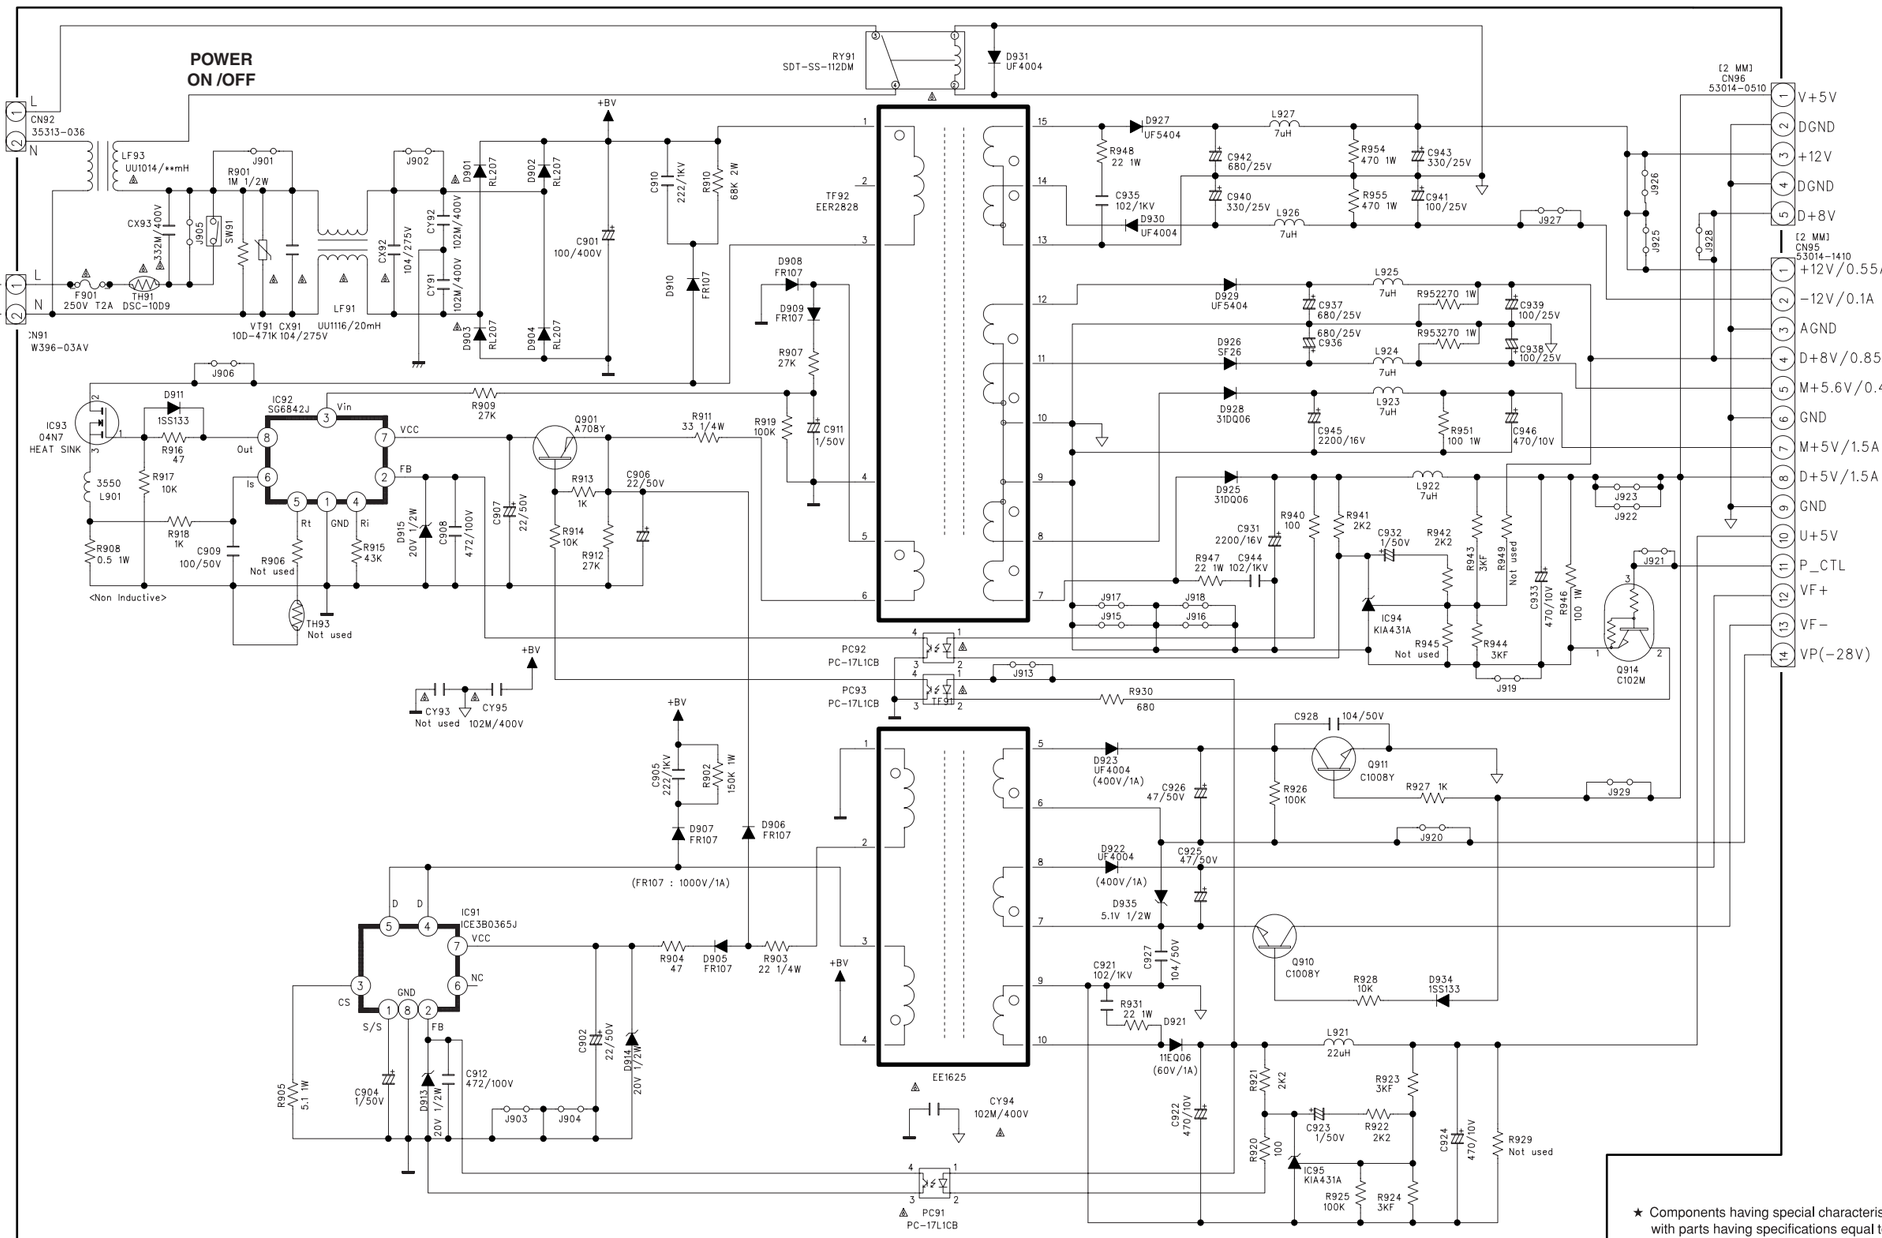

Page 49 B4
to VIDEO (1) _CN15

Page 43 D2
to MAIN_CN11

★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

■ REPLACEMENT PARTS LIST

• ELECTRICAL COMPONENT PARTS

WARNING

- Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
- ⚠印のある部分は、安全確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
- 部品価格ランクは、予告なく変更することがあります。

ABBREVIATIONS IN THIS LIST ARE AS FOLLOWS:

C.A.EL.CHP	: CHIP ALUMI.ELECTROLYTIC CAP
C.CE	: CERAMIC CAP
C.CE.ARRAY	: CERAMIC CAP ARRAY
C.CE.CHP	: CHIP CERAMIC CAP
C.CE.ML	: MULTILAYER CERAMIC CAP
C.CE.M.CHP	: CHIP MULTILAYER CERAMIC CAP
C.CE.SAFTY	: RECOGNIZED CERAMIC CAP
C.CE.TUBLR	: CERAMIC TUBULAR CAP
C.CE.SMI	: SEMI CONDUCTIVE CERAMIC CAP
C.EL	: ELECTROLYTIC CAP
C.MICA	: MICA CAP
C.ML.FLM	: MULTILAYER FILM CAP
C.MP	: METALLIZED PAPER CAP
C.MYLAR	: MYLAR FILM CAP
C.MYLAR.ML	: MULTILAYER MYLAR FILM CAP
C.PAPER	: PAPER CAPACITOR
C.PLS	: POLYSTYRENE FILM CAP
C.POL	: POLYESTER FILM CAP
C.POLY	: POLYETHYLENE FILM CAP
C.PP	: POLYPROPYLENE FILM CAP
C.TNTL	: TANTALUM CAP
C.TNTL.CHP	: CHIP TANTALUM CAP
C.TRIM	: TRIMMER CAP
CN	: CONNECTOR
CN.BS.PIN	: CONNECTOR,BASE PIN
CN.CANNON	: CONNECTOR,CANNON
CN.DIN	: CONNECTOR,DIN
CN.FLAT	: CONNECTOR,FLAT CABLE
CN.POST	: CONNECTOR,BASE POST
COIL.MX.AM	: COIL,AM MIX
COIL.AT.FM	: COIL,FM ANTENNA
COIL.DT.FM	: COIL,FM DETECT
COIL.MX.FM	: COIL,FM MIX
COIL,OUTPT	: OUTPUT COIL
DIOD.ARRAY	: DIODE ARRAY
DIODE.BRG	: DIODE BRIDGE
DIODE.CHP	: CHIP DIODE
DIODE.VAR	: VARACTOR DIODE
DIOD.Z.CHP	: CHIP ZENER DIODE
DIODE.ZENR	: ZENER DIODE
DSCR.CE	: CERAMIC DISCRIMINATOR
FER.BEAD	: FERRITE BEADS
FER.CORE	: FERRITE CORE
FET.CHP	: CHIP FET
FL.DSPLY	: FLUORESCENT DISPLAY
FLTR.CE	: CERAMIC FILTER
FLTR.COMB	: COMB FILTER MODULE
FLTR.LC.RF	: LC FILTER,EMI
GND.MTL	: GROUND PLATE
GND.TERM	: GROUND TERMINAL
HOLDER.FUS	: FUSE HOLDER
IC.PRTCT	: IC PROTECTOR
JUMPER.CN	: JUMPER CONNECTOR
JUMPER.TST	: JUMPER,TEST POINT
L.DTCT	: LIGHT DETECTING MODULE
L.EMIT	: LIGHT EMITTING MODULE
LED.DSPLY	: LED DISPLAY
LED.INFRD	: LED,INFRARED
MODUL.RF	: MODULATOR,RF
PHOT.CPL	: PHOTO COUPLER
PHOT.INTR	: PHOTO INTERRUPTER
PHOT.RFLCT	: PHOTO REFLECTOR
PIN.TEST	: PIN,TEST POINT
PLST.RIVET	: PLASTIC RIVET
R.ARRAY	: RESISTOR ARRAY
R.CAR.	: CARBON RESISTOR
R.CAR.CHP	: CHIP RESISTOR
R.CAR.FP	: FLAME PROOF CARBON RESISTOR
R.FUS	: FUSABLE RESISTOR
R.MTL.CHP	: CHIP METAL FILM RESISTOR
R.MTL.FLM	: METAL FILM RESISTOR
R.MTL.OXD	: METAL OXIDE FILM RESISTOR
R.MTL.PLAT	: METAL PLATE RESISTOR
RSNR.CE	: CERAMIC RESONATOR
RSNR.CRYS	: CRYSTAL RESONATOR
R.TW.CEM	: TWIN CEMENT FIXED RESISTOR
R.CEMENT	: CEMENT RESISTOR
SCR.BND.HD	: BIND HEAD B-TIGHT SCREW
SCR.BW.HD	: BW HEAD TAPPING SCREW
SCR.CUP	: CUP TIGHT SCREW
SCR.TERM	: SCREW TERMINAL
SCR.TR	: SCREW,TRANSISTOR
SUPRT.PCB	: SUPPORT,P.C.B.
SURG.PRTCT	: SURGE PROTECTOR
SW.TACT	: TACT SWITCH
SW.LEAF	: LEAF SWITCH
SW.LEVER	: LEVER SWITCH
SW.MICRO	: MICRO SWITCH
SW.PUSH	: PUSH SWITCH
SW.RT.ENC	: ROTARY ENCODER
SW.RT.MTR	: ROTARY SWITCH WITH MOTOR
SW.RT	: ROTARY SWITCH
SW.SLIDE	: SLIDE SWITCH
TERM.SP	: SPEAKER TERMINAL
TERM.WRAP	: WRAPPING TERMINAL
THRMST.CHP	: CHIP THERMISTOR
TR.CHP	: CHIP TRANSISTOR
TR.DGT	: DIGITAL TRANSISTOR
TR.DGT.CHP	: CHIP DIGITAL TRANSISTOR
TRANS	: TRANSFORMER
TRANS.PULS	: PULSE TRANSFORMER
TRANS.PWR	: POWER TRANSFORMER ASS'Y
TUNER.AM	: TUNER PACK,AM
TUNER.FM	: TUNER PACK,FM
TUNER.PK	: FRONT-ENDTUNER PACK
VR	: ROTARY POTENTIOMETER
VR.MTR	: POTENTIOMETER WITH MOTOR
VR.SW	: POTENTIOMETER WITH ROTARY SW
VR.SLIDE	: SLIDE POTENTIOMETER
VR.TRIM	: TRIMMER POTENTIOMETER

P.C.B. MAIN, P.C.B. VIDEO and P.C.B. AUDIO

Note) When any part not included in the replacement parts list has failed, replace the P.C.B..
注） パーツリストに記載されている部品以外は供給できません。部品交換が必要な場合はP.C.B.を交換してください。

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
*		AAX81260	P.C.B.	MAIN	COP11905B	JTAG	ＰＣＢ メイン	
*		AAX81270	P.C.B.	MAIN	COP11905C	U	ＰＣＢ メイン	
	IC20	AAX80820	IC	SAA7893HLC2	HVISAA7893HLC2		ＩＣ	
	IC27	AAX80830	IC	ZR36707	HVIZR36707		ＩＣ	
	IC28	AAX80780	IC	AM5888SLF	HVIAM5888SLF		ＩＣ	
	IC34	AAX80810	IC	M12L64164A7T	HVIM12L64164A7T		ＩＣ	
	IC35	AAX80840	IC	ZR36778	HVIZR36778		ＩＣ	
*		AAX81250	P.C.B.	VIDEO	COP11907E	J	ＰＣＢ ビデオ	
*		AAX81240	P.C.B.	VIDEO	COP11907D	U	ＰＣＢ ビデオ	
*		AAX81230	P.C.B.	VIDEO	COP11907C	TA	ＰＣＢ ビデオ	
*		AAX81220	P.C.B.	VIDEO	COP11907B	G	ＰＣＢ ビデオ	
	F801	AAX80850	FIP DSPLY	HCA14SM16	CFLHCA14SM16		ＦＩＰ表示器	
	IC11	AAX80770	IC	FLI2310LFCF	CVIFLI2310LFCF		ＩＣ	
	IC12	AAX80750	IC	57V643220TP6	CVI57V643220TP6		ＩＣ	
	IC15-16	AAX80760	IC	ADV7320KSTZ	CVIADV7320KSTZ		ＩＣ	
	JK11	AAX80370	JACK	S-VIDEO/VIDEO	CJJ9N006Z		ジャック ビデオ	
*	JK12	AAX81410	JACK	COMPONENT	CJJ4S043Z		ジャック コンポーネント	
	JK13	AAX80050	CN.D2		CJJ9U001ZJ	J	Ｄ２コネクター	
*	JK15	AAX80350	JACK	SCART	CJJ6K003Z	G	ＳＣＡＲＴコネクター	
	JK16	AAX80330	JACK	2P REMOTE IN/OUT	HJJ1D002Z		ジャック リモートＩ／Ｏ	
	JK17	AAX80150	CN.RS232C	D-SUB 9P	CJJ9V001Z		ＲＳ２３２Ｃコネクター	
	JK91	AAX80340	CN.HDMI	HDMI	HJJ9H003Z		ＨＤＭＩコネクター	
	S801-807	AAX74630	SW.TACT	SKHV10910G	CST1A012ZT		タクトスイッチ	01
	SW11	AAX80380	SW.SLIDE	RS-232C ON/OFF	KSS2B016Z		スライドスイッチ	
*		AAX81210	P.C.B.	AUDIO	COP11906C	JUTA	ＰＣＢ オーディオ	
*		AAX81200	P.C.B.	AUDIO	COP11906B	G	ＰＣＢ オーディオ	
*	JK12	AAX81400	JACK	4P C/SW/SUR.	CJJ4P062Z		ジャック ４Ｐ	
	JK13	AAX80320	JACK	4P MIXED/FRONT	CJJ4P019Y		ジャック ４Ｐ	
	JK14	AAX80360	JACK	OPTICAL/COAXIAL	CJS9U011Z		ジャック デジタル	

＊ New Parts ＊ 新規部品

• OVERALL ASS'Y

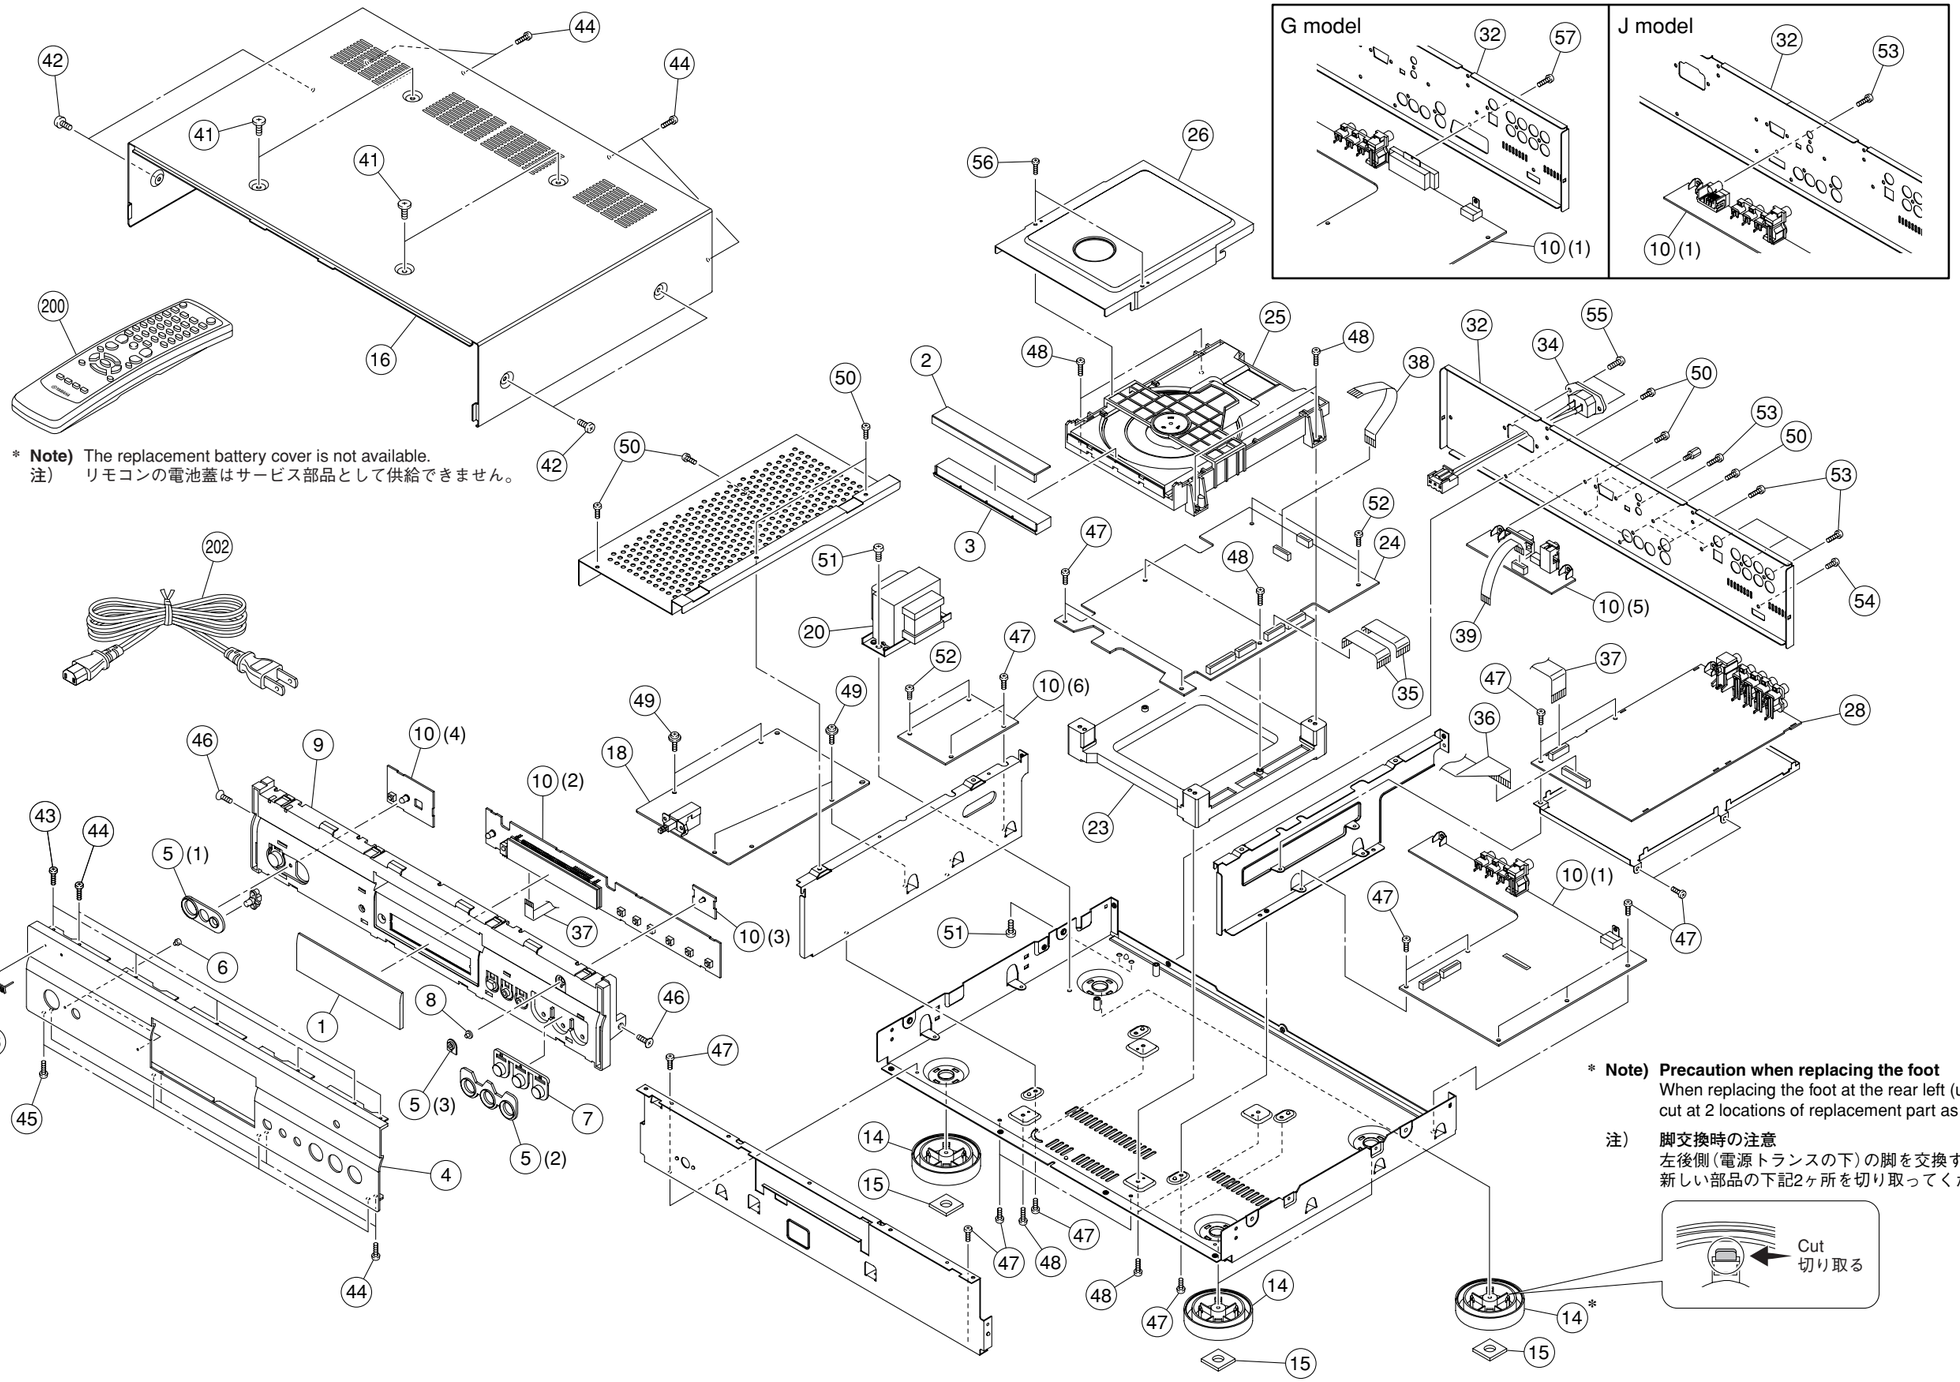
G model
J model
* Note) The replacement battery cover is not available.
注) リモコンの電池蓋はサービス部品として供給できません。
* Note) Precaution when replacing the foot
When replacing the foot at the rear left (under the power transformer), cut at 2 locations of replacement part as shown below.
注) 脚交換時の注意
左後側(電源トランスの下)の脚を交換する場合、新しい部品の下記2ヶ所を切り取ってください。
Cut
切り取る

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
*	1	AAX81290	WINDOW		CGU1A398Z		ウィンドウ	
*	2	AAX81460	TRAY COVER	GD	CGX1A380C55		トレイカバー	
*	2	AAX81470	TRAY COVER	BL	CGX1A380C59		トレイカバー	
*	2	AAX81480	TRAY COVER	TI	CGX1A380C60		トレイカバー	
*	3	AAX81510	TRAY CATCH	GD	CGR1A405M9D6		トレイキャッチ	
*	3	AAX81490	TRAY CATCH	BL	CGR1A405K128		トレイキャッチ	
*	3	AAX81500	TRAY CATCH	TI	CGR1A405M7G41		トレイキャッチ	
*	4	AAX81670	FRONT PANEL	GD	CKM1A181YC55		フロントパネル	
*	4	AAX81680	FRONT PANEL	BL	CKM1A181ZC59		フロントパネル	
*	4	AAX81660	FRONT PANEL	TI	CKM1A181XC60		フロントパネル	
*	5	AAX81540	ORNAMENT KNOB	GD	CGR1A406M9H54		ノブ飾り	
*	5	AAX81520	ORNAMENT KNOB	BL	CGR1A406H53		ノブ飾り	
*	5	AAX81530	ORNAMENT KNOB	TI	CGR1A406M7H55		ノブ飾り	
	6	AAX80090	INDICATOR LED LENS	STANDBY/ON,HDMI	CGL1A253Z		ＬＥＤ　レンズ	
*	7	AAX81640	FUNCTION KNOB ASS'Y	GD	CGK1A125YA		ファンクションノブＡＳＳＹ	
*	7	AAX81650	FUNCTION KNOB ASS'Y	BL	CGK1A125ZA		ファンクションノブＡＳＳＹ	
*	7	AAX81630	FUNCTION KNOB ASS'Y	TI	CGK1A125XA		ファンクションノブＡＳＳＹ	
*	8	AAX81190	INDICATOR LED LENS	AUDIO DIRECT	CGL1A256Z		ＬＥＤ　レンズ	
*	9	AAX81370	SUB PANEL	GD	CGW1A426M9YD6		サブパネル	
*	9	AAX81380	SUB PANEL	BL	CGW1A426ZK128		サブパネル	
*	9	AAX81360	SUB PANEL	TI	CGW1A426M7XG41		サブパネル	
*	10	AAX81250	P.C.B. ASS'Y	VIDEO	COP11907E	J	ＰＣＢ　ビデオ	
*	10	AAX81240	P.C.B. ASS'Y	VIDEO	COP11907D	U	ＰＣＢ　ビデオ	
*	10	AAX81230	P.C.B. ASS'Y	VIDEO	COP11907C	TA	ＰＣＢ　ビデオ	
*	10	AAX81220	P.C.B. ASS'Y	VIDEO	COP11907B	G	ＰＣＢ　ビデオ	
	14	AAX78660	FOOT	GD	CKL1A192H57		脚	
	14	AAX78650	FOOT	BL, TI	CKL1A192H56		脚	
	15	AAX76760	CUSHION FOOT		CHG1A329		クッション　脚	01
*	16	AAX81440	TOP COVER	GD	CKC1A177D8		トップカバー	
*	16	AAX81430	TOP COVER	BL	CKC1A177B11		トップカバー	
*	16	AAX81450	TOP COVER	TI	CKC1A177G40		トップカバー	
* ⚠	18	AAX81840	POWER SUPPLY UNIT		COP11897C		電源ユニット	
*	20	AAX81830	POWER TRANSFORMER		CLT5N033ZUS	JU	電源トランス	
*	20	AAX81820	POWER TRANSFORMER		CLT5N033ZES	TAG	電源トランス	
*	23	AAX81390	SUPPORT DVD MECHANISM		CMH1A260		サポートＤＶＤメカ	
*	24	AAX81260	P.C.B. ASS'Y	MAIN	COP11905B	JTAG	ＰＣＢ　メイン	
*	24	AAX81270	P.C.B. ASS'Y	MAIN	COP11905C	U	ＰＣＢ　メイン	
*	25	AAX80930	DVD MECHANISM UNIT		CADDVDS2700ZA		ＤＶＤメカユニット	
*	26	AAX81350	COVER DVD MECHANISM UNIT		CMD1A601B11		ＤＶＤメカユニットカバー	
*	28	AAX81210	P.C.B. ASS'Y	AUDIO	COP11906C	JUTA	ＰＣＢ　オーディオ	
*	28	AAX81200	P.C.B. ASS'Y	AUDIO	COP11906B	G	ＰＣＢ　オーディオ	
*	32	AAX81750	REAR PANEL		CKF3A318Z	J	リアパネル	
*	32	AAX81740	REAR PANEL		CKF2A318Z	U	リアパネル	
*	32	AAX81720	REAR PANEL		CKF2A318X	T	リアパネル	
*	32	AAX81730	REAR PANEL		CKF2A318Y	A	リアパネル	
*	32	AAX81710	REAR PANEL		CKF1A318Z	G	リアパネル	
	33	AAX80210	BADGE	GD	CGB1A167Y		エンブレム	
	33	AAX80220	BADGE	BL, TI	CGB1A167Z		エンブレム	
*	34	AAX81280	INLET ASS'Y	2P　270mm	CWZDVDS2700BN91		インレットＡＳＳＹ	
*	35	AAX81310	FLEXIBLE FLAT CABLE	21P　80mm P=1mm	CWC1B4A21A080B		カード電線	
*	36	AAX81320	FLEXIBLE FLAT CABLE	27P 150mm P=1mm	CWC1B4A27A150B		カード電線	
*	37	AAX81300	FLEXIBLE FLAT CABLE	17P 100mm P=1mm	CWC1B4A17A100B		カード電線	
*	38	AAX81330	FLEXIBLE FLAT CABLE	24P 150mm P=0.5mm	CWC1G2A24G150B		カード電線	
*	39	AAX81340	S FLEXIBLE FLAT CABLE	9P　80mm　P=1mm	CWCDVDS2700CX14		カード電線	
*	41	AAX81850	SPECIAL SCREW	GD, TI	CHD1A061FFC		特殊ネジ	
*	41	AAX81860	SPECIAL SCREW	BL	CHD1A061FFZR		特殊ネジ	
*	42	AAX82030	BIND HEAD SCREW	GD,TI 4x6　MFZN2W3	CTBD4+6FFC		ボンディング小ネジ	
*	42	AAX82040	BIND HEAD SCREW	BL　4x6　MFZN2B3	CTBD4+6FFZR		ボンディング小ネジ	
	43	AAX78420	BIND HEAD SCREW	3x8　MFZN2Y	CTB3+6FR		バインド小ネジ	

＊New Parts　＊新規部品

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	44	AAX74180	BIND HEAD BONDING B-T. SCREW	GD,TI 3x8　MFZN2W3	CTBD3+8JFC		ボンディングＢタイトネジ	
	44	AAX80490	BIND HEAD BONDING B-T. SCREW	BL　3x8　MFZN2B3	CTBD3+8JFZR		ボンディングＢタイトネジ	
*	45	AAX82040	BIND HEAD P-TIGHT SCREW	GD,TI 3x10 MFZN2W3	CTB3+10GFC		バインドＰタイトネジ	
	45	AAX78400	BIND HEAD P-TIGHT SCREW	BL　3x10 MFZN2B3	CTB3+10GFZR		バインドＰタイトネジ	
	46	AAX80600	FLAT HEAD B-TIGHT SCREW	3x8　MFZN2Y	CTS3+8JR		皿Ｂタイトネジ	
	47	AAX80420	BIND HEAD B-TIGHT SCREW	3x6　MFZN2Y	CTB3+6JR		バインドＢタイトネジ	
	48	AAX78410	BIND HEAD P-TIGHT SCREW	3x10　MFZN2Y	CTB3+10GR		バインドＰタイトネジ	
	49	AAX80140	PW HEAD B-TIGHT SCREW	3x8　MFZN2Y	CTW3+8JR		ＰＷヘッドＢタイトネジ	
	50	AAX78380	BIND HEAD B-TIGHT SCREW	3x6　MFZN2B3	CTB3+8JFZR		バインドＢタイトネジ	
	51	AAX78430	BIND HEAD SCREW	4x6　MFZN2Y	CTB4+6FR		バインド小ネジ	
	52	AAX78420	BIND HEAD SCREW	3x6　MFZN2Y	CTB3+6FR		バインド小ネジ	
	53	AAX78400	BIND HEAD P-TIGHT SCREW	3x10　MFZN2B3	CTB3+10GFZR		バインドＰタイトネジ	
	54	AAX80430	BIND HEAD SCREW	3x6　MFZN2B3	CTB3+6FFZR		バインド小ネジ	
	55	AAX78380	BIND HEAD B-TIGHT SCREW	3x8　MFZN2B3	CTB3+8JFZR		バインドＢタイトネジ	
*	56	AAX81570	BIND HEAD P-TIGHT SCREW	2.6x8　MFZN2B3	CTB2.6+8GFZR		バインドＰタイトネジ	
*	57	AAX80700	SPECIAL SCREW		CHD1A055R	G	特殊ネジ	
			ACCESSORIES				付属品	
*	200	AAX81760	REMOTE CONTROL	DVD-15	CARTDVDS2700		リモコン	
* ⚠	202	AAX81790	POWER CABLE	2m　1pc	CJA2J076Z	J	電源コード	
* ⚠	202	AAX81770	POWER CABLE	2m　1pc	CJA2A070Z	U	電源コード	
* ⚠	202	AAX81800	POWER CABLE	2m　1pc	CJA2N075Z	T	電源コード	
* ⚠	202	AAX81810	POWER CABLE	2m　1pc	HJA2S084Z	A	電源コード	
* ⚠	202	AAX81780	POWER CABLE	2m　1pc	CJA2B054Z	G	電源コード	
			BATTERY	R03 2pcs			単４乾電池	

＊New Parts　＊新規部品

■ REMOTE CONTROL

- **SCHEMATIC DIAGRAM**

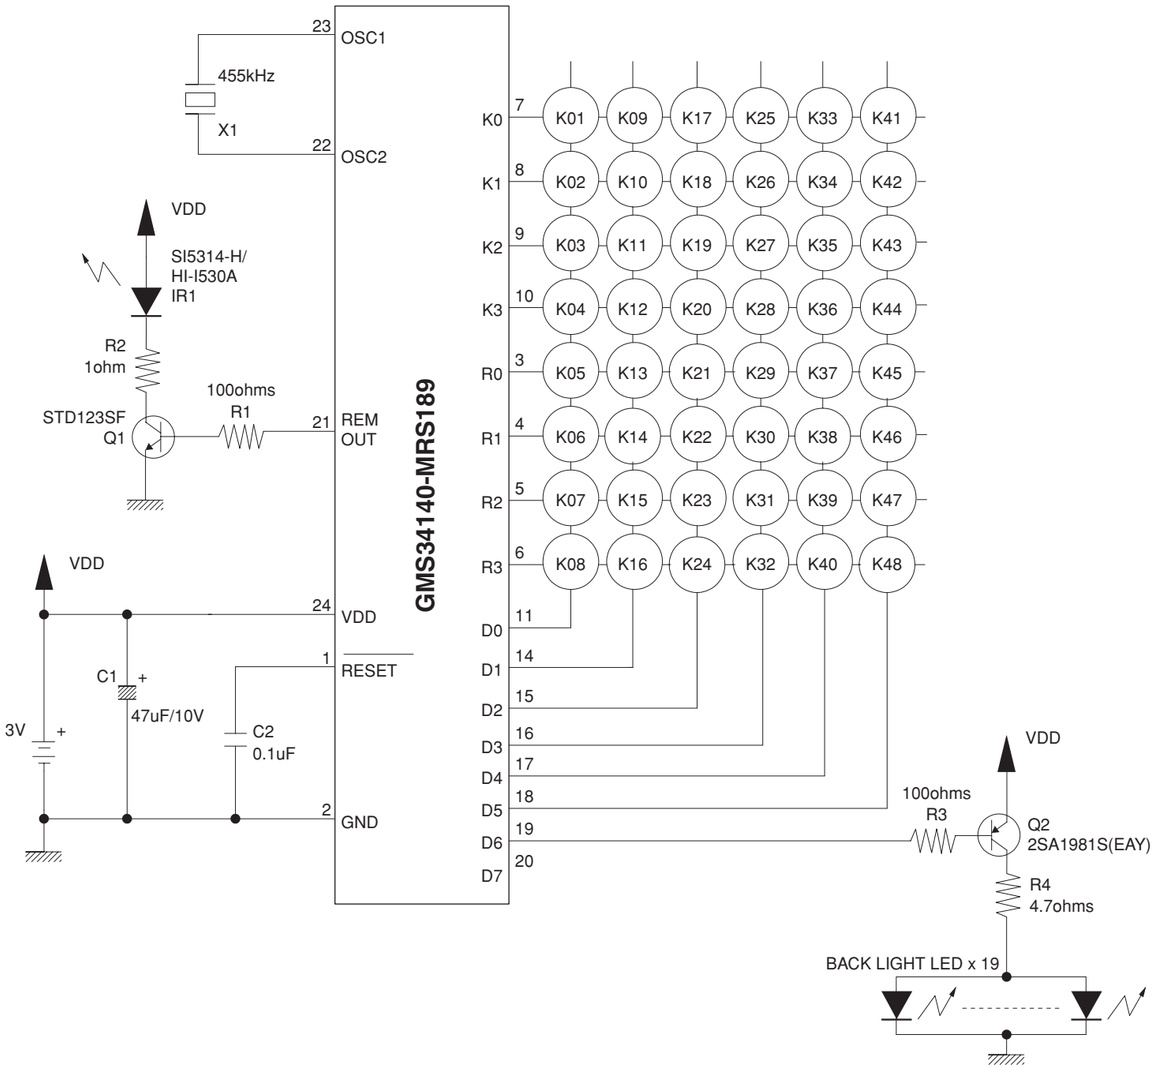

- **PANEL**

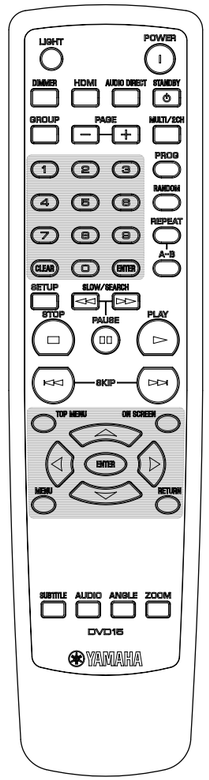

- **KEY NO. LAYOUT**

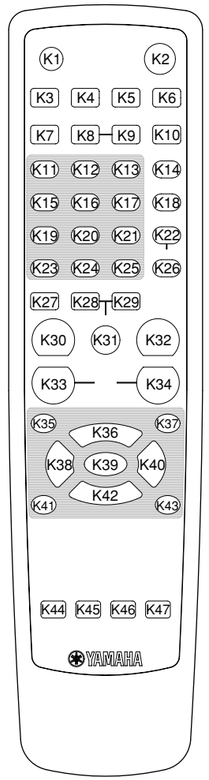

- **KEY CODE**

Key no.	Function	Custom code
K1	LIGHT	–
K2	POWER	7C-F6
K3	DIMMER	7C-A9
K4	HDMI	7C-E5
K5	AUDIO DIRECT	7C-D9
K6	STANDBY	7C-F7
K7	GROUP	7C-DD
K8	PAGE-	7C-DE
K9	PAGE+	7C-DF
K10	MULTI/2CH	7C-E1
K11	1	7C-94
K12	2	7C-95
K13	3	7C-96
K14	PROG	7C-A0
K15	4	7C-97
K16	5	7C-98
K17	6	7C-99
K18	RANDOM	7C-A1
K19	7	7C-9A
K20	8	7C-9B
K21	9	7C-9C
K22	REPEAT	7C-A3
K23	CLEAR	7C-9F
K24	0	7C-93
K25	ENTER	7C-B8
K26	A-B	7C-A4
K27	SETUP	7C-AC
K28	SLOW/SEARCH ◀◀	7C-86
K29	SLOW/SEARCH ▶▶	7C-87
K30	STOP ■	7C-85
K31	PAUSE ▮▮	7C-83
K32	PLAY ▶	7C-82
K33	SKIP ⏮	7C-B9
K34	SKIP ⏭	7C-BA
K35	TOP MENU	7C-B1
K36	▲	7C-B4
K37	ON SCREEN	7C-A6
K38	◀	7C-B5
K39	ENTER	7C-B8
K40	▶	7C-B6
K41	MENU	7C-B2
K42	▼	7C-B3
K43	RETURN	7C-B7
K44	SUBTITLE	7C-AA
K45	AUDIO	7C-AD
K46	ANGLE	7C-AE
K47	ZOOM	7C-D7

MEMO

DVD-S2700

YAMAHA